

- Manuals.plus /
- > CROWN SHADES /
 - > CROWN SHADES 10x10 Pop Up Canopy Tent Instruction Manual (Model RS100C)

CROWN SHADES RS100C

CROWN SHADES 10x10 Pop Up Canopy Tent Instruction Manual

Model: RS100C

			Introduction	Safety Information	What's	
Included	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

Thank you for choosing the CROWN SHADES 10x10 Pop Up Canopy Tent. This manual provides essential instructions for the safe and efficient assembly, operation, and maintenance of your canopy. Please read this manual thoroughly before use and retain it for future reference.

This 10x10 foot canopy offers 100 square feet of shade, featuring a patented CENTERLOK one-push instant setup mechanism. It is designed for outdoor use, providing UPF 50+ UV protection and water-resistant properties, making it suitable for various activities such as camping, beach outings, and outdoor events.



Image: The CROWN SHADES 10x10 Pop Up Canopy Tent, fully assembled in a pink color, providing shade outdoors.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- **Wind Conditions:** Always exercise caution when using the portable shelter in windy conditions. Ensure the canopy is properly anchored using the provided stakes and sandbags. High winds can cause the canopy to lift or collapse, leading to damage or injury.
- **Fire Hazards:** Keep the canopy away from open flames and heat sources. The fabric is flame-resistant (CPAI-84) but not fireproof.
- **UV Protection:** The silver-coated interior provides UPF 50+ UV protection. However, prolonged exposure to direct sunlight should still be limited.
- **Assembly:** While designed for easy setup, it is recommended that two people assemble the canopy to ensure stability and prevent pinching or injury.
- **Stability:** Always use the included guy ropes, stakes, and sandbags to secure the canopy to the ground, especially

during outdoor use.

3. WHAT'S INCLUDED

Before assembly, please verify that all components listed below are present in your package:

- 1x Steel Frame
- 1x Cover Bag (STO-N-GO Bag)
- 1x Canopy Top (150D fabric)
- 4x Guy Ropes
- 4x Empty Sandbags
- 1x Repair Patch
- 8x Spikes (Stakes)
- 1x Hexagon Spanner

PACKING LIST



1x Steel Frame




1x Cover Bag



4x Guy Ropes



4 x Empty Sandbags

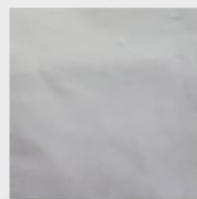

1x Repair Patch



8 x Spikes+
1 x Hexagon Spanner



1x Canopy Top

Image: Visual representation of the packing list, showing the steel frame, cover bag, canopy top, guy ropes, sandbags, repair patch, spikes, and hexagon spanner.

4. SETUP INSTRUCTIONS

The CROWN SHADES 10x10 Pop Up Canopy Tent features a patented CENTERLOK one-push system for quick and easy assembly. While one person can set it up, two people are recommended for optimal ease and safety.

Step-by-Step Assembly:

1. **Unpack the Frame:** Remove the steel frame from the STO-N-GO cover bag. The bag is designed with wheels for easy transport.
2. **Expand the Frame:** With a person on each side, gently pull the frame outwards to partially expand it. Do not fully extend the legs yet.
3. **Attach the Canopy Top:** Drape the canopy fabric over the partially expanded frame. Ensure the corners of the canopy align with the frame's corners. Secure the canopy to the frame using the hook-and-loop fasteners.
4. **Engage CENTERLOK:** Go inside the canopy and locate the central hub. Push upwards on the CENTERLOK mechanism until it clicks into place, locking the poles securely.
5. **Extend the Legs:** Extend each leg of the canopy by pressing the soft, pinch-free buttons and sliding the inner leg section downwards until it locks into one of the three adjustable height settings.
6. **Secure the Canopy:** Fill the provided sandbags with sand or other heavy material and attach them to the canopy legs. Use the guy ropes and stakes to anchor the canopy firmly to the ground, especially in windy conditions.



CENTERLOK[®]

1 Person assembly in 1 minute or less!

Image: A hand pressing the CENTERLOK button, illustrating the one-push assembly feature.



Image: Detailed view showing the hook-and-loop fasteners for securing the canopy fabric to the frame, the silver-coated fabric, and the sturdy frame structure.

5. OPERATION

Adjusting Height:

The canopy offers three adjustable height settings. To adjust, press the red pinch-free buttons located on each leg and slide the inner leg section up or down to your desired height. Ensure all four legs are locked at the same height for stability.

Transport and Storage (STO-N-GO Bag):

The included STO-N-GO bag is designed for convenient transport and storage. It features wheels, allowing you to easily roll the folded canopy frame to and from your desired location. When packing, ensure the frame is fully collapsed and secured within the bag.



Image: A close-up of the wheel integrated into the canopy leg, highlighting the STO-N-GO feature for easy mobility.

6. MAINTENANCE

Cleaning:

- Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners, as these can damage the fabric's water-resistant coating and UV protection.
- Rinse thoroughly and allow the fabric to air dry completely before folding and storing to prevent mildew.
- Wipe down the steel frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before storage to prevent rust.

Storage:

- Store the canopy in its STO-N-GO bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- Ensure the canopy is completely dry before storage to prevent mold and mildew growth.

Repairs:


A repair patch is included for minor tears or punctures in the canopy fabric. For larger damage or frame issues, please contact CROWN SHADES customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy is unstable or wobbles.	Not properly anchored; legs not fully extended/locked; uneven ground.	Ensure all legs are fully extended and locked at the same height. Use stakes, guy ropes, and sandbags to secure the canopy. Set up on level ground.
Water pooling on the canopy top.	Canopy not taut; improper setup.	Ensure the canopy fabric is stretched tightly over the frame. The upgraded high peak design helps rainwater run off, but proper setup is crucial.
Difficulty with CENTERLOK mechanism.	Mechanism not aligned or obstructed.	Ensure the frame is partially expanded and the canopy fabric is not obstructing the central hub. Apply firm, even pressure to the CENTERLOK button.
Legs are difficult to adjust.	Buttons are stuck or frame is under tension.	Ensure the frame is not under excessive tension. Press the pinch-free buttons firmly. If dirt is present, clean the leg mechanisms.

8. SPECIFICATIONS

- **Brand:** CROWN SHADES
- **Model Number:** RS100C
- **Color:** Pink
- **Size:** 10x10 Adjustable
- **Canopy Footprint:** 10' x 10'
- **Shade Area:** 100 square feet
- **Max Interior Height:** Over 9 feet
- **Max Clearance Under Valance:** Over 6 feet
- **Packed Dimensions:** 45" x 8.5" x 8.5"
- **Item Weight:** 36 pounds
- **Canopy Fabric:** 150D, Silver-coated interior
- **UV Protection:** UPF 50+
- **Water Resistance Level:** Water Resistant
- **Flame Resistance:** CPAI-84 compliant
- **Frame Material:** High-grade, corrosion-resistant Alloy Steel
- **Recommended Uses:** Outdoor Activities, Beach, Party, Camping, Picnic

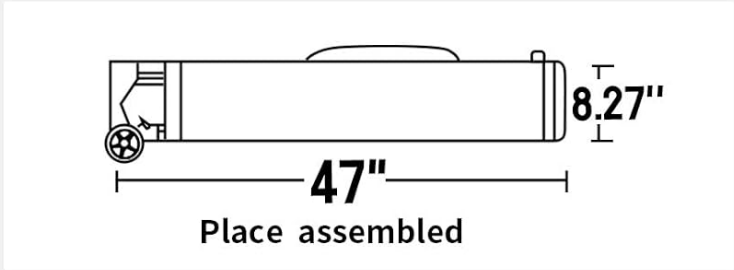

Item Weight 35.52lbs

Image: Diagram showing the 10x10 foot dimensions, adjustable height levels, and packed dimensions of the canopy, along with its item weight.



Image: Visual representation highlighting the UPF 50+ UV protection and water-resistant qualities of the canopy fabric.

VENTED TOP



Image: Close-up of the vented top of the canopy, designed to enhance airflow and reduce wind pressure.

9. WARRANTY & SUPPORT

2-Year Parts Replacement Warranty:

This CROWN SHADES product is backed by a 2-year parts replacement warranty. This warranty covers manufacturer defects. If any component included with your product is not functioning as intended due to a manufacturing defect, our support team will provide the necessary replacement part along with clear instructions for repair.

Customer Support:

For warranty claims, technical assistance, or any questions regarding your CROWN SHADES 10x10 Pop Up Canopy Tent, please contact our customer support team. Refer to the product packaging or the official CROWN SHADES website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D22PWFJW>

More documents and user manuals: <https://manuals.plus/>