



Manuals.plus /

› Whirlpool /

› Whirlpool Dishwasher Pusher 483286008921 Instruction Manual

## Whirlpool 483286008921

# Whirlpool Dishwasher Pusher 483286008921 Instruction Manual

Model: 483286008921

[Introduction](#)

[Product Overview](#)

[Setup](#)

[Maintenance  
Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

## INTRODUCTION

---

This manual provides essential instructions for the installation, maintenance, and troubleshooting of the Whirlpool Dishwasher Pusher, part number 483286008921. This component is an original manufacturer spare part designed for specific Whirlpool dishwasher models. Please read these instructions carefully before proceeding with installation or maintenance.

**Important Safety Information:** Always disconnect power to the dishwasher before attempting any installation or maintenance. Wear appropriate personal protective equipment, such as gloves, if necessary. If you are unsure about any step, consult a qualified technician.

## PRODUCT OVERVIEW

---



Image: Whirlpool Dishwasher Pusher, part number 483286008921. This image shows the replacement part, typically a small plastic or metal component designed to interact with other dishwasher mechanisms.

The Whirlpool Dishwasher Pusher 483286008921 is a critical component for the proper functioning of your dishwasher. It is designed to ensure smooth operation of internal mechanisms, such as spray arms or detergent dispenser doors, depending on the specific dishwasher model it is installed in. This part is an exact replacement for the original component.

## SETUP AND INSTALLATION

---

### Tools Required:

- Screwdriver (Phillips or flathead, depending on dishwasher model)
- Pliers (optional, for stubborn connections)
- Work gloves (recommended)

### Installation Steps:

1. **Disconnect Power:** Before beginning, ensure the dishwasher is completely disconnected from the power supply. Turn off the circuit breaker for the dishwasher.

2. **Access the Component:** Depending on your specific Whirlpool dishwasher model, you may need to remove the lower spray arm, racks, or access panels to reach the pusher component. Refer to your dishwasher's specific service manual for detailed access instructions.
3. **Remove Old Pusher:** Carefully detach the old pusher. This may involve unscrewing it, unlatching it, gently prying it off, or twisting it. Note its orientation and how it connects to other parts.
4. **Install New Pusher:** Align the new Whirlpool Pusher 483286008921 with the mounting points. Ensure it is correctly oriented. Secure it in place using the original screws or clips.
5. **Reassemble Dishwasher:** Reattach any removed spray arms, racks, or access panels. Ensure all connections are secure.
6. **Restore Power:** Once reassembly is complete, restore power to the dishwasher by turning on the circuit breaker.
7. **Test Functionality:** Run a short cycle to confirm the new pusher is functioning correctly and that there are no leaks or operational issues.

## MAINTENANCE

The Whirlpool Dishwasher Pusher 483286008921 is designed for durability and typically requires minimal maintenance. However, regular inspection can prolong its lifespan and ensure optimal dishwasher performance.

- **Visual Inspection:** Periodically inspect the pusher for signs of wear, cracks, or damage. If the pusher appears worn or broken, it should be replaced.
- **Cleaning:** If accessible, gently clean any debris or food particles that may accumulate around the pusher mechanism. Use a soft brush or cloth and mild detergent if necessary. Ensure no cleaning agents are left behind.
- **Lubrication:** This part typically does not require lubrication. Do not apply lubricants unless specifically instructed by Whirlpool service documentation for your dishwasher model.

## TROUBLESHOOTING

If you experience issues after installing the new pusher, consider the following:

Problem	Possible Cause	Solution
Pusher not moving freely	Incorrect installation, obstruction, or part misalignment.	<p>Recheck installation steps to ensure correct alignment.</p> <p>Inspect for any foreign objects obstructing movement.</p>
Dishwasher not operating correctly after replacement	Pusher not fully engaged, or other components were disturbed during installation.	<p>Ensure the pusher is securely attached and fully engaged with its corresponding mechanism.</p> <p>Verify all other components (e.g., spray arms, racks) are correctly reinstalled.</p> <p>If issues persist, consult a qualified technician.</p>

## SPECIFICATIONS

- **Part Number:** 483286008921
- **Brand:** Whirlpool
- **Type:** Dishwasher Pusher (Original Manufacturer Spare Part)
- **Compatibility:** Compatible with various Whirlpool dishwasher models, including but not limited to:

- ADN 401 - 854440101000
- ADN 408/1 - 854440801010
- ADN 408/2 - 854440801020
- ADN 408/3 - 854440801030
- ADN 409 - 854440901000 / 854440901001
- ADN408 - 854440801000 / 854440801001
- AGB 641/WP - 851264101000
- AGB 642 - 851264201000
- *(Refer to your dishwasher's service manual for complete compatibility)*

## **WARRANTY AND SUPPORT**

---

As an original manufacturer spare part, this Whirlpool Pusher 483286008921 is typically covered by Whirlpool's standard spare parts warranty. Warranty terms can vary by region and purchase date. Please retain your proof of purchase.

### **For Warranty Claims and Technical Support:**

- Visit the official Whirlpool Support Website for your region.
- Contact Whirlpool Customer Service directly. Contact details can usually be found on the Whirlpool website or in your dishwasher's original user manual.
- When contacting support, please have your dishwasher's model and serial number, as well as the part number (483286008921), ready.

