

ELECTROPRIME Zealot S30

ELECTROPRIME Zealot S30 Portable Bluetooth Speaker User Manual

Model: Zealot S30 (IP7G8266R)

INTRODUCTION

Thank you for choosing the ELECTROPRIME Zealot S30 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Figure 1: Front view of the ELECTROPRIME Zealot S30 Portable Bluetooth Speaker, showcasing its red finish and integrated leather carrying strap.

The Zealot S30 is a versatile portable speaker designed for high-quality audio on the go. Key features include:

- **Portable Design:** Equipped with a durable leather hand strap for easy carrying.
- **Superior Sound:** Features subwoofer dual speakers for stereo surround sound with heavy bass.

- **Multiple Playback Options:** Supports Bluetooth 5.0, TF card playback, and AUX audio input for wired connections.
- **Hands-Free Calling:** Built-in sensitive microphone with intelligent noise reduction for clear calls.
- **Long Battery Life:** Integrated 1800mAh battery provides extended music playback and standby time.

PACKAGE CONTENTS

Please check the package for the following items:

- ELECTROPRIME Zealot S30 Portable Bluetooth Speaker
- Micro USB Charging Cable
- AUX Audio Cable (if included, check packaging)
- User Manual (this document)



Figure 2: The retail packaging for the Zealot S30 speaker, indicating its "Outdoor Wireless Speaker" designation.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Use the provided Micro USB cable to connect the speaker's charging port to a DC5V power source (e.g., a USB wall adapter or computer USB port).

- **Charging Port:** Micro USB
- **Charging Voltage:** DC5V
- **Charging Time:** Approximately 2.5 hours (may vary with charger specifications).

The charging indicator light will typically turn off or change color once charging is complete.

2. Powering On/Off

Locate the power button on the speaker. Press and hold the power button for a few seconds to turn the speaker **on** or **off**. A voice prompt or indicator light will confirm the status.

3. Bluetooth Pairing

To connect your speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in Bluetooth pairing mode (usually indicated by a flashing blue LED).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Zealot S30" from the list of found devices.
4. Once connected, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.

The effective transmission distance for Bluetooth is approximately 10 meters (33 feet) without obstacles.

4. AUX Audio Input

For wired connection, use a 3.5mm AUX audio cable (not always included) to connect the speaker's AUX port to the audio output of your device. The speaker will automatically switch to AUX mode.

5. TF Card Playback

Insert a TF (Micro SD) card with pre-loaded audio files into the designated TF card slot on the speaker. The speaker will automatically detect the card and begin playing music. This mode does not require a Bluetooth connection.

OPERATING INSTRUCTIONS



Figure 3: Top view of the Zealot S30 speaker, highlighting the control panel with buttons for playback and mode selection.

The Zealot S30 speaker features intuitive controls located on its top panel. While specific button functions may vary slightly, common operations include:

- **Play/Pause:** Press the **Play/Pause** button to start or pause music playback.
- **Volume Control:** Use the **Volume Up (+)** and **Volume Down (-)** buttons to adjust the audio level.
- **Next/Previous Track:** Long press or short press the **Volume Up (+)** or **Volume Down (-)** buttons to skip to the next or previous track, respectively.
- **Mode Button (M):** Press the **Mode** button to switch between Bluetooth, TF Card, and AUX input modes.
- **Hands-Free Calling:**
 - **Answer/End Call:** Press the **Play/Pause** button to answer an incoming call or end an ongoing call.
 - **Reject Call:** Press and hold the **Play/Pause** button to reject an incoming call.
 - **Redial:** Double-press the **Play/Pause** button to redial the last number.

The built-in microphone with intelligent noise reduction ensures clear communication during hands-free calls.

MAINTENANCE

Proper care will extend the life of your ELECTROPRIME Zealot S30 speaker.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, alcohol, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:**
 - Avoid fully discharging the battery frequently.
 - If storing for a long period, charge the battery to about 50% every few months to prevent deep discharge.
 - Do not expose the battery to excessive heat or cold.
- **Water Resistance:** This speaker is not specified as water-resistant. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
No sound from speaker.	Volume too low; incorrect mode; device not connected.	Increase speaker and device volume. Ensure correct mode (Bluetooth/AUX/TF Card). Re-pair Bluetooth or check AUX cable connection.
Bluetooth connection unstable or fails.	Speaker too far from device; interference; device Bluetooth issue.	Move speaker closer to device (within 10m). Avoid obstacles. Turn off and on Bluetooth on both devices. Forget and re-pair "Zealot S30" on your device.
TF card not playing.	Card not inserted correctly; unsupported file format; corrupted card.	Reinsert TF card. Ensure audio files are in a supported format (e.g., MP3). Try a different TF card.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	ELECTROPRIME
Model Name	Zealot S30
Model Number	IP7G8266R
Bluetooth Version	V5.0
Speaker Output	4 ohm 5W x2 (Dual Speakers)
Transmission Distance	Approximately 10m
Frequency Response	20Hz-20KHz
Signal to Noise Ratio	90dB

Feature	Detail
Working Voltage	3.7V
Charging Voltage	DC5V
Charging Port	Micro USB
Battery Capacity	1800mAh
Talk Time	Approximately 3 hours
Music Playback Time	Approximately 3.5 hours
Standby Time	Approximately 30 days
Charging Time	Approximately 2.5 hours
Dimensions (L x W x H)	198mm x 80mm x 90mm
Compatible Devices	Smartphone, Tablet
Special Features	Bluetooth, Portable, Wireless, Built-in Mic
Audio Output Mode	Stereo
Power Source	Battery Powered
Connector Type	Auxiliary, Bluetooth, USB
Mounting Type	Tabletop

WARRANTY AND SUPPORT

ELECTROPRIME products are designed for reliability and performance. For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or visit the official ELECTROPRIME website.

For technical assistance or inquiries, please contact ELECTROPRIME customer service. Keep your purchase receipt and model number (Zealot S30 / IP7G8266R) ready when contacting support.

Manufacturer: ELECTROGADGETSSTORE

Related Documents - Zealot S30

--	--



Comprehensive guide for the Zealot S53 Bluetooth speaker, covering setup, features like Bluetooth pairing, wireless stereo pairing, IPX6 waterproofing, and detailed technical specifications. Includes safety precautions and multilingual instructions.



[ZEALOT S51 Portable Bluetooth Speaker User Manual](#)

Comprehensive user manual for the ZEALOT S51 portable Bluetooth speaker, detailing specifications, operations, TWS connection, charging, precautions, and FCC compliance. Includes multilingual instructions.



 
S30 Piezo Tip/Tilt Platform User Manual

Version: V1.0



This document describes the following products:

- S30.T1K
- S30.T2K
- S30.T2S



[S30 Piezo Tip/Tilt Platform User Manual - CoreMorrow](#)

User manual for the CoreMorrow S30 Piezo Tip/Tilt Platform, detailing its features, principle of operation, installation, operation, maintenance, and safety guidelines. Includes product specifications for S30.T1K, S30.T2K, and S30.T2S models.

MSR: 10495858, 1027777540
R10: 10495858, 1027777540, 1027777540



[ZEALOT S79 Portable Bluetooth Speaker User Manual and Specifications](#)

Detailed user manual and technical specifications for the ZEALOT S79 100W portable Bluetooth speaker, covering setup, features, safety warnings, and regulatory information.

MSR: 10495858, 1027777540
R10: 10495858, 1027777540, 1027777540



[ZEALOT-S32 Pro Wireless Speaker: Quick Start Guide and Specifications](#)

Get started with your ZEALOT-S32 Pro wireless speaker. This guide covers packing contents, basic operations like power, Bluetooth pairing, light modes, and technical specifications. Learn how to use your portable HIFI stereo speaker safely and effectively.