



Manuals.plus /

› Aquasonic /

› AquaSonic Water Flosser Instruction Manual

Aquasonic ASFLOSGRN

AquaSonic Water Flosser Instruction Manual

Model: ASFLOSGRN | Brand: Aquasonic

1. INTRODUCTION

The AquaSonic Water Flosser is a cordless, rechargeable oral irrigator designed for effective teeth cleaning and gum health. It utilizes targeted water jets to remove food particles and plaque, offering a convenient alternative to traditional string floss. This manual provides detailed instructions for the setup, operation, and maintenance of your AquaSonic Water Flosser.

2. PRODUCT COMPONENTS



Image: The AquaSonic Water Flosser unit, its packaging, and included accessories, including various jet tips and a travel bag.

Your AquaSonic Water Flosser package includes the following items:

- AquaSonic Water Flosser Unit
- Charging Cable (USB)
- Travel Bag
- Interchangeable Jet Tips:
 - 2 Standard Tips: For general cleaning between teeth and along the gumline.
 - 1 Periodontal Tip: Features a soft, rubberized tip for gently cleaning deep pockets below the gumline.
 - 1 Orthodontic Tip: Features soft bristles for dislodging plaque and debris from braces and dental work.
 - 1 Tongue Scraper Tip: Ideally shaped to clean the tongue for fresher breath.

Exceptional Value

Soft-Touch Travel Bag

2 Standard Tips
1 Periodontal Tip
1 Orthodontic Tip
1 Tongue Scraper Tip



Image: A close-up view of the five interchangeable jet tips and the soft-touch travel bag included with the AquaSonic Water Flosser.

4 Types of Tips

An illustration showing four different types of white water flosser tips against a dark teal background. The tips are arranged diagonally from top-left to bottom-right. The top tip is a standard jet tip with a fine stream of water emerging. The second tip has a textured, bristled end. The third tip has a rounded, rubberized tip. The bottom tip is a tongue scraper with a flat, spoon-like end.

Standard Tip

creates an ultra-fine jet stream for cleaning between teeth and along the gumline

Orthodontic Tip

features soft bristles for dislodging plaque and debris from braces and dental work

Periodontal Tip

features a soft, rubberized tip for gently cleaning deep pockets below the gumline

Tongue Scraper Tip

is ideally shaped to clean the tongue

Image: An illustration detailing the four types of tips: Standard, Orthodontic, Periodontal, and Tongue Scraper, highlighting their specific uses.

3. SETUP

1. **Charge the Device:** Before first use, fully charge the AquaSonic Water Flosser overnight using the provided USB charging cable. The device is rechargeable and not battery-operated by disposable batteries.
2. **Attach a Tip:** Select the desired jet tip and firmly insert it into the opening at the top of the flosser unit until it clicks into place. To remove, press the release button on the side of the unit and pull the tip off.
3. **Fill the Water Reservoir:** Open the water reservoir cap located at the back of the unit. Fill the reservoir with lukewarm water. Ensure the cap is securely closed before use.

Advanced Design

Ultra-Fine Water Stream with **FreshJet Technology**

360° Rotating Nozzle

Easy-to-Fill
Water Tank

3 Flossing
Modes

Rechargeable
Built-in Battery



Image: The AquaSonic Water Flosser highlighting its easy-to-fill water tank and 360-degree rotating nozzle for comprehensive cleaning.

4. OPERATING INSTRUCTIONS

The AquaSonic Water Flosser features three flossing modes for customized cleaning:

- **Normal Mode:** Provides a standard, powerful clean for everyday use.
- **Soft Mode:** Offers a gentle stream, ideal for sensitive teeth and gums.
- **Pulse Mode:** Delivers pulsating water to massage gums and improve circulation.

3 Custom Modes

Normal

standard cleaning

Soft

gentle mode for sensitive teeth & gums

Pulse

massages gums



Image: A detailed view of the control panel on the AquaSonic Water Flosser, showing the On/Off button and the Mode button with indicators for Normal, Soft, and Pulse settings.

Usage Steps:

1. **Select Mode:** Press the "Mode" button to cycle through the available flossing modes (Normal, Soft, Pulse) until your desired setting is selected.
2. **Position the Tip:** Lean over a sink and place the jet tip into your mouth, aiming it at the gum line. It is crucial to have the tip inside your mouth before turning the device on to prevent splashing.
3. **Start Flossing:** Press the "On/Off" button to begin flossing.
4. **Clean Thoroughly:** Guide the water jet along your gum line and between your teeth. The 360-degree rotating tips allow for comprehensive cleaning, especially beneficial for those with braces or dental work.
5. **Refill if Needed:** The water reservoir may require refilling during a full cleaning session due to its portable size. Turn off the device, refill the reservoir, and continue flossing.
6. **Rinse:** After flossing, rinse your mouth as usual.

Flossing Made Easy



AquaSonic

Portable
Waterproof
Lightweight
Easy to Use

Image: A user demonstrating the AquaSonic Water Flosser, highlighting its portable, waterproof, lightweight, and easy-to-use design.

Cleans Faster & Better than String Floss

While Also Being Gentler on Teeth & Gums



Image: An illustrative close-up showing the water flosser jet effectively cleaning between teeth and along the gumline, demonstrating its plaque removal capabilities.

5. MAINTENANCE

Regular cleaning of your AquaSonic Water Flosser is essential for optimal performance and hygiene:

- **Empty and Dry:** After each use, empty any remaining water from the reservoir and allow the unit to air dry.
- **Clean Reservoir:** Periodically clean the water reservoir with warm, soapy water. Rinse thoroughly.
- **Clean Tips:** Rinse the jet tips under running water after each use. For a deeper clean, tips can be soaked in a denture cleaning solution or a mixture of water and white vinegar.
- **Wipe Down Unit:** Wipe the exterior of the flosser unit with a soft, damp cloth.

6. TROUBLESHOOTING

If you encounter any issues with your AquaSonic Water Flosser, consider the following common solutions:

- **No Water Flow:**

- Ensure the water reservoir is filled and securely attached.
- Check if the jet tip is properly inserted.
- Verify the device is charged.

- **Weak Water Pressure:**

- Ensure the device is fully charged.
- Check for any blockages in the jet tip or the internal tubing. Clean the tip thoroughly.
- Confirm the selected mode is appropriate for desired pressure (e.g., Normal mode for stronger pressure).

- **Device Not Turning On:**

- Ensure the device is fully charged.
- Press and hold the On/Off button for a few seconds.

If problems persist, please contact Aquasonic customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.98 x 2.6 x 8.07 inches
Item Weight	15.17 ounces
Model Number	ASFLOSGRN
Power Source	Rechargeable Lithium Ion Battery (included)
Special Features	Cordless, Portable, Rechargeable, Waterproof
Product Benefits	Prevents Bad Breath, Removes Plaque, Gum Health
Unit Count	1.00 Count

8. SAFETY INFORMATION

Please read and understand all safety precautions before using this device.

Legal Disclaimer:

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

This product is intended for oral hygiene use only. Do not use for any other purpose. Keep out of reach of children.

9. WARRANTY AND SUPPORT

Aquasonic stands behind the quality of its products. For warranty information, technical support, or any inquiries regarding your AquaSonic Water Flosser, please visit the official Aquasonic website or contact their customer service department. Retain your purchase receipt for warranty claims.

