

[Manuals.plus](#) /

› [LEMEGA](#) /

› LEMEGA PR1L Pocket DAB/FM Radio User Manual

LEMEGA PR1L

LEMEGA PR1L Pocket DAB/FM Radio User Manual

1. INTRODUCTION

Thank you for choosing the LEMEGA PR1L Pocket DAB/FM Radio. This compact and portable digital radio allows you to enjoy a wide selection of DAB/DAB+ and FM radio stations with clear sound quality. Designed for on-the-go listening, it features a built-in rechargeable battery and a lockable switch for convenience during activities. This manual provides essential information for setting up, operating, and maintaining your device.

What's in the Box:

- LEMEGA PR1L Pocket DAB/FM Radio
- Wired Earphones (with integrated antenna)
- USB Charging Cable (Type-C, not explicitly mentioned but standard for rechargeable devices)
- Quick Start Guide
- User Manual (this document)

2. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your LEMEGA PR1L radio.



DAB /DAB+Radio



FM Radio



10 hours Battery



Lightweight(65g)



40 Presets



Lock Button

Image: LEMEGA PR1L Pocket DAB/FM Radio showing its compact size and dimensions (approximately 3.4 inches long, 1.9 inches wide, and 0.6 inches thick).

DAB, DAB+ & FM Radio

With easy set-up and quick auto-scanning, enjoy 20 favorite stations each for DAB/FM that you have preset.



Image: Front view of the LEMEGA PR1L radio displaying its LCD screen and control buttons. The buttons include SCAN, VOLUME+, VOLUME-, SELECT, PRESET, DAB/FM, and MENU/INFO. A headphone jack is visible on the side.

Control Buttons and Functions:

- **Power Button:** Press and hold to turn the radio on or off.
- **DAB/FM Button:** Switches between DAB/DAB+ and FM radio modes.
- **SCAN Button:** Initiates an automatic scan for available radio stations in the current mode.
- **VOLUME+ / VOLUME- Buttons:** Adjusts the audio volume level. In menu mode, these may navigate options.
- **SELECT Button:** Confirms selections in menu mode or tunes to a selected station.
- **PRESET Button:** Accesses saved preset stations. Press and hold to save a station.
- **MENU/INFO Button:** Accesses the menu settings or displays station information.
- **Lock Switch:** Located on the side, slides to lock or unlock the buttons to prevent accidental presses.

3. SETUP

3.1 Charging the Battery

The LEMEGA PR1L features a built-in 1000mAh rechargeable battery, providing over 12 hours of playback on a full charge.

1. Connect the supplied USB charging cable to the charging port on the radio.
2. Connect the other end of the USB cable to a powered USB port (e.g., computer, USB wall adapter).
3. The charging indicator on the radio will illuminate. It will turn off or change color once fully charged.

It is recommended to fully charge the radio before first use.

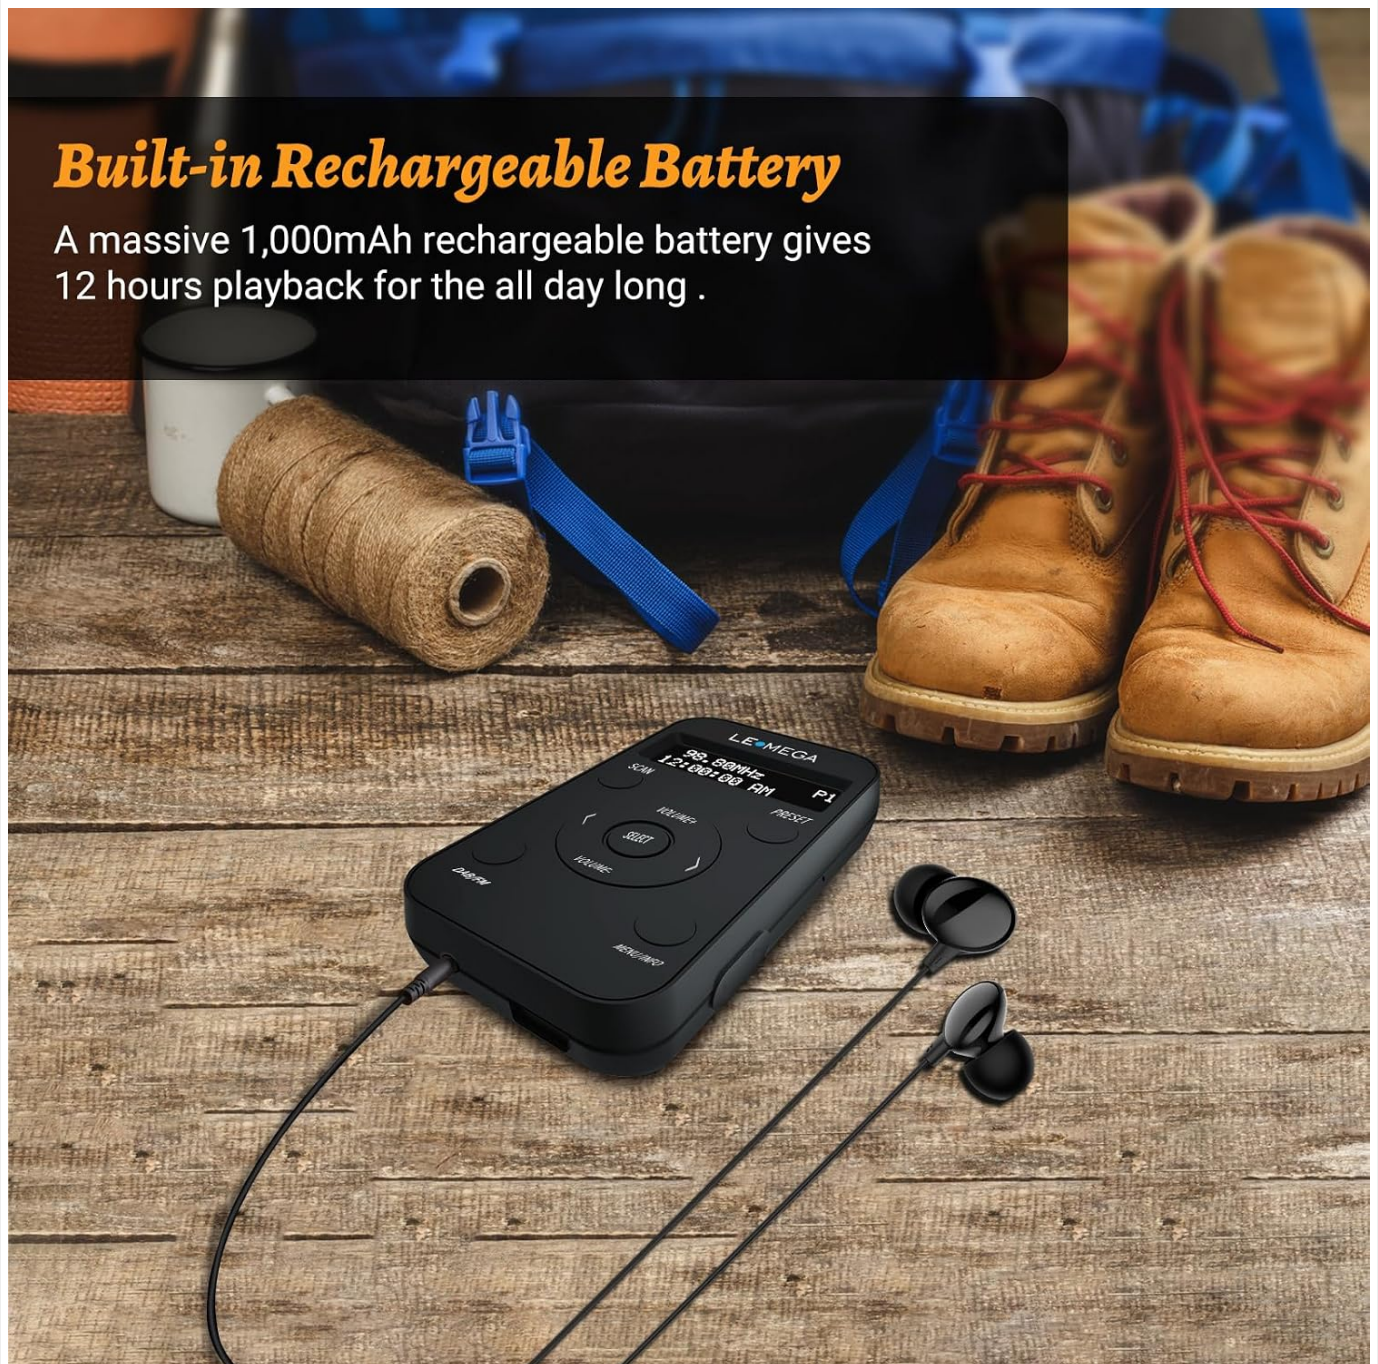


Image: The LEMEGA PR1L radio connected to a charging cable, illustrating its built-in rechargeable battery feature.

3.2 Connecting Earphones

The included earphones serve as the antenna for the radio. They must be connected for proper reception.

1. Insert the 3.5mm jack of the earphones into the headphone port on the side of the radio.
2. Ensure the connection is secure.

Important: Do not replace the included earphones with standard headphones if you experience poor reception, as the integrated antenna is crucial for signal quality.

Earphone connectivity

Enjoy your private audio with the provided earphone set.



Image: The LEMEGA PR1L radio with earphones plugged into its auxiliary port, demonstrating earphone connectivity.

3.3 Initial Power On and Station Scan

1. Press and hold the **Power Button** to turn on the radio.
2. The radio will typically start in DAB mode. If it's the first time, it may automatically initiate a full scan for DAB stations.
3. If a scan does not start automatically, press the **SCAN Button** to begin searching for available stations.
4. Once the scan is complete, the radio will list the found stations. Use the **VOLUME+ / VOLUME-** buttons to navigate through the list and **SELECT** to choose a station.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To turn the radio **ON**, press and hold the **Power Button** until the screen illuminates. To turn the radio **OFF**, press and hold the **Power Button** again until the screen turns off.

4.2 Switching Between DAB and FM Modes

Press the **DAB/FM Button** to toggle between DAB/DAB+ digital radio mode and FM analog radio mode.

4.3 Scanning for Stations

- In either DAB or FM mode, press the **SCAN Button** to perform an automatic scan for available stations.
- For DAB, the radio will scan all available DAB frequencies and create a list of stations.
- For FM, the radio will scan and stop at strong signals.

4.4 Tuning and Station Selection

- After a scan, use the **VOLUME+ / VOLUME-** buttons to scroll through the list of available stations.
- Press the **SELECT Button** to tune into the desired station.

4.5 Saving and Recalling Presets

The radio supports up to 40 presets (20 for DAB, 20 for FM).

To Save a Preset:

1. Tune to the desired station.
2. Press and hold the **PRESET Button**. The display will show a preset number (e.g., P1, P2).
3. Use the **VOLUME+ / VOLUME-** buttons to select the desired preset slot.
4. Press the **SELECT Button** to confirm and save the station to that preset slot.

To Recall a Preset:

1. Press the **PRESET Button** (do not hold).
2. Use the **VOLUME+ / VOLUME-** buttons to scroll through your saved presets.
3. Press the **SELECT Button** to tune to the selected preset station.

4.6 Adjusting Volume

Press the **VOLUME+ Button** to increase the volume and the **VOLUME- Button** to decrease the volume.

4.7 Using the Lock Function

The lock switch, located on the side of the radio, prevents accidental button presses. Slide the switch to the 'Lock' position to disable all buttons. Slide it back to the 'Unlock' position to enable button functionality.

Pocket Radio On-The-Go


Pocket size with lockable switch protect listening music no effected during sports.



Image: A user holding the LEMEGA PR1L radio while cycling, demonstrating its portability and the utility of the lockable switch during physical activity.

4.8 Display and Menu Options

The high-contrast LCD screen displays station information, time, and menu options. Press the **MENU/INFO Button** to access various settings, including display brightness. Use **VOLUME+ / VOLUME-** to navigate menu options and **SELECT** to confirm.

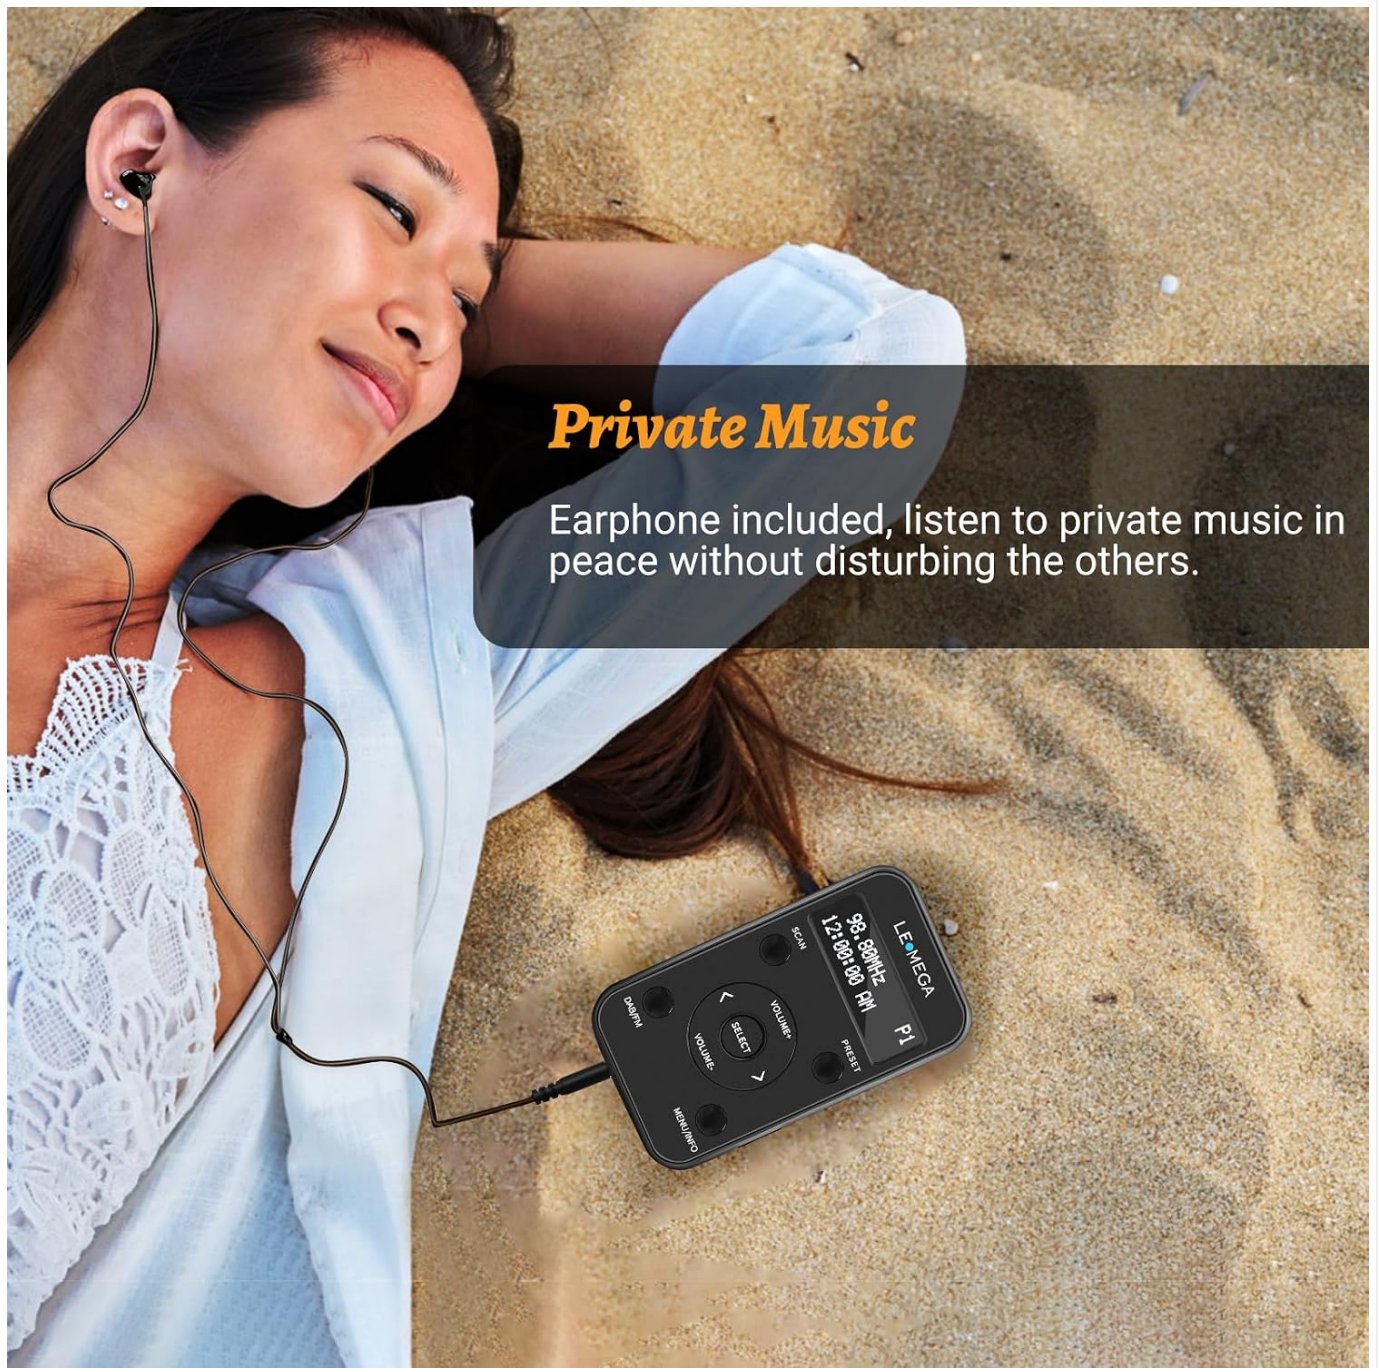

Private Music

Earphone included, listen to private music in peace without disturbing the others.

Image: A person relaxing on a beach, listening to the LEMEGA PR1L radio through earphones, highlighting its use for personal audio enjoyment.

5. MAINTENANCE

5.1 Cleaning

- Wipe the radio with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the surface.

5.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the radio regularly, even if not in use for extended periods.
- Store the radio in a cool, dry place when not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Radio won't turn on	Battery is depleted.	Charge the radio fully using the USB cable.
No DAB/FM reception or poor sound quality	Earphones not connected or improperly connected. Weak signal area.	Ensure earphones are securely plugged in. Re-scan for stations. Move to an area with better signal reception.
Buttons are unresponsive	Lock switch is engaged.	Slide the lock switch to the 'Unlock' position.
Cannot save presets	Incorrect procedure.	Ensure you are pressing and holding the PRESET button to initiate saving.
Short battery life	Battery not fully charged. Battery degradation over time.	Ensure the radio is fully charged. If battery life significantly decreases over time, it may be due to normal wear.

7. SPECIFICATIONS

Feature	Detail
Model Number	PR1L
Dimensions (L x W x H)	90mm x 51mm x 16mm (approx. 3.54 x 2.01 x 0.63 inches)
Weight	65g (approx. 2.29 oz)
Radio Bands Supported	DAB/DAB+, FM
Connectivity Technology	Auxiliary (for earphones)
Battery Capacity	1000mAh rechargeable
Playback Time	Over 12 hours (on full charge)
Presets	40 (20 DAB, 20 FM)
Display	High-contrast LCD with adjustable brightness
Special Features	Lightweight, Portable, Rechargeable, Lockable Switch
Included Components	Quick Start Guide, User Manual, Earphones

8. WARRANTY AND SUPPORT

Specific warranty information for the LEMEGA PR1L radio is not provided within the product details. For details regarding warranty coverage, returns, or technical support, please refer to the official LEMEGA website or contact your retailer directly.

Information regarding spare parts availability and guaranteed software updates is not available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D24ZG1M5>

More documents and user manuals: <https://manuals.plus/>