



Manuals.plus /

› easeking /

› Remote Controller for Galaxy Projector User Manual

easeking b676ca2d-0124-46bf-960d-295eb627725f

Remote Controller for Galaxy Projector User Manual

Model: b676ca2d-0124-46bf-960d-295eb627725f

PRODUCT OVERVIEW

This manual provides comprehensive instructions for the easeking Remote Controller, designed specifically for Galaxy Projectors. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

SETUP GUIDE

1. Battery Installation

The remote controller requires 2 AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the remote.
2. Slide open the battery cover.
3. Insert the batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

2. Pairing with Galaxy Projector

The easeking remote controller uses infrared (IR) technology. No complex pairing is required. Ensure a clear line of sight between the remote and the projector's IR receiver.

Please put the remote to signal receiver sources directly



This image illustrates the correct method for pointing the remote control directly at the signal receiver of the galaxy projector (left, marked with a green check) versus an incorrect method where the remote is not pointed directly (right, marked with a red X). The signal receiver on the projector is highlighted.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your easeking remote controller:



This image displays the front face of the easeking remote controller, showing all its buttons. Key buttons include power, color controls (R, G, B, W), mode selection, brightness adjustment, music control, and timer functions.

Power Button (⏻): Turns the projector ON or OFF.

Color Buttons (R, G, B, W): Selects Red, Green, Blue, or White light colors.

Brightness Adjustment (S+, S-): Increases or decreases the brightness of the projection.

Mode Button: Cycles through different projection modes (e.g., static, fading, flashing).

Music Button (MUSIC): Activates or deactivates music synchronization mode, where lights react to sound.

Timer Buttons (1H, 2H): Sets an automatic shut-off timer for 1 hour or 2 hours.

Volume Control (+, -): Adjusts the volume of any integrated speaker in the projector.

Track Control (,): Skips to the previous or next track if music is playing.

Play/Pause (): Plays or pauses music playback.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the remote controller. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or low batteries.	Replace batteries with new ones.
Remote not responding.	No clear line of sight to projector's IR receiver.	Ensure remote is pointed directly at the projector's IR receiver without obstructions.
Limited range.	Weak batteries or interference.	Replace batteries. Remove any potential sources of IR interference.

SPECIFICATIONS

Model: b676ca2d-0124-46bf-960d-295eb627725f

Brand: easeking

Connectivity Technology: Infrared (IR)

Compatible Devices: Galaxy Projectors

Power Source: 2 x AAA Batteries (not included)

Dimensions: 5.16 x 2.83 x 1.22 inches (approximate)

Weight: 2.08 ounces (approximate, without batteries)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your Galaxy Projector or contact easeking customer service directly through their official website or the retailer where the product was purchased.

Manufacturer: dawee