

[Manuals.plus](#) /

> [Seesii](#) /

> SEESII 6-in-1 Cordless Pole Saw & Hedge Trimmer Grass Shears Combo Kit User Manual

Seesii SH300

SEESII 6-in-1 Cordless Pole Saw & Hedge Trimmer Grass Shears Combo Kit

Model: SH300 | Brand: Seesii

PRODUCT OVERVIEW

The SEESII 6-in-1 Cordless Pole Saw & Hedge Trimmer Grass Shears Combo Kit is a versatile outdoor power tool designed for various garden and yard maintenance tasks. This all-in-one system includes a mini chainsaw, hedge trimmer, and grass shears, all powered by two 4000mAh batteries for extended operation. Its extendable pole allows for reaching high branches and hedges safely, eliminating the need for ladders in many situations. The tool features a high-performance motor system for clean and consistent results, an automatic oiling system for the chainsaw, and a quick-swap mechanism for effortless transitions between functions. Designed for ease of use and durability, it provides a lightweight yet powerful solution for comprehensive yard care.



Figure 1: Complete SEESII 6-in-1 Combo Kit showing the pole saw, hedge trimmer, grass shears, and two batteries.

Your browser does not support the video tag.

Video 1: Overview of the 6-in-1 versatility of the SEESII tool, demonstrating its various functions for garden tasks.

COMPONENTS INCLUDED

- Mini Chainsaw Attachment
- Hedge Trimmer Attachment
- Grass Shears Attachment
- Extendable Pole (6 to 9 feet)
- 2 x 4000mAh Lithium-Ion Batteries
- Battery Charger
- Safety Goggles
- Work Gloves
- Chainsaw Oil Bottle (empty)
- Additional Chainsaw Chain

- Blade Sheath
- Shoulder Strap

6-IN-1 Power Tool



Can be utilized independently,
without the necessity
of an extension pole

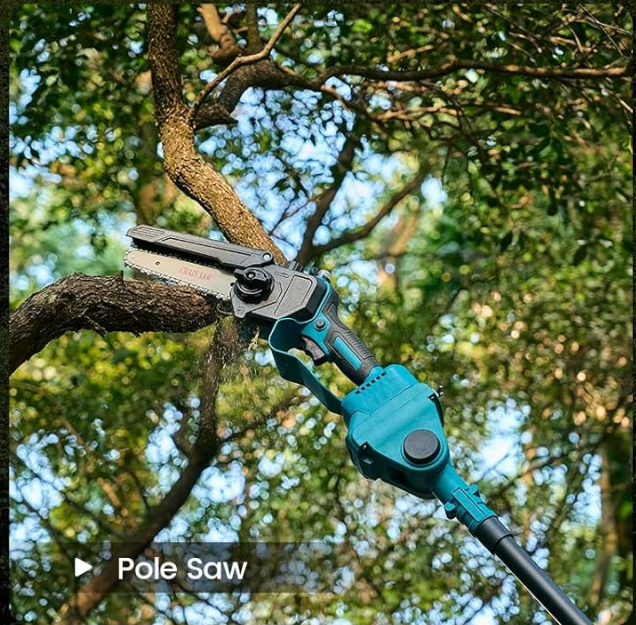


Figure 2: Detailed view of the various attachments: Pole Hedge Trimmer, Pole Saw, and Pole Grass Shear, highlighting their independent use.

SETUP GUIDE

1. Battery Charging and Installation

Before first use, fully charge both 4000mAh Lithium-Ion batteries using the provided charger. The battery indicator lights will show the charging status. Once charged, align the battery with the battery slot on the desired tool attachment (chainsaw, hedge trimmer, or grass shears) and slide it in until it clicks securely into place.

»»»
Up To 100 Minutes Uninterrupted
With Advanced **4000mAh *2 Batteries**



Figure 3: Two 4000mAh batteries with visible charge indicator lights, ready for use.

Your browser does not support the video tag.

Video 2: Demonstration of installing the battery into the tool, ensuring it is ready for operation.

2. Attaching Tool Heads to the Pole

To attach the hedge trimmer or chainsaw to the extendable pole:

1. Loosen the safety latch on the pole attachment point.
2. Align the tool head (hedge trimmer or chainsaw) with the groove on the pole.
3. Slide the tool head onto the pole until it is fully seated.
4. Push the iron piece upward and secure it with the safety latch to lock the tool head in place.



Figure 4: Visual instructions for inserting the hedge trimmer, securing the safety latch, and installing the battery onto the pole.

3. Adjusting the Telescopic Pole

The pole extends from 6 to 9 feet, providing a total reach of up to 16 feet when combined with the user's height. To adjust the length:

1. Unlock the cam lock on the pole.
2. Extend or retract the pole to your desired length.
3. Lock the cam lock securely to fix the pole in position.



Figure 5: User demonstrating the multi-angle adjustable extension pole, which offers 180° rotation and extends up to 15 feet.

Your browser does not support the video tag.

Video 3: Instructions on how to set up the pole for the hedge trimmer, including adjusting its length and angle.

4. Chainsaw Chain Tightness and Oiling

Ensure the chainsaw chain is properly tensioned before use. If the chain loosens during operation, adjust it as follows:

1. Loosen the nuts on the chain cover slightly.
2. Adjust the chain tension knob.
3. Ensure there is a 2-3 mm gap when lifting a link out of the bar.
4. Tighten the nuts on the chain cover securely.

The chainsaw features an automatic oiling system. Keep the oil reservoir filled with appropriate chainsaw oil. Press the oiling button every 5-6 cuts to ensure smooth operation and extend chain life.



Figure 6: Visual guide for adjusting the chainsaw chain tightness to ensure optimal performance.



Figure 7: Close-up of the chainsaw's automatic oiling button, recommended to press every 5-6 cuts.

OPERATING INSTRUCTIONS

General Safety Guidelines

- Always wear safety goggles and gloves when operating the tool.
- Ensure the work area is clear of bystanders, especially children and pets.
- Inspect the tool for any damage or loose parts before each use.
- Do not operate the tool in wet conditions or near flammable liquids/gases.
- Maintain a firm grip on the tool and be aware of your surroundings.

Using the Mini Chainsaw

The mini chainsaw is ideal for cutting through thick limbs and branches. It can be used handheld or attached to the extendable pole for higher reach.

- Ensure the chain is properly oiled and tensioned.
- Hold the chainsaw firmly with both hands (if handheld) or securely with the pole.
- Engage the safety button and pull the trigger to start cutting.
- Allow the saw to do the work; do not force it through the wood.

Little Workhorse ! Power at Your Fingertips



Figure 8: The mini chainsaw in action, demonstrating its cutting capability on a log.

Your browser does not support the video tag.

Video 4: Short clip showcasing the maximum power and rapid cutting ability of the chainsaw attachment.

Using the Hedge Trimmer

The hedge trimmer is perfect for shaping hedges and bushes. It can be used handheld for precision or with the pole for extended reach.

- Ensure the blade is clean and free of debris.
- For handheld use, hold the trimmer comfortably and engage the safety.
- For pole use, adjust the pole angle as needed (up to 180° rotation).
- Move the trimmer smoothly along the hedge, allowing the dual-action blades to cut efficiently.



Figure 9: The handheld hedge trimmer in use, demonstrating its lightweight and ergonomic design for easy trimming.



Figure 10: Close-up of the dual-action blades, designed for efficient cutting of shrubs and brush.

Using the Grass Shears

The grass shears are ideal for precise trimming around flowerbeds, pathways, and lawn edges. They are designed for handheld use.

- Ensure the grass shear blade is securely attached.

- Hold the tool comfortably and engage the safety.
- Move the shears along the desired cutting line, allowing the blades to cleanly cut the grass.



Figure 11: The grass shears in operation, demonstrating its effectiveness for precise lawn edging with a maximum cutting width of 5.9 inches.

MAINTENANCE

Blade Care and Replacement

Regularly inspect blades for sharpness and damage. Clean blades after each use to remove sap and debris. To replace or swap blades (hedge trimmer to grass shears or vice versa):

1. Ensure the battery is removed from the tool.
2. Press the blade release button (or side buttons for hedge trimmer/grass shears) and carefully remove the blade.
3. Align the new blade with the corresponding spot on the machine and slide it into the slot until it clicks securely.



Figure 12: Step-by-step guide on how to effortlessly swap between the hedge trimmer and grass shear blades.

Your browser does not support the video tag.

Video 5: Demonstration of the easy way to replace the hedge trimmer blade.

Battery Care

- Store batteries in a cool, dry place away from direct sunlight.

- Do not expose batteries to extreme temperatures.
- Fully charge batteries before long-term storage.
- Avoid completely draining batteries to prolong their lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start.	Battery not charged or improperly installed. Safety button not engaged.	Ensure battery is fully charged and clicked into place. Press the safety button before pulling the trigger.
Chainsaw chain is loose or not cutting effectively.	Chain tension is incorrect. Chain needs lubrication.	Adjust chain tension as per instructions in Setup Guide. Apply chainsaw oil using the automatic oiling system.
Hedge trimmer/Grass shears blades are jammed.	Debris caught in blades. Overloading the tool.	Remove battery, then carefully clear debris from blades. Avoid cutting branches thicker than recommended.
Pole cannot be secured with the cam lock.	Cam lock nut is too loose.	Adjust the pole to your desired length, then re-tighten the cam lock nut until it secures firmly.

SPECIFICATIONS

Feature	Detail
Brand	Seesii
Model Number	SH300
Power Source	Battery Powered
Battery Type	2 x 4000mAh Lithium Ion (21V)
Run Time	60-80 minutes (per charge, depending on use)
Pole Extension	6 to 9 feet (up to 16 feet total reach)
Hedge Trimmer Blade Length	11.8 Inches
Grass Shears Cutting Width	5.9 Inches
Item Weight	7.2 Pounds
Blade Material	Alloy Steel

WARRANTY AND SUPPORT

SEESII products are designed for durability and performance. For any questions, technical assistance, or warranty claims, please refer to the contact information provided in your product packaging or visit the official Seesii website. Our customer support team is available to assist you with any issues you may encounter.

For additional support and resources, you may visit the [Seesii Store on Amazon](#).