

XGP X10

XGP X10 Motorcycle Intercom User Manual

Model: X10 | Brand: XGP

1. INTRODUCTION AND OVERVIEW

The XGP X10 Motorcycle Intercom is a cost-effective Bluetooth headset designed to provide motorcycle riders with high-quality sound and stable wireless connections. It enhances your riding experience by allowing seamless enjoyment of music, navigation, and calls while on the road. Featuring the latest Mesh intercom 3.0 technology and Dual-core Qualcomm Bluetooth V5.3, the X10 offers advanced communication capabilities for up to 10 riders.

Key Features:

- **10 Riders Group Mesh 3.0 Intercom:** Supports up to 10 riders within a 3km mesh network for uninterrupted, crystal-clear audio. Features one-click connection for easy setup.
- **Audio Multitasking & Music Sharing:** Dual-core Qualcomm Bluetooth V5.3 allows simultaneous music playback and intercom communication, or phone calls and intercom. Share music with fellow riders within 50 meters.
- **Long Battery Life & IP67 Waterproof:** Equipped with a 1000mAh battery providing 15-18 hours of music, call, and intercom talk time. IP67 waterproof rating ensures durability in various weather conditions (-4°F to 140°F).
- **Cross-Brand Connectivity & Precise Button Control:** Communicate with riders using different headset brands. Large, easy-to-press buttons allow for blind operation, enhancing safety.
- **DSP/CVC and Microphone Noise Cancelling & 40mm Hi-fi Stereo Speaker:** DSP/CVC noise reduction technology filters background noise for clear audio. 40mm Hi-fi speakers deliver rich, detailed sound with powerful bass and clear mid-high notes.

2. WHAT'S IN THE BOX

Your XGP X10 package includes the following components:

- X10 Main Unit
- 40mm Hi-fi Speaker
- Boom Microphone

- Button Microphone
- User Manual
- Metal Bracket
- 3M Sticker Bracket
- USB-C Cable
- Speaker Pads
- Gift Box



Image: Contents of the XGP X10 product package.

3. SETUP AND INSTALLATION

Follow these steps to install your XGP X10 Motorcycle Intercom into your helmet.

3.1. Helmet Preparation

1. Carefully remove the helmet's internal padding, especially around the ear areas, to expose the speaker pockets. Most helmets have designated voids for speakers.

3.2. Speaker Installation

2. Identify the left and right speakers. The speaker with the shorter wire is typically for the side where the main unit will be mounted (usually the left side for throttle control). The longer wire connects to the opposite side.
3. Place the speakers into the ear pockets of your helmet. Use the provided speaker pads or Velcro (if your helmet has it) to secure them. Ensure the speakers are positioned directly over your ears for optimal sound quality.
4. Route the speaker wires neatly under the helmet padding. It is recommended to route excess wire towards the back of the helmet to keep it out of the way.

3.3. Microphone Installation

The X10 comes with two microphone options: a soft wire microphone and a boom microphone. Choose the one that best suits your helmet type and preference.

- **Soft Wire Microphone:** Ideal for full-face helmets. Attach it to the inside of the chin bar, close to your mouth, using the adhesive backing.
- **Boom Microphone:** Suitable for modular or open-face helmets. Attach the boom to the inside of the chin bar, positioning the microphone close to your mouth.

4. Connect the chosen microphone to the designated port on the speaker wiring harness.
5. Route the microphone wire along the helmet's interior, tucking it securely under the padding to prevent interference.

3.4. Main Unit Mounting

The main X10 unit can be mounted using either a 3M adhesive bracket or a clamp bracket.

- **3M Adhesive Bracket:** Clean the desired mounting area on the side of your helmet. Peel off the backing from the 3M adhesive and firmly press the bracket onto the helmet. Allow sufficient time for the adhesive to bond.
- **Clamp Bracket:** Slide the clamp bracket onto the edge of your helmet, ensuring a secure fit. This option is often preferred for easy removal and reattachment.

6. Once the bracket is securely attached, slide the X10 main unit onto the bracket until it clicks into place.
7. Connect the main wiring harness (from the speakers and microphone) to the port on the bottom of the X10 main unit. Ensure all wires are neatly tucked away and do not interfere with helmet operation or comfort.



Image: The XGP X10 main unit.



Image: XGP X10 unit mounted on a helmet.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- **Power On:** Press and hold the main button until the indicator light turns on.
- **Power Off:** Press and hold the main button until the indicator light turns off.

4.2. Bluetooth Pairing (for Phone/GPS)

1. With the device off, press and hold the main button until the indicator light flashes rapidly, indicating pairing mode.
2. On your phone or GPS device, search for Bluetooth devices and select "XGP X10".
3. Once connected, the indicator light will change.

4.3. Intercom Operation (Mesh 3.0)

The X10 supports Mesh intercom 3.0 for group communication with up to 10 riders.

- **One-Click Connection:** For group pairing, ensure all X10 units are in pairing mode. Press the intercom button on one unit to initiate the one-click connection process. The units will automatically search and connect to each other.
- **Start/End Intercom:** Briefly press the intercom button to start or end an intercom conversation.
- **Cross-Brand Connectivity:** The X10 can connect with other headset brands. Refer to the specific pairing instructions for the other brand's device to establish a connection.



Image: XGP X10 Mesh Communication 3.0 for up to 10 riders.

4.4. Audio Multitasking & Music Sharing

- **Audio Multitasking:** The X10 allows you to have helmet-to-helmet intercom conversations while simultaneously listening to music or GPS navigation. You can also answer incoming calls during an intercom conversation.
- **Music Sharing:** While listening to music, activate music sharing mode (refer to the detailed manual for specific button press). Your connected rider can then listen to the same music. Optimal sharing distance is within 50 meters or between rider and passenger.

Qualcomm Bluetooth 5.3

It offers faster data transmission, lower latency, and wider transmission distance, allowing you to easily enjoy music and calls while on the road.



Image: XGP X10 Audio Multitasking capability.

4.5. Volume Control & Track Navigation

- **Volume:** Use the rotary knob on the main unit to adjust the volume up or down.
- **Next/Previous Track:** Use the dedicated buttons (refer to the manual for exact button layout) to skip to the next or previous music track.

4.6. Voice Assistant (Siri/Google)

- Activate your phone's voice assistant (Siri or Google Assistant) with a simple voice command or button press (refer to manual). This allows for hands-free control of navigation, music, and calls.

IP67 Waterproof

The X10 helmet intercom with an IP67 comprehensive waterproof rating, each component has undergone careful sealing treatment to effectively resist the intrusion of rainwater during cycling, allowing you to focus on the joy of riding.

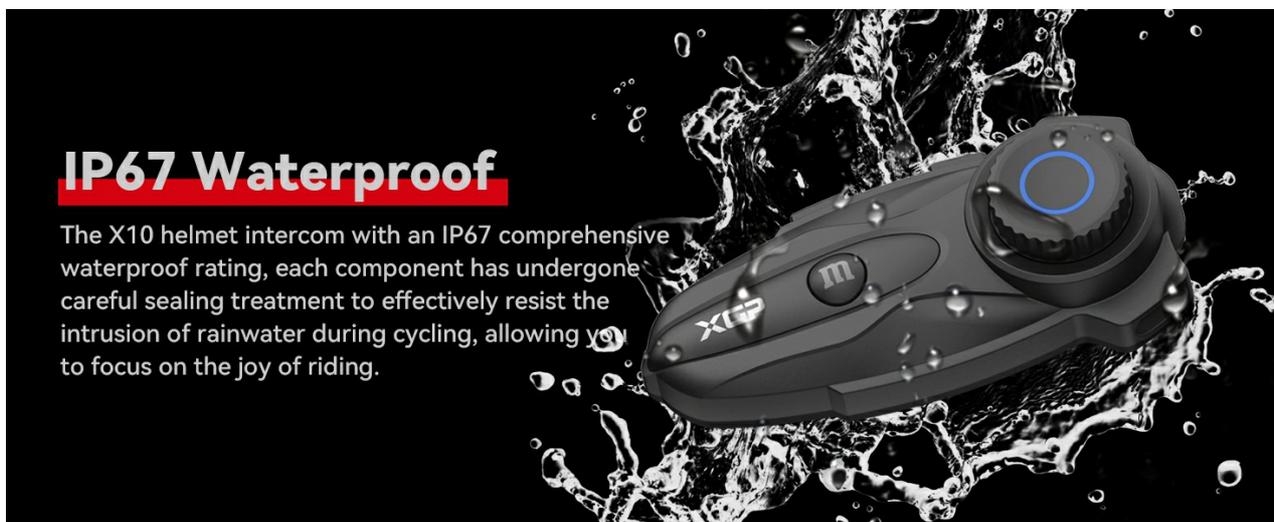


Image: XGP X10 integration with Siri and Google Voice Assistant.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your XGP X10 intercom.

- **Cleaning:** Use a soft, damp cloth to clean the main unit and speakers. Avoid using harsh chemicals or abrasive materials.
- **Charging:** Charge the device using the provided USB-C cable. Avoid overcharging or using damaged cables.

- **Storage:** Store the intercom in a cool, dry place when not in use. Avoid extreme temperatures.
- **Water Resistance:** While IP67 waterproof, avoid prolonged submersion or high-pressure water jets. Ensure the charging port cover is securely closed before exposure to water.

6. TROUBLESHOOTING

If you encounter issues with your XGP X10, try the following troubleshooting steps:

- **No Power:** Ensure the battery is charged. Connect the device to a power source and check the charging indicator.
- **No Sound/Low Volume:** Check the volume level on both the intercom and your connected device. Ensure speakers are correctly positioned over your ears. Some users have noted that volume can be low at higher speeds; ensure speakers are as close to the ear as possible.
- **Intercom Disconnection:** Ensure all units are within the effective range (up to 3km in mesh network). Re-initiate the one-click connection process.
- **Bluetooth Pairing Issues:** Turn off and restart both the intercom and your Bluetooth device. Clear previous Bluetooth connections on your device and try pairing again.
- **Poor Microphone Quality:** Ensure the microphone is positioned correctly near your mouth and not obstructed. Check for any damage to the microphone or its connection. DSP/CVC noise reduction should minimize background noise.
- **Device Not Responding:** Perform a hard reset (refer to the detailed manual for specific reset instructions, usually a long press of a combination of buttons).

7. SPECIFICATIONS

Feature	Detail
Model Name	X10
Connectivity Technology	Wireless (Bluetooth V5.3)
Noise Control	Active Noise Cancellation (DSP/CVC)
Battery Life	Up to 18 Hours (Music/Talk Time)
Charging Time	2 Hours
Water Resistance Level	IP67 Water Resistant
Speaker Size	40mm Hi-fi Stereo
Intercom Range	Up to 3km (Mesh Network)
Operating Temperature	-4°F to 140°F
Material	Acrylonitrile Butadiene Styrene (ABS)

Item Weight


12.3 ounces

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or contact the seller directly through the platform where you purchased the XGP X10. Keep your proof of purchase for warranty claims.

© 2024 XGP. All rights reserved.

Documents - XGP – X10

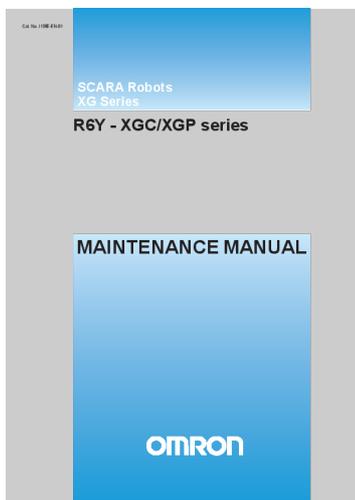


[\[pdf\]](#) User Manual Instructions Warranty Label

MAINTENANCE MANUAL assets omron eu Maintenance Manual T 1 Safety Instructions y Setafnolrmaf oni t S1 2 Signal words used in this manual S 3 Warnng i asblel S3 Warning labels label messages on robot and controller Supplied warning 6 symbols 7 4 Major precautions for each stage of use 8 i159e scara robots r6y xgc xgp series operation en

Cat. No. I159E-EN-01 SCARA Robots ZXXG-TSeSreierises R6Y - XGC/XGP series MAINTENANCE MANUAL CONT ... -400 X4 98502-03030 X5 Kn3-m2143-000 X6 Kdm-m2134-000 X7 91312-03030 X8 91312-03020 X9 90200-01J900 **X10** Kdm-m2111-000 X11 90990-17J021 X12 90990-36J008 X13 91312-03018 X14 Kdm-m1151-000 X15 Kdm-m131...

lang:en score:28 filesize: 9.62 M page_count: 230 document date: 2013-11-21

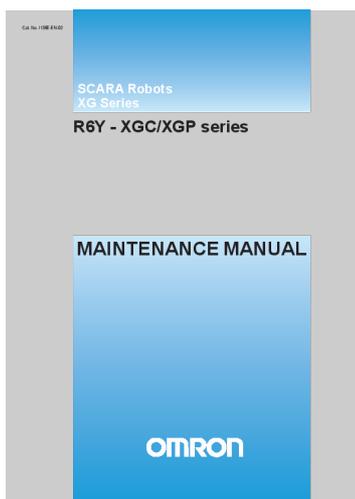

[\[pdf\]](#) User Manual Instructions Warranty Label

MAINTENANCE MANUAL Omron Maintenance Manual T 1 Safety Instructions y Setafnolrmaf oni t S1 2 Signal words used in this manual S 3 Warnng i asblel S3 Warning labels label messages on robot and controller Supplied warning 6 symbols 7 4 Major precautions for each stage of use 8 i159e scara robots r6y xgc xgp series operation en assets omron eu v3

Cat. No. I159E-EN-02 SCARA Robots ZXXG-TSeSreierises R6Y - XGC/XGP series MAINTENANCE MANUAL CONT ... -400 X4 98502-03030 X5 Kn3-m2143-000 X6 Kdm-m2134-000 X7 91312-03030 X8 91312-03020 X9 90200-01J900 **X10** Kdm-m2111-000 X11 90990-17J021 X12 90990-36J008 X13 91312-03018 X14 Kdm-m1151-000 X15 Kdm-m131...


lang:en score:28 filesize: 9.67 M page_count: 230 document date: 2016-07-21



[XGP Motorcycle Intercom X10 Helmet Bluetooth Headset Quick Start Guide](#)

Learn how to quickly set up and use your XGP Motorcycle Intercom X10 helmet Bluetooth headset. This guide covers basic functions, phone calls, music control, mesh intercom, and universal pairing.


lang:en score:26 filesize: 275.72 K page_count: 2 document date: 2024-04-18

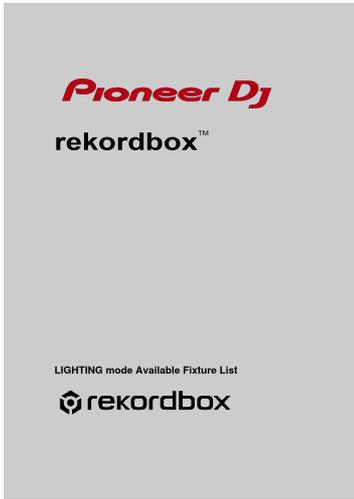

[Pioneer DJ rekordbox Lighting Mode Available Fixture List](#)

A comprehensive list of available fixtures for Pioneer DJ's rekordbox software, specifically for its lighting mode. This guide details compatible lighting equipment for seamless integration and control.

lang:tl score:25 filesize: 2.81 M page_count: 584 document date: 2023-08-17

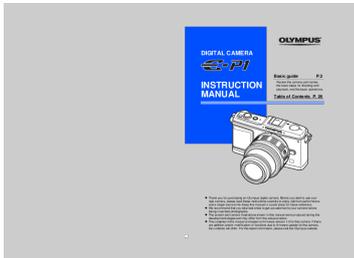

[\[pdf\] User Manual Instructions Guide](#)

E P1 Instruction manual OLYMPUS IMAGING zThe screen and camera illustrations shown in this were produced during the development stages may differ from actual product contents are based on firmware version 1 0 for If there addition or modification of functions due to update will INSTRUCTION MANUAL Printed China VN256301 zThank you purchasing an Olympus digital Before start use your new please read these instructions carefully enjoy optimum performance a longer service life Keep safe place future reference z We recommend that take test shots get accustomed before taking important photographs The Manual shooting Allows set aperture shutter speed manually gP 47 A iAuto automatically selects optimal mode man ep1 e cs olympus imaging jp en support imsg digicamera pen 80 DIGITAL CAMERA INSTRUCTION MANUAL Basic guide P.2 Review the camera part names, the basic steps ... NFO button. g Information display P. 83 Simplified display 1 2 3 45 Overall display bc de x10 4032x3024,1/8 8 4:3 L N 9 100-0015 0 6 2009.08.16 21:56 15 a 7 o x10 f 250 F5.6 2....


lang:en score:23 filesize: 7.72 M page_count: 164 document date: 2009-06-22



[\[pdf\] User Manual Instructions](#)

sangwoo hong Communication device LS ElectricIn order to use the product safely and effectively please read this user s manual thoroughly before using ▷ The safety instructions are for XGL DBDT T16 Manual V1 2 202102 ENssq ls electric document 16411844379730 XGL EN ||| Programmable Logic Control Communication device XGT Series XGL-DBDT XGL-DBDF XGL-DBDH XEL-BSSRT X ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - X10 : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f...

lang:en score:21 filesize: 8.19 M page_count: 294 document date: 2021-02-04

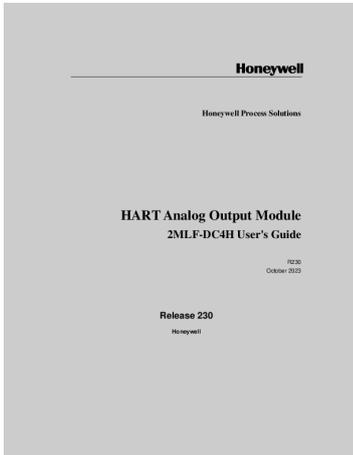

[pdf] Specifications Guide

HART Analog Output Module 2MLF DC4H User s Guide Honeywell International Sárl 6 oct 2023 — 400 820 0386 China Co Ltd 33 F Tower A City Center 100 Zunyi Rd R W Instruction Fxxy CH EN OUT RANGE DATA TYPE Set pmt hps ug 2mlf dc4h hart ao ml200 prod edam honeywell content dam products pmc modular systems masterlogic plc |||

Honeywell Process Solutions HART Analog Output Module 2MLF-DC4H User s Guide R230 October 2023 Relea ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the ... lang:en score:20 filesize: 4.99 M page_count: 184 document date: 2023-10-02



[pdf] Guide Catalog

Y205 EN2 09 IndAutomGuide2016 Industrial Automation Guide 2016 OMRON Electronics y205 industrial automation guide ru assets omron eu catalogue v5


2017 industrial.omron.ru NA NB NB - , , - TFT , , ... TROLINK-II MECHATROLINK-II . . . G 23 23 AC SE R VO DRIVER ADR 01 9 01 45 6 **X10** X1 COM SP IM G G CJ1W-MCH72 CJ1W-MC472 R88D-KN__-ML2 R88D-GN__H-ML2 3G3MX2-A_3... lang:i-klngon score:19 filesize: 88.68 M page_count: 894 document date: 2017-06-22



[pdf] User Manual Instructions Specifications Warranty

Gas Analyzer Series Emerson The following instructions MUST be adhered to and integrated into your safety Failure follow the proper may cause any one of Zero calibration comp5 1 start Control Calibration All 2021 manual x stream enhanced 2nd ed rosemount en 70654 emerson documents automation Instruction Manual HASXEE-IM-HS 10/2010 Gas Analyzer Series Instruction Manual www.EmersonProcess.co ... ALS Y and enter the corresponding y values. Ch1 Setpoints X 2of4 Lin X9: 0.000 ppm Lin **X10** 0.000 ppm Lin X11C: h1 0.000 ppm LLLLiiiiinnnnLiXXXXn1111X2345LLLLLLLL1:::iiiiiii6nnnnnnnL:iX...

lang:en score:17 filesize: 11.63 M page_count: 502 document date: 2010-10-13

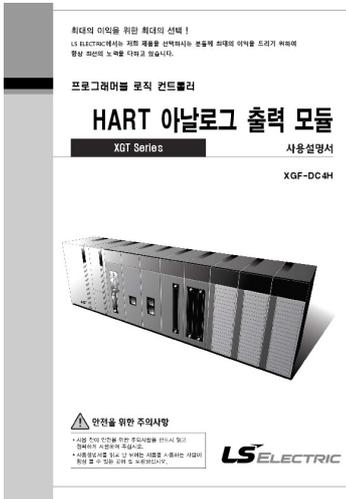

[\[pdf\]](#) User Manual

Solution Square us LS Electric XGF DC4H Manual V1 3 202306 KR ssq lselectric co kr document 16874775140240 |||

LS ELECTRIC . HART XGT Series XGF-DC4H versial Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : ID Universal Command 0 . 7-14 7 XGI/XGR ... lang:i-klngon **score:17** filesize: 6.5 M page_count: 180 document date: 2023-06-22



[\[pdf\]](#) User Manual

E P1 OLYMPUS IMAGING manual ep1 JPN omsystem pages inst |||

P.2 P.26 z z z z Ver1.0 1 2 8 3 4 5 9 6 5 0 a 7 b 1 SSWFgP.14 ... 2 j gP.40 k gP.64 l gP.142 m gP.50 n gP.41 8 JP INFO gP.83 1 2 3 45 bc de **x10 x10** f 250 F5.6 2.0 45mm g 0.0 h ISO 100 i 4032x3024,1/8 8 4:3 L N 9 100-0015 0 6 20... lang:i-klngon **score:16** filesize: 7.98 M page_count: 164 document date: 2009-06-30



[XGP Motorrad Intercom X10 Operating Manual](#)

Comprehensive operating manual for the XGP Motorrad Intercom X10, covering product overview, basic functions, battery management, phone features, Mesh Intercom setup, music control, volume adjustment, and universal pairing instructions for motorcycle communication.

lang:de **score:16** filesize: 882.55 K page_count: 1 document date: 2024-08-29




[\[pdf\]](#) Diagram

PLC Auto Products E 160623 mani LSIS Automation goto si XGP D Input module XGI Output XGQ Kg x10 4 □40 50W 1 62 3 24 3000 0 0240 100W 25 88 2400 161123 2019 11 |||

LSIS Automation Products Programmable Logic Controller / Human Machine Interface / Servo Drive Mot ... Model Rated Torque Max. Torque Rated Speed Max Speed Inertia Unit Kgf cm Kgf cm rpm rpm Kg**x10**-4 40 50W 1.62 3.24 3000 3000 0.0240 40 100W 3.25 4.88 2400 3000 0.0450 60 100W 3.25 6.50 300...

lang:en score:16 filesize: 4.08 M page_count: 24 document date: 2016-11-23

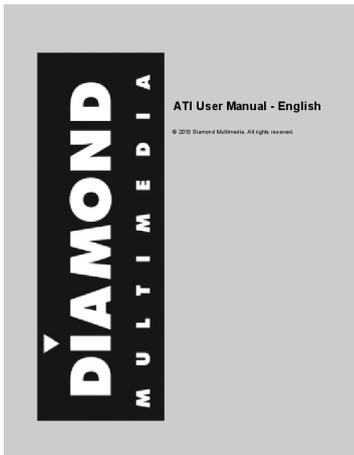

[\[pdf\]](#) User Manual Accessories

User Manual 2400 590 Index of CURRENT GRAPHICS 5900 PCIe English dmm |||

ATI User Manual - English 2010 Diamond Multimedia. All rights reserved. Diamond Multimedia ATI Ra ... ugh the ATI Catalyst™ Control Center interface. Note: Enabling the Super Anti-aliasing modes x8, **x10**, x12 x14 , disables performance enhancing multiGPU rendering to provide better image quality. ...

lang:en score:15 filesize: 2.8 M page_count: 209 document date: 2010-03-23



[\[pdf\]](#) User Manual Specifications

CW 90 90X Checkweigher Technical Manual Download Manuals Rice Lake Weighing Systems m 204129 cw 90x tech eu enus rev1 ricelake media dkxbxo21 |||

CW-90/90X Checkweigher Firmware Version 1.01 Technical Manual February 27, 2025 PN 204129 Rev I ... cessible through EDP commands. 1.10 Expanded Resolution There is a different procedure for toggling **x10** resolution ON and OFF depending on if the Audit jumper is in the ON or OFF position. While displ...

lang:en score:15 filesize: 3.92 M page_count: 96 document date: 2025-02-27



[pdf] User Manual Instructions Specifications Guide Warranty

Emerson Process Management Carbon Monoxide Alarm HASX2E IM HS User Guide 27bf0505 fd89 452e b041 dc24a2501801 archive org manualsonline id

Instruction Manual HASX2E-IM-HS 02/2012 Gas Analyzers X-STREAM X2 Series Instruction Manual www.Eme... e inlet for indoor use and display optional with field wiring terminals for indoor use ; X-STREAM X100 Compact Gas Analyzer X100GK : Table Top or Rack Mount with appliance inlet for indoor use and ...

lang:en score:15 filesize: 24.32 M page_count: 434 document date: 2012-03-16




[pdf] User Manual

sangwoo hong LS Electric XGR CPU Manual V2 8 202306 KR ssq lselectric co kr document 16875023282510 |||

LS ELECTRIC . XGR XGT Series CPU XGR-CPUH/F XGR-CPUH/T XGR-CPUH/S XGR-DBST XGR ... FD574 _BASE_POWER_FAIL FW416 _IO_TYER_N FW417 _IO_DEER_N FW418 _FUSE_ER_N FW1922 _ANC_ERR FX10849 _IO_ER_PMT FX10851 _CP_ER_PMT FX10850 _SP_ER_PMT FX10848 _FUSE_ER_PMT DWORD WORD WORD WOR...

lang:de score:15 filesize: 7.14 M page_count: 294 document date: 2023-06-23

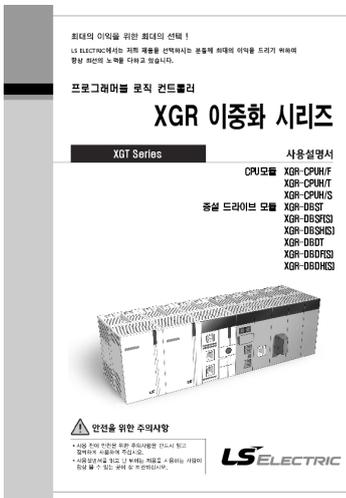

[pdf] User Manual

sangwoo hong XGR CPU Manual V2 9 202406 KR type attachment ssq lselectric co kr document 17188641547870 |||

LS ELECTRIC . XGR XGT Series CPU XGR-CPUH/F XGR-CPUH/T XGR-CPUH/S XGR-DBST XGR ... FD574 _BASE_POWER_FAIL FW416 _IO_TYER_N FW417 _IO_DEER_N FW418 _FUSE_ER_N FW1922 _ANC_ERR FX10849 _IO_ER_PMT FX10851 _CP_ER_PMT FX10850 _SP_ER_PMT FX10848 _FUSE_ER_PMT DWORD WORD WORD WOR...

lang:de score:15 filesize: 7.22 M page_count: 294 document date: 2024-06-20



[pdf] Diagram

PLC Auto Products E G52 LSIS Automation LS Electric XGP ACF1 DC5V 3A DC24V 0 6A ACF2 220V AC23 8 5A DC Kg x10 4 □40 50W 1 62 3 24 3000 0240 100W 25 88 161229 Is electric upload customer a580c867 c4c7 4bd8 a5bd ed8c1c6f2e43 |||

LSIS Automation Products Programmable Logic Controller / Human Machine Interface / Servo Drive Mot ... Model Rated Torque Max. Torque Rated Speed Max Speed Inertia Unit Kgf cm Kgf cm rpm rpm Kgx10-4 40 50W 1.62 3.24 3000 3000 0.0240 40 100W 3.25 4.88 2400 3000 0.0450 60 100W 3.25 6.50 300...

lang:en score:15 filesize: 2.8 M page_count: 24 document date: 2016-12-29




[pdf] User Manual Instructions

XEL BSSRT User Manual sangwoo hong xelbssrtusermanual cdn automationdirect static manuals lselectric |||

XEL-BSSRT User Manual XEL-BSSRT This manual is written and maintained by LS Electric and hosted on A ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - **X10** : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f...

lang:en score:15 filesize: 13.65 M page_count: 296 document date: 2024-04-09

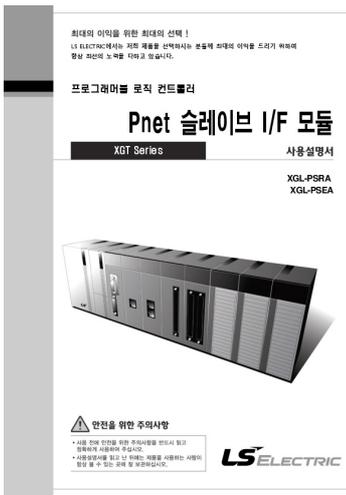


[pdf] User Manual

namoog kang Pnet I F 2021 12 31 — PLC CPU Off XGL PSRA T2 Manual V1 6 202112 KR sol ls electric document 16401482242690 |||

LS ELECTRIC . Pnet I/F XGT Series XGL-PSRA XGL-PSEA 2 1 Pnet I/F LED 1 RUN : Power On P-RUN : ON STATUS : I/O ON ERR : ON 2 **x10**: x1 : 3 USB -I/O OS 4 5 Pnet 3-2 3 2 LED LED On - ...


lang:da score:14 filesize: 7.08 M page_count: 152 document date: 2021-12-15

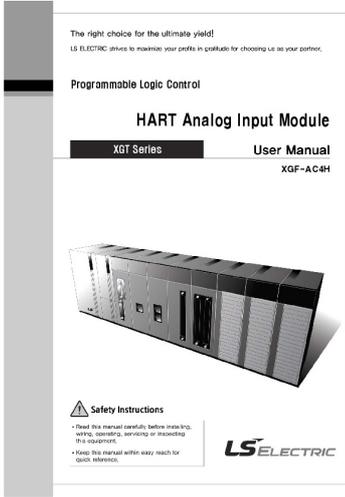

[pdf] User Manual Instructions

sangwoo hong HART Analog Input Module XGF AC4H Manual V1 3 202101 EN sol Is electric document 16411840741170 |||


Programmable Logic Control HART Analog Input Module XGT Series XGF-AC4H Safety Instruction Befo ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d... lang:en score:14 filesize: 4.9 M page_count: 194 document date: 2021-01-04

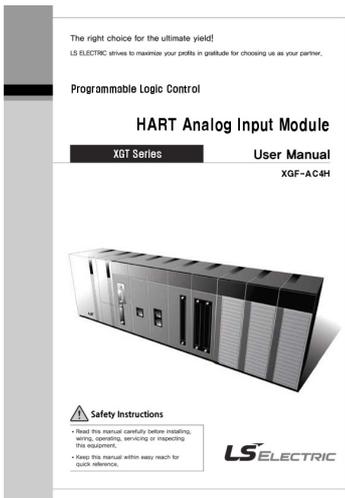

[pdf] User Manual Instructions

sangwoo hong HART Analog Input Module XGF AC4H Manual V1 41 202208 EN sol Is electric document 16874798418290 |||

Programmable Logic Control HART Analog Input Module XGT Series XGF-AC4H Safety Instruction Befo ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d... lang:en score:14 filesize: 5.03 M page_count: 194 document date: 2022-08-02

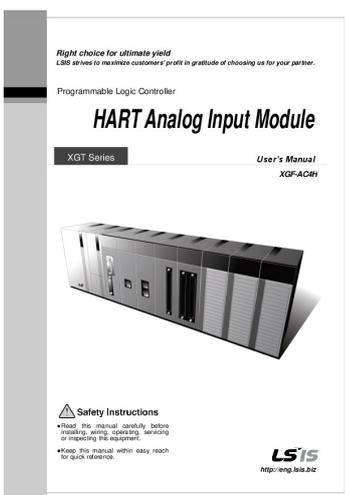

[pdf] User Manual Instructions

HART Analog Input Module User s Manual XGF AC4H V1 1 Isis upload customer e188945f f84e 4afb ad45 30cef29342ce |||

Right choice for ultimate yield LSIS strives to maximize customers profit in gratitude of choosing ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d... lang:en score:14 filesize: 4.78 M page_count: 175 document date: 2013-11-04



[pdf] Test Report

Shenzhen Sunspring Electronics Co Ltd Keyboard OJWCG107C Violet Wang BT Test Report
 SHENZHEN XIAOGANGPAO COMMUNICATION EQUIPMENT CO LTD X10 Helmet bluetooth headset
 2BCEK 2BCEKX10 x10

Page 1 of 37 FCC ID: 2BCEK-**X10** Report No.: LCSA03264115EA FCC TEST REPORT FOR SHENZHEN XIAOGANGPAO COMMUNICATION EQUIPMENT CO., LTD. Helmet bluetooth headset Test Model: **X10** Prepared for Address : SHENZHEN XIAOGANGPAO COMMUNICATION EQUIPMENT CO., LTD. : ROOM 110, BOZHI CENTER, CHENTIAN SI ROA...


lang:en score:13 filesize: 1.51 M page_count: 37 document date: 2024-04-18



[pdf] User Manual


sangwoo hong XGR CPU Manual V2 8 202209 KR sol ls electric document 16636526941650 |||
 LS ELECTRIC . XGR XGT Series CPU XGR-CPUH/F XGR-CPUH/T XGR-CPUH/S XGR-DBST XGR ... FD574 _BASE_POWER_FAIL FW416 _IO_TYER_N FW417 _IO_DEER_N FW418 _FUSE_ER_N FW1922 _ANC_ERR FX10849 _IO_ER_PMT FX10851 _CP_ER_PMT FX10850 _SP_ER_PMT FX10848 _FUSE_ER_PMT
 DWORD WORD WORD WOR...

lang:de score:13 filesize: 7.73 M page_count: 279 document date: 2022-09-20

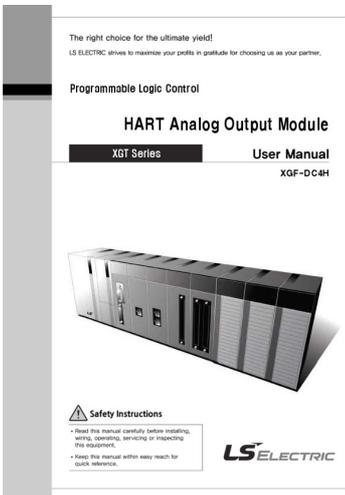

[pdf] User Manual Instructions


sangwoo hong HART Analog Output Module XGF DC4H Manual V1 31 202208 EN sol ls electric document 16874802979990 |||
 Programmable Logic Control HART Analog Output Module XGT Series XGF-DC4H Safety Instruction Bef ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d...
 lang:en score:13 filesize: 5.09 M page_count: 182 document date: 2022-08-02

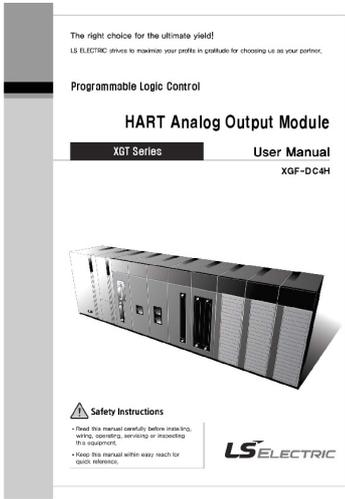

[\[pdf\]](#) User Manual Instructions

sangwoo hong HART Analog Output Module XGF DC4H Manual V1 3 202101 EN sol ls electric document 16411841335920 |||

Programmable Logic Control HART Analog Output Module XGT Series XGF-DC4H Safety Instruction Bef ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d... lang:en score:13 filesize: 5.08 M page_count: 182 document date: 2021-01-04

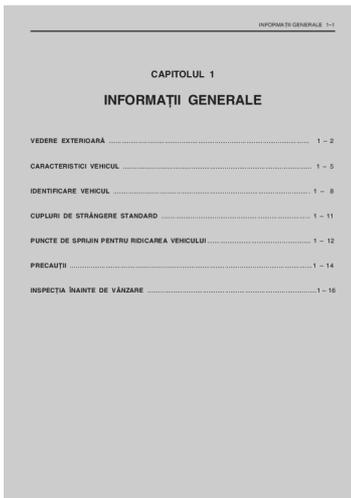


[\[pdf\]](#) User Manual Diagram

Daewoo Damas Manual Pdf DAEWOO DAMAS diagramas diagramasde otros2 |||

INFORMAII GENERALE 11 CAPITOLUL 1 INFORMAII GENERALE VEDERE EXTERIOAR ASETOFON NTR. MOTOR VENTILATOR SPATE BRICHET DIFUZOR Cablaj instrumente indicatoare TERMINAL MAS **X10** BUTON VOLUM CABLAJ NR.1 CONTROLER A/C E.C.U. NTR. A/C RELEU POMP COMBUSTIBIL X X4 X7 11...

lang:i-kl Klingon score:13 filesize: 6.96 M page_count: 342 document date: 2000-03-23

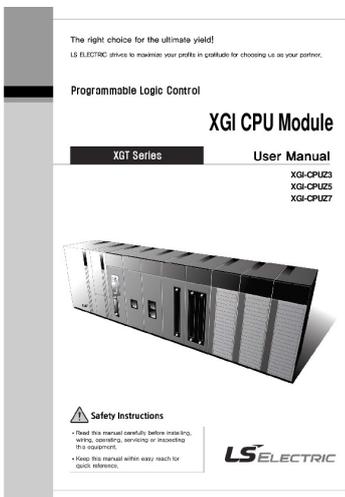


[\[pdf\]](#) User Manual Installation Guide Instructions

sangwoo hong Indir Document Library Aksa Mühendislik XGI CPUZ Manual 230221 V1 0 aksamuhendislik 2023 11 |||

Programmable Logic Control XGI CPU Module XGT Series XGI-CPUZ3 XGI-CPUZ5 XGI-CPUZ7 Safety Instru ... e parameter is set to 0: Check , the value changes internally, as shown in the following example. **X100** 100 um = 100 / 1000.0 = 0.1mm **X100**. 100.0 mm = 100 / 1.0 = 100.0 mm Example **X10.4** 10.4 m...

lang:en score:13 filesize: 30.65 M page_count: 1111 document date: 2023-02-15

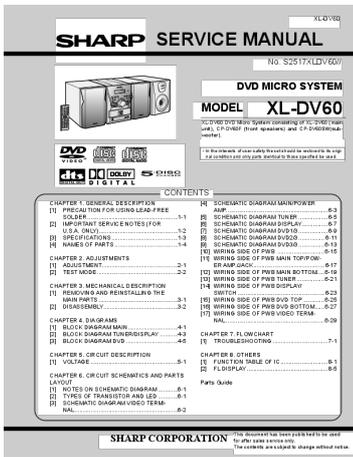


[\[pdf\]](#) User Manual Specifications Diagram

C2S00006 book SINSEIZU SHARP XL DV60 01 MANUAL drive google u 0 uc id 1N5960LLNpm 8K YqLYMnGsFsrW99Gom2 export |||

XL-DV60 SERVICE MANUAL No. S2517XLDV60// DVD MICRO SYSTEM MODEL XL-DV60 XL-DV60 DVD Micro System con ... Z RLY201 RRLYD0004SJZZ RX701 VHLGP1UD261-1 S901 QSOCJA001SJZZ S902 QSOCJA002SJZZ S903 VHPBFTX1001-1 SO101 QTANAA002SJZZ SO202 QSOCJA0214AWZZ SO601 QSOCJ0003SJZZ SW700 QSW-Z0003SJZZ SW70...

lang:i-klngon score:13 filesize: 5.64 M page_count: 96 document date: 2005-04-07

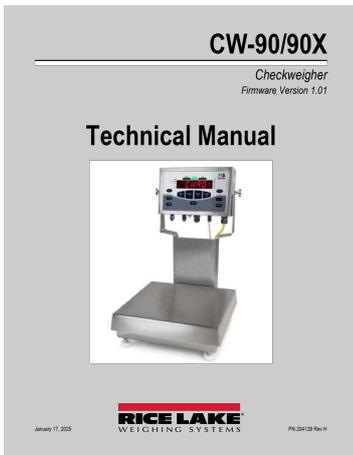


[\[pdf\]](#) User Manual Specifications

Manuals Rice Lake Weighing Systems m 204129 cw 90 90x tech eu enus revh ricelake media dkxbxo21 pagename CW 90X |||

CW-90/90X Checkweigher Firmware Version 1.01 Technical Manual January 17, 2025 PN 204129 Rev H ... cessible through EDP commands. 1.10 Expanded Resolution There is a different procedure for toggling x10 resolution ON and OFF depending on if the Audit jumper is in the ON or OFF position. While displ...

lang:en score:12 filesize: 3.75 M page_count: 98 document date: 2025-01-17

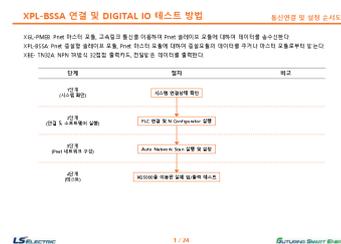


[\[pdf\]](#)

PowerPoint XPL BSSA DIGITAL IO 2022 12 28 — XGL PMEB Pnet

PLC 29 PLC sol Is electric document 16396967166420 |||

XPL-BSSA DIGITAL IO XGL-PMEB: Pnet , Pnet . XPL-BSSA: Pnet , Pnet . XBE- ... BE-TN32A Sink Current Type 3. XPL-BSSA Smart I/O Slave 10 100 0 - 99 1 4. 10 X10 5. 1 X1 3 / 24 XPL-BSSA DIGITAL IO PLC - Profibus DP 1 2 1. Master ...

lang:af score:12 filesize: 992.57 K page_count: 24 document date: 2020-09-01

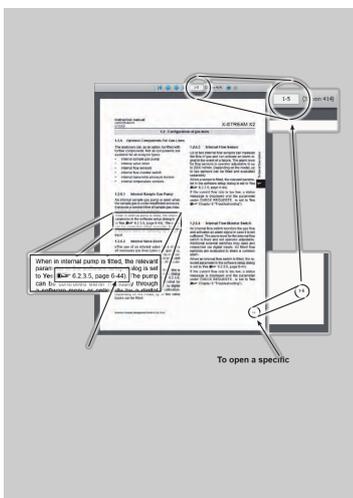

[\[pdf\]](#) User Manual Instructions Specifications Warranty

manual x stream enhanced 1st ed rosemount en 70526 emerson documents automation |||

Some notes for navigating in this PDF document Page references of this style work as hyperlinks: Si ... ALS Y and enter the corresponding y values. Ch1 Setpoints X 2of4 Lin X9: 0.000 ppm Lin X10 0.000 ppm Lin X11C: h1 0.000 ppm

LLLLiiiiinnnnLiXXXXn1111X2345LLLLLLL1:::iiiiiii6nnnnnnnL:iX...

lang:en score:12 filesize: 12.49 M page_count: 508 document date: 2010-08-31

The right choice for the ultimate yield!
LS ELECTRIC strives to maximize your profits in gratitude for choosing us as your partner.

Programmable Logic Control

Communication device

XGT Series **User Manual**



XGL-DBDT
XGL-DBDF
XGL-DBDH
XEL-BSSRT
XEL-BSSRF
XEL-BSSRH
GEL-TR4C/C1
GEL-DT4C/C1
GEL-D24C
GEL-RV2C
GEL-AV8C
GEL-AC8C
GEL-DV4C
GEL-DC4C

Safety Instructions

- Read the manual carefully before installing, wiring, operating, servicing or inspecting the equipment.
- Keep this manual within easy reach for quick reference.

LS ELECTRIC

[\[pdf\]](#) User Manual Instructions

sangwoo hong xelbssrtusermanual 2024 05 14 04 11 10 cdn automationdirect static archive manuals

Iselectric |||

Programmable Logic Control Communication device XGT Series XGL-DBDT XGL-DBDF XGL-DBDH XEL-BSSRT X ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - **X10** : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f...

lang:en score:11 filesize: 13.4 M page_count: 295 document date: 2024-02-07

The right choice for the ultimate yield!
LS ELECTRIC strives to maximize your profits in gratitude for choosing us as your partner.

Programmable Logic Control

Communication device

XGT Series **User Manual**



XGL-DBDT
XGL-DBDF
XGL-DBDH
XEL-BSSRT
XEL-BSSRF
XEL-BSSRH
GEL-TR4C/C1
GEL-DT4C/C1
GEL-D24C
GEL-RV2C
GEL-AV8C
GEL-AC8C
GEL-DV4C
GEL-DC4C

Safety Instructions

- Read the manual carefully before installing, wiring, operating, servicing or inspecting the equipment.
- Keep this manual within easy reach for quick reference.

LS ELECTRIC

[\[pdf\]](#) User Manual Instructions

sangwoo hong xelbssrtusermanual 2024 05 14 02 40 54 cdn automationdirect static archive manuals

Iselectric |||

Programmable Logic Control Communication device XGT Series XGL-DBDT XGL-DBDF XGL-DBDH XEL-BSSRT X ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - **X10** : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f...

lang:en score:11 filesize: 8.13 M page_count: 295 document date: 2024-02-07

The right choice for the ultimate yield!
LS ELECTRIC strives to maximize your profits in gratitude for choosing us as your partner.

Programmable Logic Control

HART Analog Input Module

XGT Series **User Manual**

XGF-AC4H



Safety Instructions

- Read the manual carefully before installing, wiring, operating, servicing or inspecting the equipment.
- Keep this manual within easy reach for quick reference.


LS ELECTRIC

[\[pdf\]](#) User Manual Instructions

sangwoo hong HART Analog Input Module LS ElectricIn most cases it is 5 or 6 and 7 means Wireless dimension o Device Pounds per Gallon US lb gal 69 45 Newton Meter Nm 94 5E per XGF AC4H Manual V1 41 202208 ENSol Is electric document 17001993256940 XGF EN |||


Programmable Logic Control HART Analog Input Module XGT Series XGF-AC4H Safety Instruction Befe ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d...

lang:en score:11 filesize: 5.03 M page_count: 194 document date: 2022-08-02

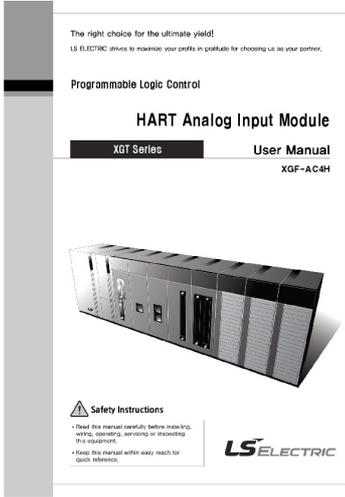


[\[pdf\]](#) User Manual Instructions

sangwoo hong HART Analog Input Module LS Electric UK 207 CF KOSO 24582 6006 BARTEC 208 D0 MJK 24583 6007 Detcon 209 D1 GE Energy 24584 6008 MSA 210 D2 BW Technologies 24585 6009 METROVAL XGF AC4H Manual V1 5 202406 EN sol ls electric document 17197971141310 ||| Programmable Logic Control HART Analog Input Module XGT Series XGF-AC4H Safety Instruction Befa ... iversal Command Revision : Device Specific Command Revision : Software Revision : Hardware Revision **x10** : Device Function Flag : Device ID Function When Universal Command 0 command is set to the d... lang:en score:11 filesize: 5.08 M page_count: 194 document date: 2024-05-31

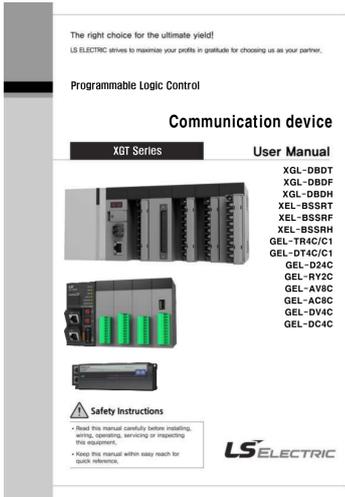

[\[pdf\]](#) User Manual Instructions

sangwoo hong Communication device XGL DBDT T16 Manual V1 5 202408 EN sol ls electric document 17247377198680 ||| Programmable Logic Control Communication device XGT Series XGL-DBDT XGL-DBDF XGL-DBDH XEL-BSSRT X ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - **X10** : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f... lang:en score:11 filesize: 8.22 M page_count: 294 document date: 2024-08-27

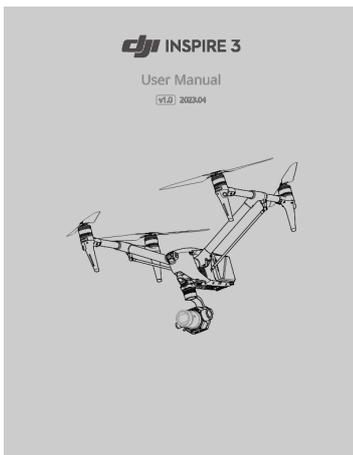

[\[pdf\]](#) User Manual

DJI Inspire 3 User Manual V1 0 ENII JoeCelestino Vertigo Drones V10 vertigodrones assets images ||| 0123567869 09 1 .3_,B5=G,613*::51 ..71,**1-, -75, 17F*7 -* ,:= * 1 C1::G:6*=-.*6: ,=-6 C- ... 0 /56 7 4 SM5 1 ;TRGU5V 7A#V 0 5U 6W P 0 # 56 / #SM5 1P # M10 5016 # P # **X10** 7 SX 71 5 1 7 Y*M10 / # 317 1 J 5 O # P # * Z _abc_def_bg #I 7 1 0 3... lang:i-klngon score:11 filesize: 28.41 M page_count: 144 document date: 2023-05-01

Pioneer Dj

rekordbox™

 rekordbox

[\[pdf\]](#) User Manual

FIXTURE LIBRARY lists rekordbox free to System Requirements Manual lighting available fixtures cdn files 20230511203611 |||

rekordbox™ LIGHTING mode Available Fixture List Contents 1 Support Functions ile Mega Tripar Profile Mega Tripar Profile Plus Micro Wash RGBW Micro Wash WWCW Mirage Q6 IP MOD HEX100 MOD QA60 MOD QW100 MOD STQ MOD TW100 Monster Beam Octo Beam RGBW P36 LED 51 P36 LED WH P56P L...

lang:tl score:11 filesize: 2.75 M page_count: 568 document date: 2023-05-10

Pioneer Dj

rekordbox™

 rekordbox

[\[pdf\]](#) User Manual

FIXTURE LIBRARY lists rekordbox free to System Requirements Manual lighting available fixtures cdn files 20230327061504 |||

rekordbox™ LIGHTING mode Available Fixture List Contents 1 Support Functions ile Mega Tripar Profile Mega Tripar Profile Plus Micro Wash RGBW Micro Wash WWCW Mirage Q6 IP MOD HEX100 MOD QA60 MOD QW100 MOD STQ MOD TW100 Monster Beam Octo Beam RGBW P36 LED P36 LED WH P56P LED P6...

lang:tl score:11 filesize: 2.72 M page_count: 561 document date: 2023-03-24

Pioneer Dj

rekordbox™


LIGHTING mode Available Fixture List

 rekordbox

[Pioneer DJ rekordbox Lighting Mode: Available Fixture List](#)


Discover compatible lighting fixtures for Pioneer DJ's rekordbox software. This guide details numerous brands and models, enabling seamless synchronization of lighting effects with music for enhanced DJ performances and events.

lang:tl score:11 filesize: 2.73 M page_count: 563 document date: 2023-04-05

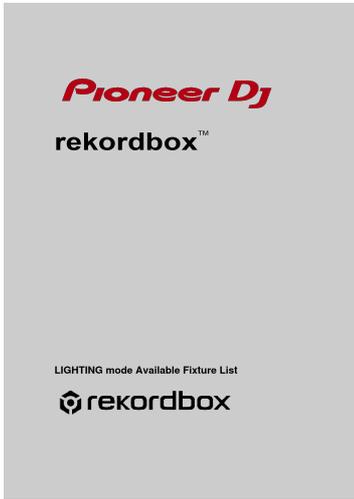

[Pioneer DJ rekordbox Lighting Fixture List](#)

A comprehensive guide detailing lighting fixtures compatible with Pioneer DJ's rekordbox software for enhanced lighting control during DJ performances.
lang:tl score:11 filesize: 2.82 M page_count: 587 document date: 2023-08-30

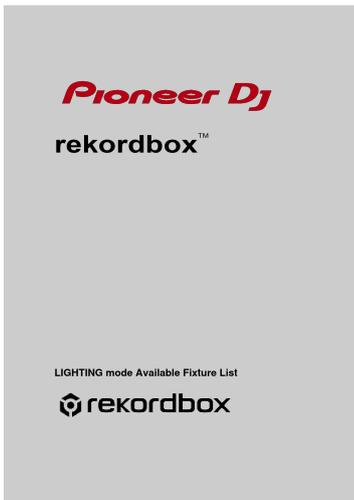


[\[pdf\] User Manual](#)

FIXTURE LIBRARY lists rekordbox free to System Requirements Manual lighting available fixtures cdn files 20230907155743 |||
rekordbox™ LIGHTNING mode Available Fixture List Contents 1 Support Functions 2 Mega Tripar Profile Mega Tripar Profile Plus Micro Wash RGBW Micro Wash WWCW Mirage Q6 IP MOD HEX100 MOD QA60 MOD QW100 MOD STQ MOD TW100 Monster Beam Octo Beam RGBW P36 LED P36 LED WH P56P LED P6...
lang:tl score:11 filesize: 2.82 M page_count: 588 document date: 2023-09-06



[\[pdf\] User Manual Instructions](#)

sangwoo hong Solution Square LS Electric XGL DBDT T16 Manual V1 3 202211 EN sol ls electric document 16812579571870 |||
Programmable Logic Control Communication device XGT Series XGL-DBDT XGL-DBDF XGL-DBDH XEL-BSSRT X ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - X10 : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f...
lang:en score:11 filesize: 8.51 M page_count: 295 document date: 2023-04-11

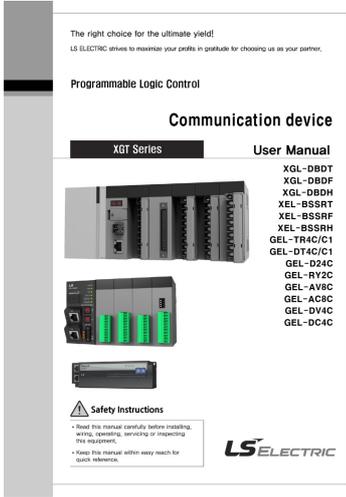


[\[pdf\]](#) User Manual Instructions

sangwoo hong Solution Square LS Electric XGL DBDT T16 Manual V1 2 202102 EN sol ls electric document 16411844379730 |||

Programmable Logic Control Communication device XGT Series XGL-DBDT XGL-DBDF XGL-DBDH XEL-BSSRT X ... device. 1. It is a switch to set the station number of the own station. 0-63 setting available. - **X10** : 10 digits, X1 : 1 digits Station number 2. When setting station no. 90 or more, it operates f...

lang:en score:11 filesize: 8.19 M page_count: 294 document date: 2021-02-04

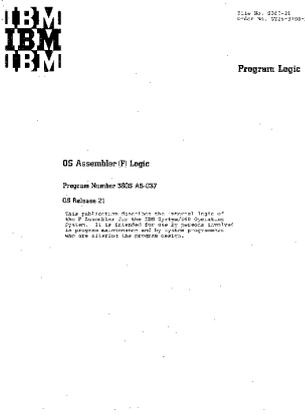


[\[pdf\]](#) User Manual Instructions

GY26 3700 2 OS Assembler F Program Logic Manual upd 197201 textfiles bitsavers ibm 360 asm

File No. 8360-21 Order No. GY26-3700-2 Program Logic OS Assembler F Logic Program Number 360S-AS-0 ... *** * YES XR-LOD X *****F2***** * SET CROSS * * REFERENCE * * * RECORD **x10** 1 LENGTH INTO * * ITRSWH * G2 *.x. x GG2T*O*R***** x READ INPUT ...

lang:en score:10 filesize: 9.79 M page_count: 150 document date: 2021-08-05

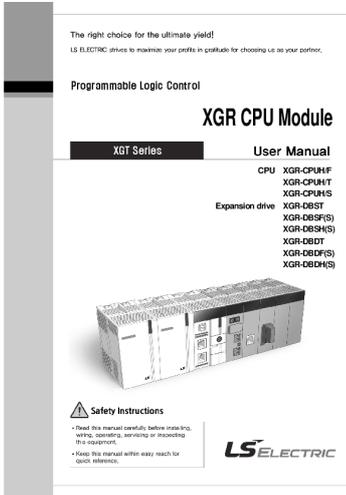


[\[pdf\]](#) User Manual Installation Guide Instructions

sangwoo hong Go Now Dalroad View computer laptops software Url dalroad 2017 03 XGR CPU Manual V2 6 202012 EN |||

Programmable Logic Control XGR CPU Module XGT Series CPU Expansion drive XGR-CPUH/F XGR-CPUH/T XG ... on error. By external device monitoring this flag, the user can know a reason of heavy fault. **FX10849** _IO_ER_PMT BOOL - Status of Ignoring IO On when set to ignore IO module error module erro...

lang:en score:10 filesize: 5.66 M page_count: 280 document date: 2020-12-29

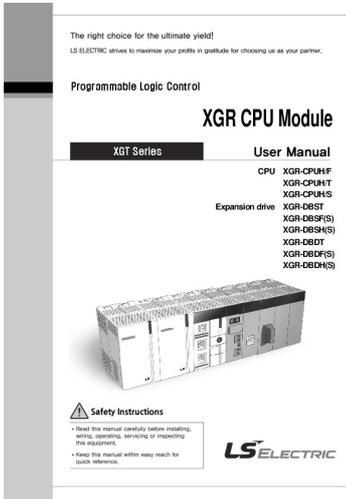

[\[pdf\] User Manual Installation Guide Instructions](#)

sangwoo hong Solution Square LS Electric XGR CPU Manual V2 7 202306 EN type attachment sol ls electric document 16875022927360 |||

Programmable Logic Control XGR CPU Module XGT Series CPU Expansion drive XGR-CPUH/F XGR-CPUH/T XG ... on error. By external device monitoring this flag, the user can know a reason of heavy fault. **FX10849** _IO_ER_PMT BOOL - Status of Ignoring IO On when set to ignore IO module error module erro...

lang:en score:10 filesize: 5.74 M page_count: 280 document date: 2023-06-23

Related Documents

	<p>XGP Motorrad Intercom X10 Operating Manual</p> <p>Comprehensive operating manual for the XGP Motorrad Intercom X10, covering product overview, basic functions, battery management, phone features, Mesh Intercom setup, music control, volume adjustment, and universal pairing instructions for motorcycle communication.</p>
	<p>XGP Motorcycle Intercom X10 Helmet Bluetooth Headset Quick Start Guide</p> <p>Learn how to quickly set up and use your XGP Motorcycle Intercom X10 helmet Bluetooth headset. This guide covers basic functions, phone calls, music control, mesh intercom, and universal pairing.</p>
	<p>XGP Motorcycle Intercom User Manual: Functions and Operation</p> <p>Comprehensive user guide for the XGP Motorcycle Intercom, covering setup, Bluetooth pairing, phone calls, music playback, intercom features, and regulatory compliance. Learn how to operate your XGP intercom efficiently.</p>
	<p>XGP X1 Motorcycle Helmet Bluetooth Headset Quick Button Commands and Functions</p> <p>A comprehensive guide to the XGP X1 Motorcycle Helmet Bluetooth Headset, detailing quick button commands for product overview, basic functions, phone calls, music playback, and volume control. Includes FCC compliance information.</p>