

[manuals.plus](#) /

› [XIXIMENG](#) /

› [XIXIMENG R35 Plus Retro Handheld Game Console User Manual](#)

XIXIMENG R35 Plus

XIXIMENG R35 Plus Retro Handheld Game Console User Manual

Model: R35 Plus

INTRODUCTION

Welcome to the user manual for your new XIXIMENG R35 Plus Retro Handheld Game Console. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure an optimal gaming experience.

R35 PLUS



HIGH DEFINITION



15,000+ GAMES



OPEN SOURCE



SAVE & LOAD



21 EMULATORS

Image: The R35 Plus console showcasing its design and key features.

PRODUCT OVERVIEW

The R35 Plus is a portable retro gaming console featuring a 3.5-inch IPS screen, a 64-bit quad-core processor, and an open-source system. It comes pre-loaded with over 15,000 games and supports expansion via a TF card. Below is a detailed diagram of the console's buttons and ports.

Key Resolution

Reasonable button distribution,
simple and easy to understand.
Let you quickly become a gaming expert.

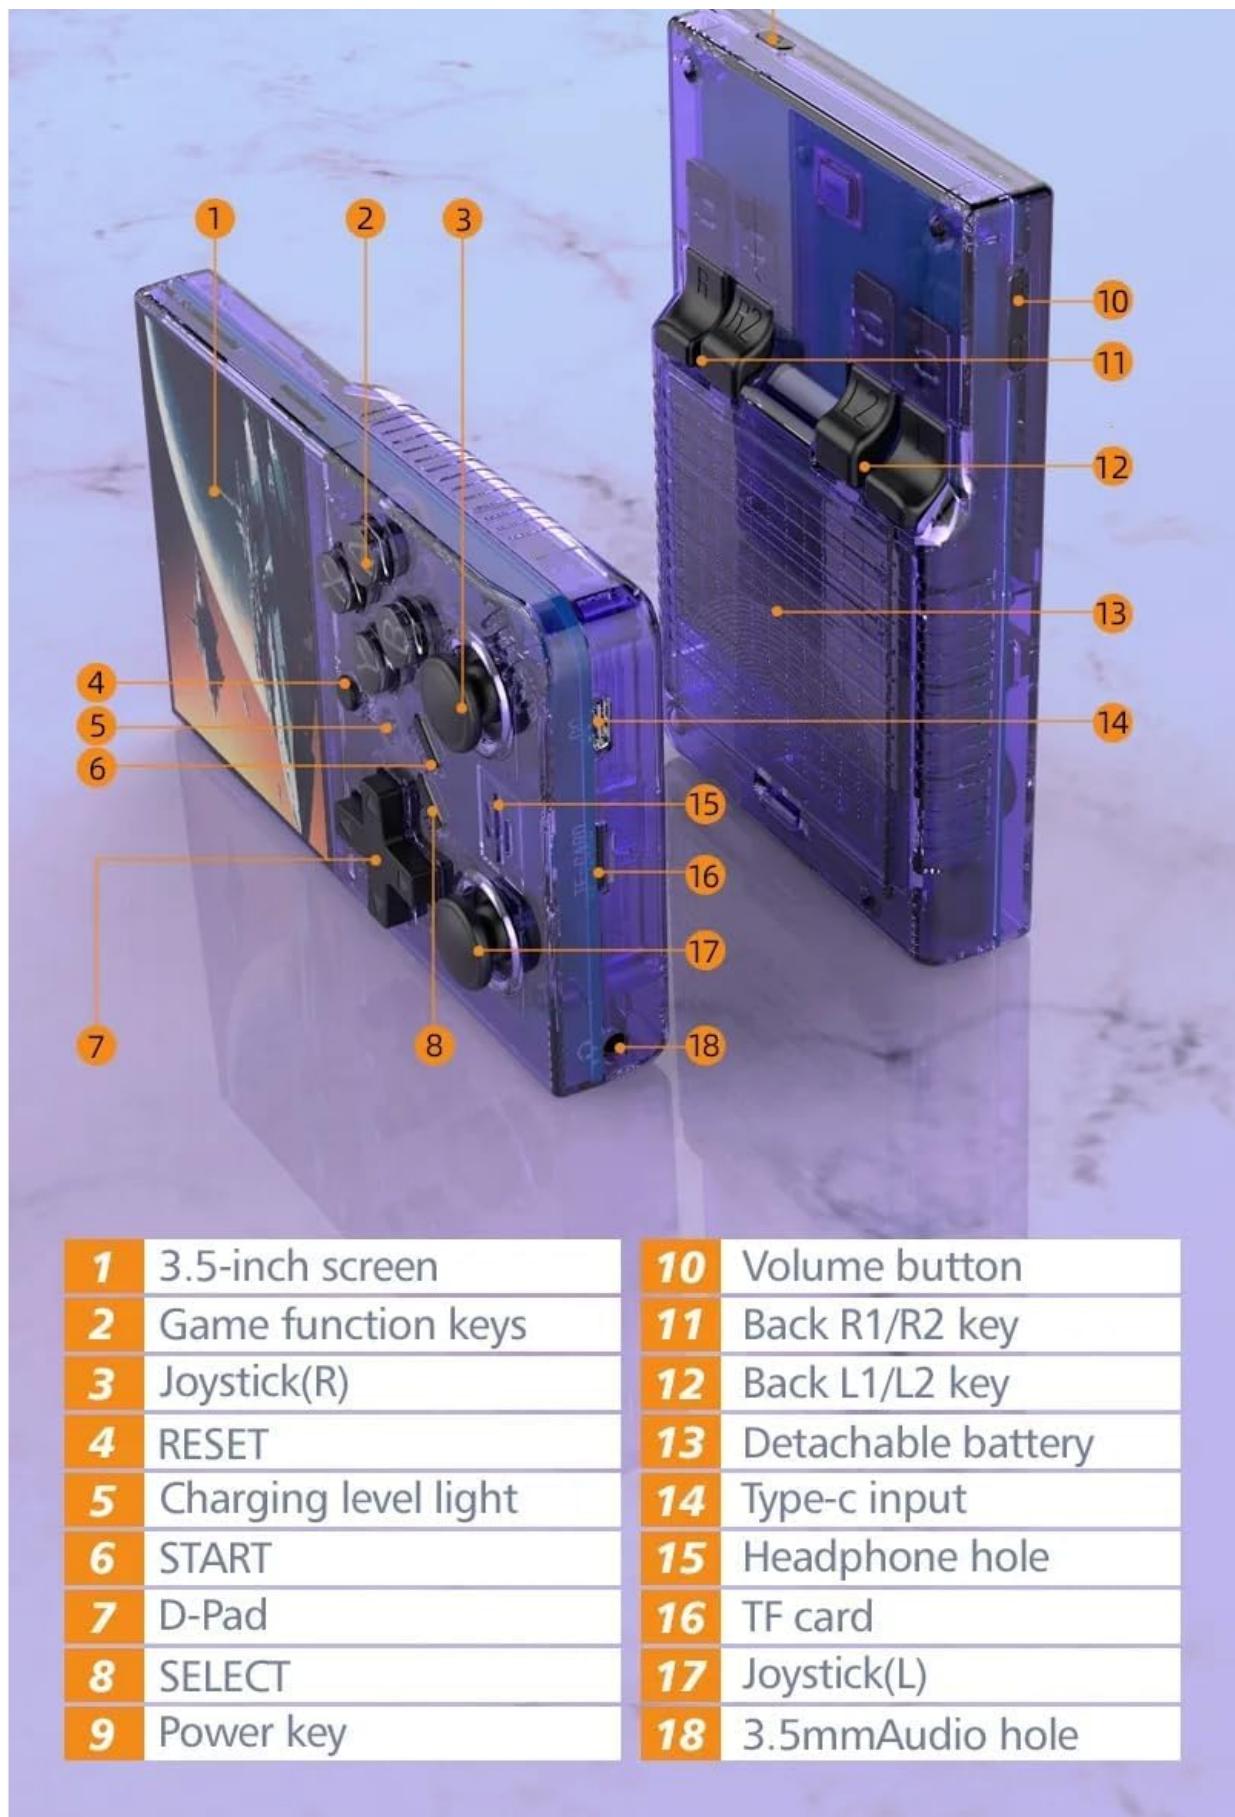


Image: Labeled diagram of the R35 Plus console's controls and ports.

1. 3.5-inch screen
2. Game function keys (A, B, X, Y)
3. Joystick (Right)
4. RESET button

5. Charging level light
6. START button
7. D-Pad
8. SELECT button
9. Power key
10. Volume button
11. Back R1/R2 keys
12. Back L1/L2 keys
13. Detachable battery compartment
14. Type-C input port
15. Headphone hole
16. TF card slot
17. Joystick (Left)
18. 3.5mm Audio hole

SETUP

Charging the Console

Before first use, fully charge the console. Connect the console to a power source using the provided Type-C cable. The charging level light will indicate the charging status. A single full charge provides up to 6 hours of gameplay.

Powerful battery

3600mah,
play games for 6 hours



Image: The R35 Plus console's battery compartment and battery.

Inserting the TF Card

Locate the TF card slot (labeled 16 in the diagram) on the console. Gently insert the pre-loaded TF card or your own compatible TF card into the slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.

Powering On/Off

To power on, press and hold the Power key (labeled 9 in the diagram) until the screen illuminates. To power off, press and hold the Power key until the shutdown options appear on the screen, then select "Power Off".

OPERATING INSTRUCTIONS

Basic Controls

The R35 Plus features a D-Pad (labeled 7), dual joysticks (labeled 3 and 17), and action buttons (A, B, X, Y, labeled 2), along with L/L1/R/R1 keys (labeled 11 and 12) on the back for enhanced gameplay.

DOUBLE JOYSTICK



Image: The R35 Plus console's dual joysticks.

CRYSTAL BUTTONS



Image: The R35 Plus console's crystal buttons.

Navigating the System

Use the D-Pad or joysticks to navigate through the system menus. The A button typically confirms selections, while the B button cancels or goes back to the previous screen.

Playing Games

Select a game from the main menu. The console supports over 21 emulators, allowing you to play a wide variety of retro titles. Game controls will vary depending on the emulator and game.

Saving and Loading Game Progress

Most emulators on the R35 Plus support save states. Refer to the specific emulator's in-game menu or documentation for instructions on how to save and load your game progress. This often involves a combination of system buttons (e.g., SELECT + START) to access the emulator menu.

Connecting to External Devices

The console includes a 3.5mm audio jack (labeled 15 and 18 in the diagram) for connecting headphones or external speakers, allowing for private listening or enhanced audio experience.

MAINTENANCE

Cleaning

Use a soft, dry, lint-free cloth to clean the console's exterior. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the finish or internal components.

Storage

Store the console in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. When not in use for extended periods, it is recommended to store it in its original packaging or a protective case.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the console regularly, even if not in use for extended periods. Do not expose the battery to extreme heat or puncture it.

TROUBLESHOOTING

Console Does Not Power On

- Ensure the battery is charged. Connect the console to a power source using the Type-C cable and allow it to charge for at least 30 minutes before attempting to power on again.
- Try a different Type-C cable and power adapter to rule out faulty accessories.

Games Not Loading or Crashing

- Verify that the TF card is properly inserted into its slot. Remove and reinsert it firmly.
- Check if the game files are corrupted or incompatible with the installed emulators. Try loading other games to isolate the issue.
- Ensure the console's firmware is up to date, if applicable.

Screen Issues (e.g., unresponsive, flickering)

- Try restarting the console.
- Ensure the screen is clean and free from physical damage.
- If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Screen Size	3.5 Inches
Resolution	640 x 480
System	Open Source, 64-bit Quad-Core Processor
Built-in Games	15000+
TF Card Expansion	Up to 64GB (15000+ games)
Emulators Supported	21

Feature	Detail
Battery Capacity	3000mAh
Battery Life	Up to 6 hours
Charging Port	Type-C
Audio Port	3.5mm Headphone Jack
Controls	D-Pad, Dual Joysticks, A/B/X/Y Buttons, L/L1/R/R1 Buttons
Product Dimensions	6.37 x 1.41 x 5.5 inches
Item Weight	3.2 ounces
Material	Plastic

SUPPORT INFORMATION

For further assistance, technical support, or warranty inquiries, please refer to the manufacturer's official website or contact their customer service directly. Please have your product model and ASIN ready when contacting support.

- **Manufacturer:** XIXIMENG
- **Model:** R35 Plus
- **ASIN:** B0D25ZFGS9