



Manuals.plus /

› **Evermagin /**

› User Manual for C Shaped End Table with Charging Station

Evermagin STS-A4

User Manual for Evermagin C Shaped End Table with Charging Station

Model: STS-A4 | Brand: Evermagin



Figure 0: Evermagin C Shaped End Table with Charging Station.

INTRODUCTION

Thank you for purchasing the Evermagin C Shaped End Table with Charging Station. This versatile and compact side table is designed to enhance your living space, providing convenient surface area, integrated charging capabilities, and practical storage. Please read this manual carefully before assembly and use to ensure proper setup and safe operation.

IMPORTANT SAFETY INFORMATION

- **Children Safety:** Children are not allowed to climb on or play with the product.
- **Compatibility Check:** Measure the height and bottom dimensions of your sofa or bed to ensure the C-table fits your

furniture correctly before assembly.

- **Weight Capacity:** Do not exceed the maximum weight recommendation of 22 lbs on the tabletop.
- **Electrical Safety:** Ensure the power cord is not pinched or damaged. Do not overload the electrical outlets.
- **Stability:** Always ensure the table is placed on a stable, level surface. Use the adjustable feet to compensate for uneven floors.

PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Tabletop with integrated charging station
- C-shaped metal frame components
- Fabric storage bag
- Adjustable feet (4x)
- Assembly hardware (screws, bolts, etc.)
- Installation tool (Allen wrench/screwdriver)
- Assembly Guide (this manual)

ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward and can typically be completed by one person within 15 minutes. All necessary tools are included. Please follow the numbered steps carefully.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Refer to the parts list to ensure all items are present.
2. **Assemble the C-Shaped Frame:** Connect the vertical metal bars to the horizontal base bars using the provided screws and the included installation tool. Ensure all connections are secure but do not fully tighten yet.
3. **Attach the Tabletop:** Align the tabletop with the top of the assembled C-shaped frame. Secure it using the designated screws.
4. **Install the Storage Bag:** Attach the fabric storage bag to the designated points on the side of the table, typically using snaps or screws as indicated in the assembly diagram.
5. **Adjust Feet and Final Tightening:** Screw the four adjustable feet into the bottom of the frame. Once the table is in its desired location, adjust the feet to ensure stability and levelness. Fully tighten all screws.




Figure 1: Exploded view of the C Shaped End Table components, illustrating the assembly process.

OPERATING INSTRUCTIONS


Versatile Usage

The C-shaped design allows the table to slide easily under sofas, beds, or recliners, bringing the tabletop closer to you. It serves multiple functions:

 
- **End Table:** Perfect for holding lamps, drinks, or decorative items.
- **TV Tray Table:** Convenient for meals or snacks while watching television.
- **Laptop Table:** Provides a stable surface for working or browsing on a laptop or tablet.

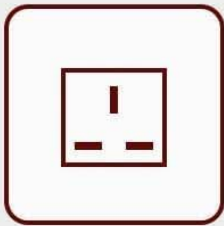

125V/12A
1 AC Outlet

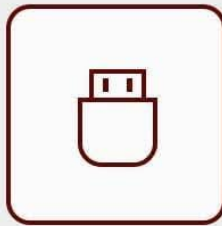 

5V/2.1A
1 USB / 1 Type-C

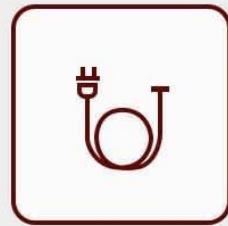 

5 FT
Power Cord

Figure 2: The table's versatile design supports various activities.

HEIGHTENED TOP DESIGN

The 26.5" interspace allow the table slide under the most couches and fit over the arms.



Figure 3: The tabletop provides sufficient space for your essentials.

Using the Charging Station

The integrated charging station provides convenient power access for your electronic devices.

1. **Power Connection:** Plug the table's 4.9 FT power cord into a standard 125V/12A wall outlet.
2. **AC Outlets:** Use the two standard AC power outlets for devices requiring direct wall power.
3. **USB Ports:** Utilize the USB-A (5V/2.1A) and Type-C (5V/2.1A) ports to charge compatible smartphones, tablets, and other USB-powered devices.

HANDY SIDE POCKETS

Expand your storage space to hold the accessories remove it when not in use.

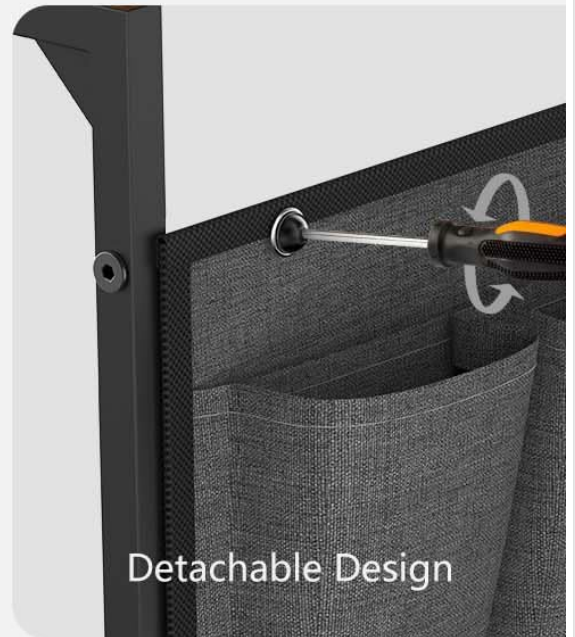 


Figure 4: The integrated charging station provides convenient power access.

Utilizing the Storage Bag

The side-mounted fabric storage bag offers ample space for organizing your essentials.

- The large main pocket (14.3" x 9.5") is ideal for tablets, newspapers, or magazines.
- The three smaller pockets are perfect for remote controls, mobile phones, or charging cables.

- The storage bag is detachable for easy cleaning or if not needed.

SUFFICIENT SPACE TO MEET NEEDS

Perfect little spot to hold laptop or an extra space for pad, books and snacks etc.



Laptop



iPad



Book



Drink



Snack



Lamp

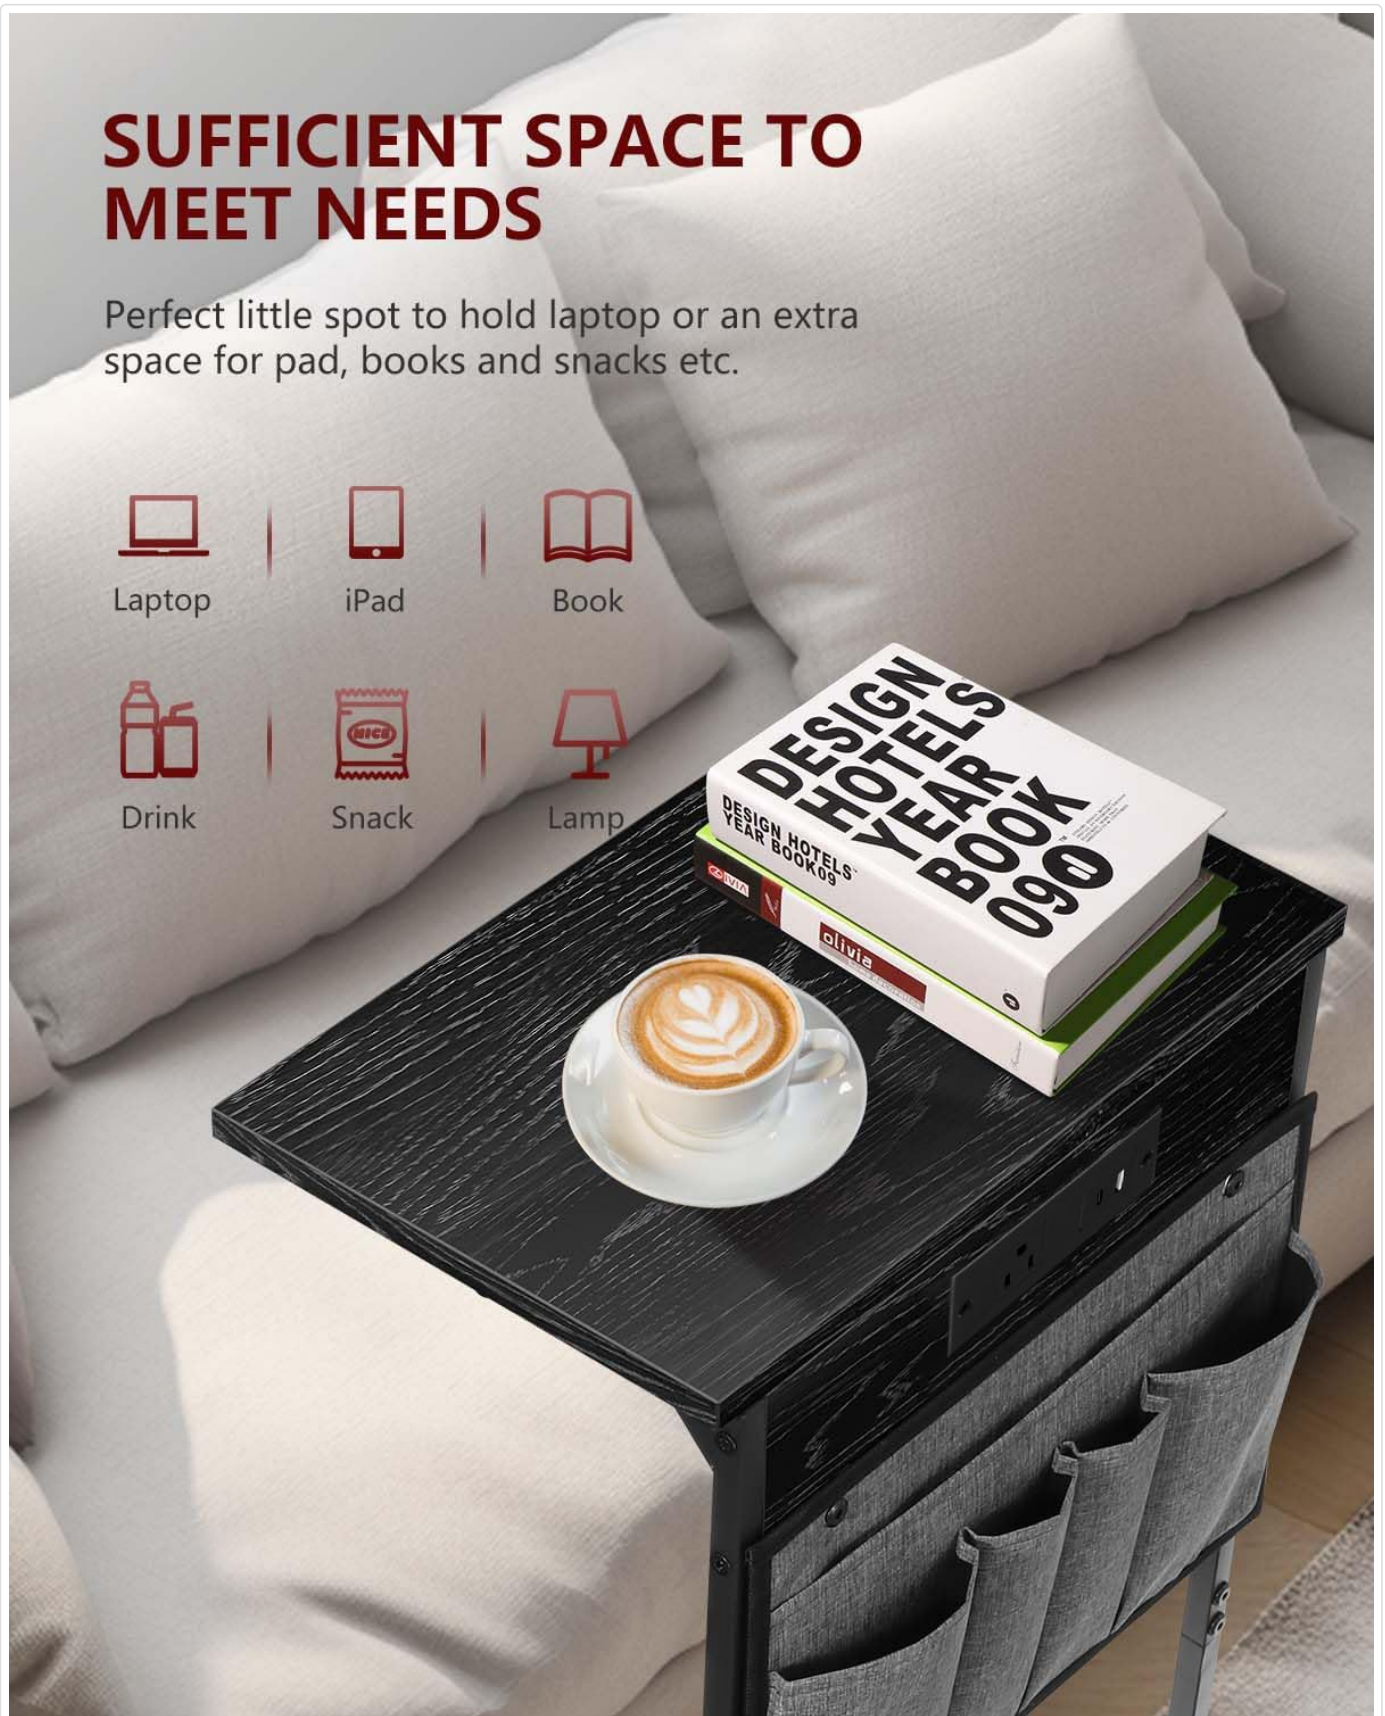 


Figure 5: The multi-pocket storage bag keeps your items organized and within reach.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the tabletop and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Fabric Bag:** The fabric storage bag can be detached and spot cleaned as needed. Allow to air dry completely before reattaching.

- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners to ensure the table remains stable.
- **Avoid Moisture:** Keep the charging station and electrical components dry. Do not expose the table to excessive moisture or direct sunlight for prolonged periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly/unstable.	Loose fasteners or uneven floor.	Tighten all assembly screws. Adjust the leveling feet on the bottom of the frame.
Charging ports are not working.	Table not plugged in, power outage, or overloaded circuit.	Ensure the table's power cord is securely plugged into a live wall outlet. Check your home's circuit breaker. Avoid overloading the outlets.
Parts do not fit during assembly.	Incorrect orientation of parts.	Refer to the assembly diagrams and ensure parts are oriented correctly before attempting to force them.

PRODUCT SPECIFICATIONS

- **Model Name:** STS-A4
- **Brand:** Evermagin
- **Color:** Ebonized Oak
- **Product Dimensions (D x W x H):** 11.6"D x 16"W x 28"H
- **Item Weight:** 7.4 Pounds
- **Maximum Weight Recommendation:** 22 Pounds
- **Frame Material Type:** Metal (Alloy Steel)
- **Top Material Type:** Engineered Wood
- **Power Cord Length:** Approximately 4.9 FT
- **Electrical Outlets:** 2x AC 125V/12A
- **USB Ports:** 1x USB-A (5V/2.1A), 1x Type-C (5V/2.1A)
- **Included Components:** Assembly Guide, Installation Tool



Figure 6: Key dimensions and features of the Evermagin C Shaped End Table.

WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or issues regarding your Evermagin C Shaped End Table, please contact our customer support team. Refer to your purchase documentation for specific warranty details. We are committed to providing high-quality products and excellent service.

Visit the official Evermagin Store for more information: [Evermagin Store](#)

