

Hormann 636771

User Manual

HORMANN WA 300 S4 MOTORIZATION

Model: 636771

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Hormann WA 300 S4 Motorization unit. Please read this manual thoroughly before installation and use, and keep it for future reference.

Safety Information

Always observe the following safety precautions to prevent injury or damage:

- Installation and repairs must only be carried out by qualified personnel.
- Disconnect power before performing any maintenance or repair work.
- Ensure all electrical connections comply with local regulations.
- Keep hands and loose clothing away from moving parts during operation.
- Do not allow children to play with or operate the motorization unit.
- Regularly inspect the unit for signs of wear or damage.

Setup and Installation

The Hormann WA 300 S4 Motorization unit is designed for specific applications. Professional installation is highly recommended to ensure proper function and safety.

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts are present according to the packing list.
2. **Mounting:** Securely mount the motorization unit to the designated structure using appropriate fasteners. Ensure the mounting surface is stable and capable of supporting the unit's weight and operational forces.
3. **Electrical Connection:** Connect the unit to the power supply according to the wiring diagram provided in the separate installation guide. Ensure the power supply matches the unit's requirements.
4. **Limit Switch Adjustment:** Adjust the limit switches to define the opening and closing positions of the door or gate. Refer to the detailed installation instructions for precise adjustment procedures.

5. **Testing:** After installation, perform several test cycles to ensure smooth operation and correct limit switch settings. Check for any unusual noises or movements.

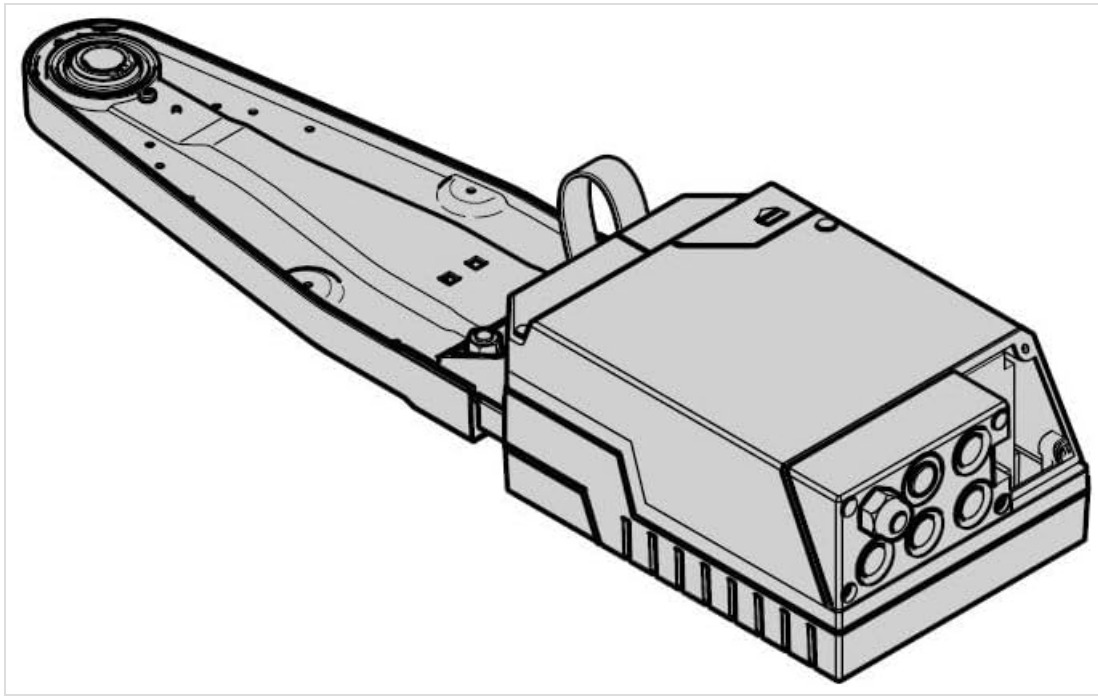


Figure 1: Overview diagram of the Hormann WA 300 S4 Motorization unit. This illustration shows the main body of the motor with its integrated control panel and the elongated arm mechanism, indicating its design for automated door or gate operation.

Operating Instructions

The Hormann WA 300 S4 Motorization unit is typically operated via a control panel or remote device. Specific operating modes and features depend on the connected control system.

- **Opening/Closing:** Press the designated button on your control device (e.g., remote control, wall switch) to initiate the opening or closing cycle.
- **Stop Function:** Press the button again during operation to stop the movement.
- **Safety Reversal:** The unit is equipped with safety features that will reverse movement if an obstruction is detected during closing. Ensure the path is clear before operation.
- **Manual Override:** In case of power failure, a manual override mechanism allows for manual operation of the door or gate. Refer to the separate manual for your specific door/gate system for instructions on engaging the manual override.

Maintenance

Regular maintenance ensures the longevity and reliable operation of your motorization unit.

- **Monthly Inspection:** Check all moving parts for signs of wear, corrosion, or damage. Ensure all fasteners are tight.
- **Cleaning:** Keep the unit clean and free from dust, dirt, and debris. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Lubrication:** Consult your specific door/gate system manual for lubrication requirements of associated mechanical components. The motorization unit itself typically requires no user lubrication.
- **Professional Service:** It is recommended to have the unit inspected by a qualified technician annually.

Troubleshooting

Before contacting service, review the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Unit does not respond to commands.	No power supply; remote control battery dead; safety sensor obstructed.	Check power connection; replace remote battery; clear sensor path.
Door/gate stops unexpectedly.	Obstruction detected; limit switch misadjusted.	Remove obstruction; re-adjust limit switches (professional assistance recommended).
Unusual noises during operation.	Worn components; lack of lubrication in associated mechanical parts.	Inspect for worn parts; lubricate mechanical components as per door/gate manual; contact service if noise persists.

If the problem persists after attempting these solutions, please contact a qualified service technician.

Specifications

Feature	Detail
Manufacturer	Hormann
Model Number	636771
Color	Black
Included Components	None (motorization unit only)
ASIN	B0D26FKN7F
Availability of Spare Parts	Information unavailable
First Available Date	April 19, 2024

Warranty and Support

For warranty information and technical support, please contact Hormann directly or refer to their official website. Keep your purchase receipt and model number (636771) handy when contacting support.

Official Hormann Website: www.hormann.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I reset the Hörmann WA 300 S4 garage door operator when it rises 5 cm, returns to its original position, and flashes 4 times?

On Hörmann door operators, a sequence of 4 flashes typically indicates a fault related to the safety devices, a limit switch misconfiguration, or an obstruction detection (force limitation activation). Because the door moves slightly (5...

[Read full answer](#)