

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nokia](#) /
- › [Nokia 225 4G \(2024\) Mobile Phone User Manual](#)

Nokia Nokia 225 4G (TA-1610)

Nokia 225 4G (2024) Mobile Phone User Manual

Model: TA-1610

1. INTRODUCTION

Welcome to the user manual for your Nokia 225 4G (2024) mobile phone. This guide provides essential information to help you get started, operate your device, and maintain it for optimal performance. The Nokia 225 4G is a compact and durable feature phone designed for reliable communication, featuring a long-lasting battery, Bluetooth connectivity, a rear camera, and classic entertainment like the Snake game.





Figure 1.1: Front view of the Nokia 225 4G (2024) mobile phone. This image displays the phone's screen, physical keypad, and the Nokia logo below the screen. The phone is a vibrant pink color.

2. SETUP

2.1. Inserting the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. If the battery is already inserted, remove it by lifting it from the notch.
3. Insert your SIM card(s) into the designated slot(s) with the gold contacts facing down. Ensure it clicks into place.
4. Insert the battery, aligning the contacts.
5. Replace the back cover, pressing firmly until it snaps into place.

2.2. Charging the Battery

- Connect the charger to a power outlet.
- Plug the charger cable into the phone's charging port.

- Allow the phone to charge until the battery indicator shows a full charge.
- Disconnect the charger once charging is complete.

2.3. Powering On and Off

- To power on: Press and hold the power key (usually the red end call key) until the phone vibrates and the Nokia logo appears.
- To power off: Press and hold the power key, then select "Power off" from the options on the screen.

3. OPERATING INSTRUCTIONS

3.1. Making and Receiving Calls

- **Making a call:** Enter the phone number using the keypad and press the green call key.
- **Receiving a call:** Press the green call key to answer an incoming call. Press the red end call key to reject it.

3.2. Sending and Receiving Messages

- Navigate to the "Messages" menu.
- Select "Create message" or "New message".
- Enter your message using the keypad.
- Enter the recipient's phone number or select from contacts.
- Select "Send".

3.3. Using the Camera

The Nokia 225 4G features a rear camera for capturing photos.

1. From the main menu, select "Camera".
2. Frame your shot using the screen as a viewfinder.
3. Press the center navigation key or a designated camera key to take a photo.





Figure 3.1: Back view of the Nokia 225 4G (2024) mobile phone. This image highlights the rear camera lens and the LED flash module located on the upper part of the phone's pink back panel.

3.4. Bluetooth Connectivity

- Go to "Settings" > "Connectivity" > "Bluetooth".
- Turn Bluetooth "On".
- Select "Paired devices" or "Search for devices" to connect to other Bluetooth-enabled devices like headsets or speakers.

3.5. Playing Music

You can play music files stored on your phone or a memory card.

- Navigate to the "Music" or "Media Player" application.
- Browse your music library and select a track to play.
- Use the navigation keys to control playback (play, pause, skip).

3.6. Snake Game

Enjoy the classic Snake game pre-installed on your device.

- Find "Games" in the main menu.
- Select "Snake" to start playing.
- Use the navigation keys to control the snake's direction.

4. MAINTENANCE

4.1. Battery Care

- Avoid exposing the battery to extreme temperatures.
- Use only Nokia-approved chargers.
- Do not puncture, damage, or disassemble the battery.
- For optimal battery life, avoid frequent full discharges and charges.

4.2. Cleaning the Device

- Wipe the phone's surface with a soft, slightly damp cloth.
- Avoid using harsh chemicals, cleaning solvents, or strong detergents.
- Keep the charging port and headphone jack free of dust and debris.

5. TROUBLESHOOTING

If you encounter issues with your Nokia 225 4G, try the following steps:

- **Phone not turning on:** Ensure the battery is charged. Try connecting the charger and waiting a few minutes before attempting to power on again.
- **Poor signal or no network:** Check that your SIM card is correctly inserted. Move to an area with better network coverage. Contact your service provider if the issue persists.
- **Battery not charging:** Verify that the charger is properly connected to both the phone and the power outlet. Try a different power outlet or charger if available.
- **Phone frozen or unresponsive:** Remove the battery, wait a few seconds, and then reinsert it. Power on the phone. This performs a soft reset.

6. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model Name	Nokia 225 4G (TA-1610)
Display Size	2.4 Inches
Operating System	S30+
CPU Model	Snapdragon
CPU Speed	400 MHz
Storage Capacity	32 GB
Connectivity	Bluetooth
Battery Type	1 Lithium-ion (included)
Color	Pink





Figure 6.1: Side view of the Nokia 225 4G (2024) mobile phone. This image shows the phone's slim design and the texture of its pink casing from a side angle.

7. WARRANTY AND SUPPORT

Your Nokia 225 4G (2024) mobile phone comes with a manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Nokia support website.

For further assistance, technical support, or to find service centers, please visit the official Nokia support website or contact their customer service.

- **Official Nokia Support:** www.nokia.com/phones/support (Link provided as an example, actual link may vary)

