

[Manuals.plus](#) /

› [Arno](#) /

› Arno Mega Digital Air Fryer AFD7 7.5L - Instruction Manual

Arno AFD7

Arno Mega Digital Air Fryer AFD7 7.5L - Instruction Manual

Model: AFD7 (1510002541)

1. INTRODUCTION

Thank you for choosing the Arno Mega Digital Air Fryer AFD7. This appliance is designed to prepare a variety of delicious and healthy meals with little to no oil, utilizing Hot Air technology for crispy results. Please read this manual carefully before first use to ensure safe and optimal operation. Keep this manual for future reference.



Image: Front view of the Arno Mega Digital Air Fryer, showcasing its sleek black and stainless steel design with a digital control panel and handle.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the appliance.
- This appliance is for household use only.

3. PRODUCT COMPONENTS

The Arno Mega Digital Air Fryer AFD7 consists of the following main components:

- Main Unit with Digital Control Panel
- Removable Frying Basket
- Removable Grill Plate (Non-stick)
- Power Cord



Image: A detailed view of the Arno Mega Digital Air Fryer's digital control panel with various food icons, and an illustration of the removable basket and grill plate. The basket has a large 25cm x 25cm cooking area.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance.
2. **Cleaning:** Wash the frying basket and grill plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space at the back and sides of the appliance, and 10 cm (4 inches) above it, to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet. Ensure the voltage matches the appliance's requirements (110V for this model).
5. **Pre-heating (Optional First Use):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smoke or odor may be present, which is normal.

5. OPERATING INSTRUCTIONS

General Operation

1. Place the grill plate inside the frying basket.
2. Place the food items into the frying basket. Do not overfill the basket to ensure even cooking.
3. Slide the frying basket back into the appliance. Ensure it is fully inserted.
4. Plug in the appliance. The digital display will illuminate.
5. Select a preset program or manually set the temperature and time.
6. Press the Start/Stop button to begin cooking.
7. During cooking, you can pull out the basket to shake or turn food. The appliance will pause automatically and resume when the basket is reinserted.
8. Once the timer reaches zero, the appliance will beep, indicating cooking is complete.

9. Carefully pull out the basket and transfer the cooked food to a plate. Use heat-resistant tongs.

Digital Control Panel and Preset Programs

The Arno Mega Digital Air Fryer features a digital control panel with 8 pre-defined programs for convenience. You can also adjust temperature and time manually.



Image: Close-up of the digital control panel, showing temperature and time settings, along with various food icons representing preset programs. A hand is shown interacting with the touch controls.

• **Preset Programs:** The 8 pre-defined programs are optimized for:

- French Fries
- Steak
- Chicken
- Shrimp
- Fish
- Pizza

- Vegetables
- Desserts

To use a preset, simply touch the corresponding icon on the digital panel. The appliance will automatically set the optimal temperature and time.

- **Manual Mode:** To manually adjust settings, use the temperature and time adjustment buttons/knob. The temperature can be set between 40°C and 200°C (105°F - 400°F), and the timer up to 60 minutes.
- **Start/Stop Button:** Press to start or pause the cooking process.

FÁCIL DE USAR



Image: The Arno Mega Digital Air Fryer on a kitchen counter, surrounded by various dishes prepared using its 8 preset programs, including french fries, roasted chicken, a tart, and a pumpkin dish.

The 7.5L capacity allows for cooking large portions, serving up to 8 people. The Hot Air technology ensures uniform heat circulation for crispy and succulent results without the need for oil.

ULTRA CAPACIDADE DE 7,5 LITROS

Serve até 8 pessoas



Image: The Arno Mega Digital Air Fryer with its large 7.5L basket pulled out, containing a cooked dish, demonstrating its capacity to serve up to 8 people.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your Arno Mega Digital Air Fryer.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Basket and Grill Plate:** The frying basket and grill plate have a non-stick coating and are easy to clean. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak them in hot water for about 10 minutes before cleaning.
3. **Inside of the Appliance:** Wipe the inside of the appliance with a damp cloth. Do not use abrasive cleaners or steel wool.
4. **Outside of the Appliance:** Clean the exterior with a damp cloth.
5. **Heating Element:** Use a cleaning brush to remove any food residues from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance.

FÁCIL DE LIMPAR



Image: A hand removing the grill plate from the frying basket, highlighting the easy-to-clean non-stick coating and removable design.

7. TROUBLESHOOTING

If you encounter any issues with your Arno Mega Digital Air Fryer, please refer to the following table before contacting support.

Problem	Possible Cause	Solution
The air fryer does not work.	The appliance is not plugged in. The basket is not inserted correctly.	Plug the main plug into a grounded wall socket. Slide the frying basket into the appliance correctly.
Food is not cooked evenly.	Too much food in the basket. Food items are overlapping.	Reduce the amount of food per batch. Shake the basket halfway through cooking or turn food items.

Problem	Possible Cause	Solution
Food is not crispy.	Not enough oil (if applicable for certain foods). Temperature too low or cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke comes from the appliance.	Fat residues from previous use. Cooking fatty ingredients.	Clean the basket and grill plate thoroughly after each use. Remove excess oil from food before air frying.

8. SPECIFICATIONS

Feature	Detail
Brand	Arno
Model Name	Mega Digital
Model Number	1510002541 (AFD7)
Capacity	7.5 Liters
Color	Inox (Stainless Steel)
Power Output	1700 Watts
Voltage	110 Volts
Temperature Range	40°C - 200°C (105°F - 400°F)
Timer	Up to 60 minutes with automatic shut-off
Special Features	8 Preset Programs, Digital Control Panel, Hot Air Technology, Non-stick Coating, Programmable
Material	Stainless Steel
Product Dimensions (L x W x H)	35.5 x 44 x 35.5 cm (approximately 14 x 17.3 x 14 inches)
Weight	5.7 kg (approximately 12.5 lbs)
Energy Efficiency Class	A

9. WARRANTY AND SUPPORT

This Arno Mega Digital Air Fryer comes with a manufacturer's warranty. Please refer to the warranty certificate included in your product packaging for detailed terms and conditions.

For technical assistance, spare parts, or any questions regarding your appliance, please contact Arno customer support. Contact information can typically be found on the official Arno website or on your warranty card.

Included in the package: 01 oil-free fryer + 01 removable basket + 01 instruction manual + 01 warranty certificate.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question