



[Manuals.plus](#) /

> [YosaToo](#) /

> YosaToo Kids Print Instant Camera User Manual

YosaToo Kids Print

YosaToo Kids Print Instant Camera User Manual

Model: Kids Print (799974093698)

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your YosaToo Kids Print Instant Camera. Designed for children aged 3-12, this digital camera features instant photo printing, a 3.5-inch display, and various creative functions. Please read this manual thoroughly before operating the camera and retain it for future reference.



Image 1.1: YosaToo Kids Print Instant Camera and included accessories, which typically include three rolls of print paper, a microSD card, a lanyard, and a Type-C charging cable.

2. PRODUCT OVERVIEW

2.1 Components

The YosaToo Kids Print Instant Camera includes the following main components:

- Camera Body with integrated instant printer
- 3.5-inch LCD Screen
- Front-facing camera lens
- Control buttons (Power, Shutter, Navigation, Menu, Print)
- MicroSD card slot
- Type-C charging port
- Speaker

2.2 Key Features

- **Instant Print Function:** Prints black and white photos immediately after capture using thermal technology.
- **High-Resolution Display:** 3.5-inch screen for clear viewing of photos and videos.
- **Rechargeable Battery:** Built-in Lithium Ion battery, charged via Type-C port.
- **Creative Modes:** Includes 5 filters, 8 mirror effects, and 18 photo frames/stickers.
- **Video Recording:** Supports video capture (1080p or 720p resolution).
- **Digital Zoom:** Up to 16x digital zoom.
- **Time-Lapse Photography:** Options for 3s, 5s, and 10s intervals.
- **Entertainment:** Built-in games and MP3 playback functionality.

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the camera battery. The camera uses a built-in Lithium Ion battery.

1. Locate the Type-C charging port on the camera.
2. Connect the provided Type-C USB cable to the camera and the other end to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate. Once fully charged, the indicator light may change color or turn off.
4. A full charge typically provides 2-3 hours of photo-taking time.



Image 3.1: The camera connected via its Type-C port to a laptop for charging.

3.2 Loading Print Paper

The camera uses thermal printing paper. Ensure the paper is loaded correctly for proper printing.

1. Gently open the paper slot cover on the side of the camera.
2. Insert a roll of thermal print paper into the compartment. Ensure the smooth side of the paper roll is facing upwards, as this is the side that will be printed on.
3. Close the paper slot cover securely until it clicks into place.
4. The camera is now ready for instant printing.



Image 3.2: Visual instructions for loading print paper: 1. Open the paper slot. 2. Place paper with the smooth side up. 3. Close the cover.

3.3 Inserting a Memory Card

A MicroSD card (often included, but may need to be purchased separately) is required to save photos and videos. The camera supports various capacities.

1. Locate the MicroSD card slot on the camera.
2. Insert the MicroSD card into the slot with the metal contacts facing down (or as indicated by a diagram on the camera).
3. Push the card gently until it clicks into place. To remove, push it again until it springs out.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the Power button (usually located on the top or side) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

4.2 Taking Photos

1. Ensure the camera is in photo mode. Use the Mode button (if available) or navigation buttons to select the camera icon.
2. Frame your shot using the 3.5-inch screen.
3. Press the Shutter button (usually a prominent button on top) to capture the photo.
4. If instant print is enabled, the photo will print automatically.

4.3 Printing Photos

The camera offers instant printing and adjustable print density.

- **Instant Print:** When enabled, photos print automatically after capture. This setting can usually be toggled in the camera's menu.
- **Adjusting Print Density:** Navigate to the print settings in the camera menu. You can select Low, Middle, or High density for your prints to achieve desired clarity.



Image 4.1: Options for adjusting print density: Low, Middle, and High, affecting the darkness of the printed image.

4.4 Recording Videos

1. Switch the camera to video recording mode (look for a video camera icon).
2. Press the Shutter button to start recording. A timer or indicator will show recording is active.
3. Press the Shutter button again to stop recording. Videos are saved to the MicroSD card.



Image 4.2: The camera's screen displaying video recording mode, capturing children playing.

4.5 Creative Features (Filters, Frames, Mirror Effects)

Enhance your photos with various creative options.

- **Filters:** The camera includes 5 different color filters to change the mood of your photos.
- **Mirror Effects:** Apply 8 unique mirror effects for artistic or fun distortions.
- **Frames & Stickers:** Choose from 18 built-in frames and stickers to decorate your pictures.
- These options are typically accessible via the camera's menu or dedicated buttons while in photo mode.



Image 4.3: A visual representation of the various filters, frames, and mirror effects that can be applied to photos.

4.6 Digital Zoom

The camera features up to 16x digital zoom.

- While in photo or video mode, use the zoom buttons (often marked with '+' and '-' or up/down arrows) to adjust the zoom level.
- Note that digital zoom magnifies the image digitally, which may reduce image quality at higher levels.



Image 4.4: Demonstrating the camera's digital zoom capabilities at 4x, 8x, and 16x magnification.

4.7 Time-Lapse Photography

Capture a series of photos over time with the time-lapse function.

- Access the time-lapse setting in the camera menu.
- Select your desired interval: 3 seconds, 5 seconds, or 10 seconds.
- The camera will automatically take photos at the chosen interval.



4.8 Games and MP3 Playback

The camera includes entertainment features for children.

- **Games:** Access the games menu to play pre-installed games.
- **MP3 Playback:** Load MP3 audio files onto the MicroSD card to play music through the camera's speaker.



Image 4.6: The camera screen showing various game options and an MP3 playback interface.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens and screen, use a microfiber cloth specifically designed for optics. Do not use abrasive cleaners or solvents.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

- Remove the MicroSD card if storing for extended periods.

5.3 Print Paper Refills

The camera uses standard thermal print paper. Ensure you purchase compatible refills when needed.

Safe & Affordable Printing Paper
Take pictures whenever you want, and don't worry cost

- ✓ About \$0.02 per paper
- ✓ 3Rolls printing saper
- ✓ Friendly material to store
- ✓ Clear pictures

2.2in

Image 5.1: Thermal printing paper rolls, which are compatible with the camera.

6. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source and try again.
- **Photos not printing:**
 - Check if print paper is loaded correctly and the smooth side is facing up.
 - Ensure there is enough paper in the compartment.
 - Verify that the instant print function is enabled in the settings, or try printing manually from the gallery.
- **Poor print quality:**
 - Adjust the print density setting (Low, Middle, High) in the camera menu.

- Ensure the print head is clean.
- Use fresh, compatible thermal paper.
- **Cannot save photos/videos:** Ensure a MicroSD card is inserted correctly and has sufficient free space.
- **Camera frozen/unresponsive:** Press and hold the Power button for an extended period (e.g., 10-15 seconds) to force a restart.

7. SPECIFICATIONS

Feature	Detail
Brand	YosaToo
Model Name	Kids Print
Model Number	799974093698
Screen Size	3.5 Inches
Display Resolution Maximum	12 MP
Photo Sensor Technology	CMOS
Total Still Resolution	12 MP
Zoom	16x Digital Zoom
Image Stabilization	Digital
Supported File Format	JPEG (Photos), MP4 (Video)
Battery Type	Lithium Ion (included)
Charging Port	Type-C
Item Weight	260 Grams
Special Features	Time-lapse, Games, MP3 Playback
Water Resistance Level	Not Water Resistant

8. WARRANTY AND SUPPORT

Your YosaToo Kids Print Instant Camera comes with a warranty and support:

- **Warranty:** 30 days free replacement or refund.
- **Technical Support:** Lifetime technology service support.
- For warranty claims or technical assistance, please contact YosaToo customer service through your purchase platform or the official YosaToo website.