

Gammeefy JC210

Gammeefy JC200 Wireless Controller for Nintendo Switch/OLED - User Manual

1. INTRODUCTION

Thank you for choosing the Gammeefy JC200 Wireless Controller. This controller is designed to enhance your gaming experience on Nintendo Switch and Switch OLED consoles, offering advanced features such as Hall effect joysticks for precise control, customizable RGB lighting, and an ergonomic design for extended comfort. Please read this manual carefully to ensure proper use and optimal performance of your new controller.

2. PRODUCT OVERVIEW

The Gammeefy JC200 controller integrates seamlessly with your Nintendo Switch, providing a full-size grip and a range of features for immersive gameplay. Key components include:

- **Hall Effect Joysticks:** For precise, drift-free control.
- **Action Buttons (A/B/X/Y):** Standard gaming input.
- **Directional Pad (D-Pad):** For directional input.
- **Shoulder Buttons (L/R) & Triggers (ZL/ZR):** For additional in-game actions.
- **HOME Button:** For console functions and pairing.
- **Capture Button:** To take screenshots or record video clips.
- **Turbo Button:** To activate rapid-fire functions.
- **LED Indicators:** For connection status and lighting effects.
- **USB-C Charging Port:** For recharging the controller.
- **Game Card Slots:** Four integrated slots on the back for game storage.
- **Console Carabiner:** Securely locks the console in place.



Figure 1: Gammeefy JC200 Wireless Controller with a Nintendo Switch console attached, showcasing its ergonomic design and button layout.

3. SETUP

3.1 First-Time Wireless Connection

1. Ensure your Nintendo Switch/OLED console is powered on.
2. On the controller, press and hold the **HOME** button for approximately 3 seconds.
3. The red signal light on the controller will flash, indicating it is in pairing mode.
4. The controller will automatically connect to your Switch console. Once connected, the signal light will stabilize.

3.2 Waking Up the Console

To wake up your Nintendo Switch/OLED console from sleep mode using the controller:

- Simply press the **HOME** button on the controller for approximately 0.5 seconds.

3.3 Attaching the Console

Carefully slide your Nintendo Switch/OLED console into the controller's central slot. Ensure it is securely seated. The integrated console carabiner on the back helps lock the console in place, and anti-scratch pads protect the console's surface.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The controller features standard button layouts for intuitive gameplay. The ergonomic design and full-size grip ensure comfort during extended gaming sessions. All joysticks and buttons are positioned for easy access and optimal control.

4.2 Lighting Effects

The controller offers customizable lighting with 4 modes and 8 colors, resulting in 19 lighting effects. These modes include:

- **RGB Mode:** Static color display.
- **Flash Mode:** Rapid color changes.
- **Breathing Mode:** Colors fade in and out.
- **Cyclic Breathing Mode:** Colors cycle through breathing effect.

Refer to the quick start guide or specific button combinations (usually involving a dedicated light button or a combination with the Turbo button) to cycle through modes and colors according to your preference.

4.3 Turbo Function

The Turbo function allows for continuous, rapid input of a button press, useful in games requiring fast, repeated actions. The controller supports both automatic and manual Turbo modes.

- **Activating Turbo:** Press and hold the **Turbo** button, then press the desired action button (e.g., A, B, X, Y, L, R, ZL, ZR). Release both buttons. The selected button will now have Turbo activated.
- **Adjusting Turbo Speed:** While Turbo is active, press the **Turbo** button and move the right joystick up or down to cycle through 3 speeds: 5, 12, or 20 shots per second.
- **Deactivating Turbo:** Press and hold the **Turbo** button, then press the action button with Turbo activated. Release both buttons.

4.4 Vibration and Motion Control

The controller features adjustable vibration feedback and a 6-axis gyroscope for motion control.

- **Adjustable Vibration:** Experience realistic feedback with 3 levels of adjustable vibration intensity. Consult the quick start guide for button combinations to adjust vibration levels.
- **Motion Control:** The 6-axis gyroscope provides sensitive and responsive motion control, ideal for games that utilize gravity sensing, such as *The Legend of Zelda: Breath of the Wild* or *Mario Kart 8 Deluxe*.

5. CHARGING

The Gammeeify JC200 controller is equipped with a high-capacity 1000 mAh battery, providing up to 10 hours of gameplay in light mode.

- Connect the included "Y" charging cable to the controller's USB-C port and a power source.
- The "Y" cable allows for simultaneous charging of both the controller and the Nintendo Switch console when attached.
- The LED indicators on the controller will show charging status and turn off or change color once fully charged.

6. MAINTENANCE

To ensure the longevity and optimal performance of your controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller's surface. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** The controller features anti-scratch pads on the contact surface with the console and a console carabiner to secure the console, preventing physical damage during intense gameplay.
- **Game Card Slots:** Utilize the four integrated game card slots on the back for convenient storage of your favorite game cartridges.

7. TROUBLESHOOTING

If you encounter any issues with your Gammeefy JC200 controller, please refer to the following common solutions:

- **Controller Not Connecting:** If the controller fails to connect wirelessly, ensure it is charged. Then, try re-pairing by holding the **HOME** button for 3 seconds until the red signal light flashes, and allow it to reconnect.
- **Console Not Waking Up:** Ensure the controller is charged and try pressing the **HOME** button for 0.5 seconds. If it still doesn't respond, try re-pairing the controller.
- **Charging Issues:** Verify that the "Y" charging cable is securely connected to both the controller and a working power source. Ensure the USB-C port on the controller is free of debris.
- **Input Lag or Unresponsiveness:** Ensure the controller is fully charged. If the issue persists, try restarting your Nintendo Switch console and then re-pairing the controller.
- **Drift Issues:** The Hall effect joysticks are designed to prevent drift. If you experience any joystick drift, ensure the controller's firmware is up to date (if applicable, check the manufacturer's website for updates) and try recalibrating the joysticks through your Nintendo Switch system settings.

If these steps do not resolve your issue, please contact customer support for further assistance.

8. SPECIFICATIONS

- **Model Number:** JC210
- **Dimensions:** 31.34 x 12.6 x 5.59 cm
- **Weight:** 912 g
- **Connectivity:** Wireless
- **Battery Capacity:** 1000 mAh
- **Playtime:** Up to 10 hours (in light mode)
- **Special Features:** Hall Effect Joysticks, Adjustable Vibration (3 levels), 6-Axis Gyroscope Motion Control, Customizable RGB Lighting (4 modes, 8 colors, 19 effects), Turbo Function (3 speeds), 4 Integrated Game Card Slots, Console Carabiner, Anti-scratch pads.

9. WARRANTY AND SUPPORT

Gammeefy is committed to providing high-quality products and customer satisfaction. If you require technical assistance or have any questions regarding your JC200 controller, please do not hesitate to contact our customer support team. We provide dedicated technical support and after-sales service to ensure your gaming experience is worry-free.

Please refer to your purchase documentation or the official Gammeefy website for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question