

[Manuals.plus](#) /

› [SOS ACCESSOIRE](#) /

› SOS ACCESSOIRE Washing Machine Drain Plug 1320711003 Instruction Manual

SOS ACCESSOIRE 1320711003

SOS ACCESSOIRE Washing Machine Drain Plug 1320711003

Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective installation, operation, and maintenance of your SOS ACCESSOIRE Washing Machine Drain Plug, model 1320711003. Please read this manual thoroughly before installation and keep it for future reference.

SAFETY INFORMATION

- Always disconnect the washing machine from the power supply before attempting any installation or maintenance.
- Wear appropriate personal protective equipment (PPE) such as gloves and eye protection.
- Ensure the work area is well-lit and clear of obstructions.
- If you are unsure about any step, consult a qualified technician.
- Keep small parts away from children.

PRODUCT OVERVIEW

The SOS ACCESSOIRE Washing Machine Drain Plug (model 1320711003) is a replacement component designed to prevent water discharge from washing machines during the spin cycle. It ensures proper sealing of the drain system.



Image description: A close-up view of the SOS ACCESSOIRE Washing Machine Drain Plug, showing its cylindrical shape and sealing gasket. The plug is made of stainless steel.

COMPATIBILITY

This drain plug is compatible with various washing machine brands and models. Verify your washing machine's model number against the following compatible references:

- **Compatible Brands:** ARTHUR MARTIN ELECTROLUX, ELECTROLUX, FAURE, ARTHUR MARTIN, ZANUSSI, AEG.
- **Compatible References:** 1260599004, 1320711003.

Always confirm compatibility with your appliance's existing part or manufacturer's specifications before installation.

INSTALLATION INSTRUCTIONS

1. **Preparation:** Disconnect the washing machine from the main power supply and turn off the water inlet. Position towels or a shallow pan to catch any residual water.
2. **Access the Drain Pump Filter:** Locate the drain pump filter cover, usually at the bottom front of the washing machine. Open the cover.
3. **Drain Residual Water:** Carefully unscrew the existing drain plug or open the small hose to drain any remaining water from the machine.
4. **Remove Old Plug:** Once all water is drained, remove the old drain plug. Inspect the area for any debris or foreign objects and clean thoroughly.
5. **Install New Plug:** Insert the new SOS ACCESSOIRE drain plug (model 1320711003) into the drain pump filter housing. Ensure it is seated correctly and screw it in firmly by hand until snug. Do not overtighten.
6. **Test for Leaks:** Reconnect the water supply and power. Run a short rinse or drain cycle and carefully check for any leaks around the newly installed plug. If leaks occur, re-tighten the plug or re-install, ensuring proper seating.

Note: Some washing machine models may require specific tools or procedures. Refer to your washing machine's original service manual for detailed instructions if needed.

OPERATION

The drain plug functions automatically as part of your washing machine's drain system. Once correctly installed, it ensures that water is retained in the drum during wash and rinse cycles and is properly discharged during the spin and drain cycles. No manual operation of the plug itself is required during normal use.

MAINTENANCE

- **Regular Inspection:** Periodically check the drain plug for signs of wear, cracks, or damage. Inspect the rubber gasket for deterioration, which can lead to leaks.
- **Cleaning:** If you notice reduced drainage efficiency, the drain pump filter (and by extension, the drain plug area) may be clogged. Disconnect power, drain water, and remove the plug as per installation steps. Clean any lint, debris, or foreign objects from the filter and plug area.
- **Replacement:** If the drain plug or its gasket shows significant wear or damage, replace it with a genuine SOS ACCESSOIRE part to ensure optimal performance and prevent leaks.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Water leak from drain plug area	Plug not tightened correctly, damaged gasket, or debris preventing seal.	Disconnect power, re-tighten plug. Inspect gasket for damage; replace if necessary. Clean debris from housing.
Washing machine not draining properly	Drain pump filter (and plug area) clogged with debris.	Disconnect power, remove plug, and clean the drain pump filter and surrounding area thoroughly.
Plug feels loose after installation	Incorrect plug size or threading, or not fully seated.	Verify compatibility with your washing machine model. Ensure the plug is fully inserted and tightened by hand.

SPECIFICATIONS

- **Model Number:** 1320711003
- **Brand:** SOS ACCESSOIRE
- **Material:** Stainless Steel
- **Product Weight:** 20 g
- **Maximum Pressure:** 10 Bar
- **Specific Use:** Prevents water discharge from washing machines during the spin cycle.

Note: Specifications are subject to change without prior notice.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your SOS ACCESSOIRE Washing Machine Drain Plug, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: SOS Accessoire

Contact: Refer to the SOS Accessoire official website or your purchase documentation for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D29YXG54>

More documents and user manuals: <https://manuals.plus/>