

h320

Generic Cordless Vacuum Cleaner H320 User Manual

Model: H320 | Brand: Generic

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space where vapors are given off from oil base paints, paint thinner, mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Store indoors.

2. PRODUCT OVERVIEW

The Generic Cordless Vacuum Cleaner H320 is designed for efficient home cleaning with its powerful brushless motor and versatile features. Below are the main components and their functions.

Key Features:

- **Powerful 28Kpa Suction with 380W Brushless Motor:** Provides deep cleaning for carpets, hard floors, and upholstery. The motor is energy-efficient and durable.
- **Up to 50 Minutes Runtime with Detachable Battery:** Allows for extended cleaning sessions without frequent recharging. The detachable battery design enables easy swapping for continuous power.
- **Versatile Attachments for Comprehensive Cleaning:** Includes a motorized floor brush, crevice tool, and dusting brush for multi-surface cleaning, reaching hard-to-reach areas, and delicate surfaces.
- **Bright LED Headlights on Motorized Brush Head:** Illuminates dark corners and under furniture, revealing hidden dust and debris for a more thorough and accurate clean.
- **Lightweight, Cordless, and Ergonomic Design:** Ensures effortless maneuverability around furniture and obstacles, reducing physical strain. The cord-free design offers flexibility for quick clean-ups.
- **Multi-Stage Filtration System:** Captures 99.99% of fine dust and allergens, including pollen and pet dander, improving indoor air quality. Filters are washable for easy maintenance.
- **Quiet Operation:** Advanced motor technology ensures quiet cleaning, suitable for homes with children and pets.

Product Components:



Image: Generic Cordless Vacuum Cleaner H320 with its main body, extension wand, motorized brush head, and various attachments.



Image: The Generic Cordless Vacuum Cleaner H320 assembled as a stick vacuum, showcasing its sleek design.

3. SETUP

3.1 Assembly

1. **Attach the Extension Wand:** Align the extension wand with the main unit's suction port and push until it clicks securely into place.
2. **Attach the Motorized Brush Head:** Connect the motorized brush head to the bottom of the extension wand, ensuring it clicks firmly.
3. **Install the Battery:** Slide the detachable battery pack into the designated slot on the main unit's handle until it locks.

3.2 Initial Charging

Before first use, fully charge the vacuum cleaner for approximately 4-5 hours. The battery indicator on the main unit will show charging progress.

- Connect the charging adapter to the charging port on the main unit.
- Plug the adapter into a wall outlet.
- The battery indicator lights will illuminate and show progress. All lights will be solid when fully charged.

Video: A short demonstration of the BUTY BULU LKW15 Cordless Vacuum Cleaner, showcasing its assembly and basic operation. This video is provided by the seller.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Mode Selection

- **Power On:** Press the power button on the main unit to turn on the vacuum. It will start in standard mode.
- **Adjust Suction Mode:** Press the mode selection button to cycle through Standard, Strong, and Hyper modes. The display will indicate the current mode and remaining battery life.
- **Power Off:** Press the power button again to turn off the vacuum.



Image: The vacuum's display panel indicating different suction modes (Standard, Strong, Hyper) and corresponding battery runtimes (50, 30, 20 minutes).

4.2 Using Attachments

The H320 comes with various attachments for different cleaning needs:

- **Motorized Floor Brush:** Ideal for both hard floors and carpets. The integrated LED headlights illuminate debris for thorough cleaning.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **Dusting Brush:** Suitable for delicate surfaces, upholstery, and car interiors.



Image: The vacuum's motorized brush head effectively cleaning different types of debris from a rug, including dust, pet hair, crumbs, and pet food.



Image: The vacuum's brush head demonstrating its 180-degree left/right and 90-degree up/down swivel capabilities, along with bright LED headlights illuminating the floor.



Image: The vacuum in handheld mode, demonstrating the use of the crevice nozzle for tight spaces and the dusting brush for cleaning upholstery.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dustbin

- Ensure the vacuum is turned off.
- Press the dustbin release button to detach the dustbin from the main unit.
- Position the dustbin over a trash can and press the bottom release button to open the lid and empty the contents.
- Close the dustbin lid and reattach it to the main unit until it clicks.



Image: A hand operating the one-click dust removal feature of the vacuum, emptying collected debris into a waste bin.

5.2 Cleaning Filters

The multi-stage filtration system includes washable filters. Clean them regularly to maintain suction power.

- Remove the dustbin as described above.
- Twist and pull out the filter assembly from the dustbin.
- Separate the HEPA filter and the metal mesh filter.
- Rinse both filters under cold running water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.

5.3 Cleaning the Brush Roll

- Ensure the vacuum is off and disconnected from the extension wand.
- Locate the brush roll release tab on the motorized brush head.
- Remove the brush roll and use scissors or a cleaning tool to cut away any tangled hair or debris.
- Reinsert the clean brush roll until it locks into place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power	Dustbin is full, filters are clogged, or blockage in the hose/brush head.	Empty dustbin, clean filters, check for and remove blockages.
Brush roll not spinning	Hair or debris tangled in brush roll, or brush roll is jammed.	Clean the brush roll, remove any obstructions.
Short runtime	Using high suction mode, or battery is aging.	Use lower suction modes for longer runtime. Consider battery replacement if performance significantly degrades.

7. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Name	H320
Special Feature	Bagless
Filter Type	HEPA Filter
Included Components	Crevice Tool
Is Cordless?	Yes
Capacity	2 Liters
Wattage	380 watts
Maximum Suction	28Kpa (6.97 Inches)
Form Factor	Stick
Color	Pink
Product Dimensions	28"L x 15"W x 68"H
Noise Level	80 Decibels

Feature	Detail
Battery Life	Up to 50 minutes
Manufacturer	homeika
Controller Type	Push Button
Control Method	Touch
Portable	Yes
Number of Power Levels	1 (with multiple suction modes)
Indoor/Outdoor Usage	Indoor
Power Source	Battery Powered

8. WARRANTY AND SUPPORT

This Generic Cordless Vacuum Cleaner H320 comes with a standard manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the warranty card included in your product packaging or contact the manufacturer directly.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Generic customer service through the contact information provided in your product documentation.