

HyperX 8B1S0AA

HyperX Clutch Tanto Mini Wired Gaming Controller User Manual

Model: 8B1S0AA

INTRODUCTION

The HyperX Clutch Tanto is a compact, officially licensed wired gaming controller designed for Xbox Series X|S, Xbox One, PC, Steam Deck, and compatible Android devices. Its mini form factor makes it ideal for younger gamers, players with smaller hands, or those seeking a portable gaming solution without sacrificing full functionality. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your controller.

WHAT'S IN THE BOX

- HyperX Clutch Tanto Mini Wired Gaming Controller
- USB-C to USB-A cable
- USB-A to USB-C adapter
- Quick Start Guide



Image: The HyperX Clutch Tanto Mini Wired Gaming Controller, black in color, with its attached USB-C cable.

SETUP

Follow these steps to connect your HyperX Clutch Tanto controller to your gaming device:

1. **Connect to Xbox Series X|S or Xbox One:** Plug the USB-C end of the included cable into the controller and the USB-A end into an available USB port on your Xbox console. The controller will automatically be recognized and ready for use.
2. **Connect to PC:** Plug the USB-C end of the included cable into the controller and the USB-A end into an available USB port on your PC. The necessary drivers should install automatically. If not, visit the HyperX support website for driver downloads.
3. **Connect to Compatible Android Devices or Steam Deck:** Use the included USB-C to USB-A cable and the USB-A to USB-C adapter to connect the controller to your device's USB-C port. Ensure your Android device supports OTG (On-The-Go) functionality for external controllers.

Compatible with Xbox, PC, and Android Devices



Image: The HyperX Clutch Tanto controller connected to various devices including an Xbox, PC, and mobile phone, illustrating its multi-platform compatibility.

Officially Licensed for Xbox



COMPATIBLE WITH:
Xbox Series X|S and Xbox One Consoles

Microsoft, Xbox, Xbox Series X|S, Xbox One, and Xbox "Sphere" Design are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

Image: The HyperX Clutch Tanto controller positioned next to an Xbox Series X console, highlighting its official licensing and compatibility.

Your browser does not support the video tag.

Video: An official HyperX video showcasing the Clutch Tanto controller's features, including its compact design, Xbox compatibility, and multi-platform support.

OPERATING THE CONTROLLER

The HyperX Clutch Tanto features a standard Xbox controller layout, providing familiar controls for seamless gameplay. All standard buttons, inputs, and rumble motors are included for a full-featured experience.

- **Button Layout:** The controller includes A, B, X, Y buttons, a D-pad, left and right analog sticks, left and right bumpers (LB, RB), and left and right triggers (LT, RT).
- **Xbox Button:** Press the Xbox button to access the Xbox Guide or your console's home screen.
- **3.5mm Stereo Jack:** Connect your favorite wired headset or microphone to the 3.5mm stereo jack located at the bottom of the controller for in-game audio and communication.

Built-in 3.5mm Jack Connects your Headset or Microphone



Image: The HyperX Clutch Tanto controller on a desk, with a wired headset connected via its 3.5mm jack, demonstrating audio connectivity.

MAINTENANCE

To ensure the longevity and optimal performance of your HyperX Clutch Tanto controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. When traveling, consider using a protective case to prevent damage.
- **Cable Care:** Avoid sharply bending or pulling the USB cable. Store it neatly coiled to prevent tangles and damage.

TROUBLESHOOTING

If you encounter issues with your HyperX Clutch Tanto controller, try the following solutions:

- **Controller Not Responding:**

- Ensure the USB cable is securely connected to both the controller and the gaming device.
- Try connecting the controller to a different USB port on your device.
- Restart your gaming console or PC.
- **No Audio from Headset:**
 - Verify your headset is fully plugged into the 3.5mm jack on the controller.
 - Check your device's audio settings to ensure the controller's audio output is selected.
 - Test the headset with another device to confirm it is working correctly.
- **Buttons or Sticks Not Working Correctly:**
 - Ensure no debris is lodged around the buttons or sticks.
 - If on PC, check for updated drivers on the HyperX support website.

If these steps do not resolve the issue, please refer to the support section for further assistance.

SPECIFICATIONS



Image: A size comparison of the HyperX Clutch Tanto controller next to a standard-sized controller, illustrating its compact dimensions.

Feature	Detail
Model Number	8B1S0AA
Product Dimensions	5.1 x 3.6 x 1.8 inches
Item Weight	5.8 ounces (165g)
Connectivity	Wired (USB-C to USB-A)
Audio Port	3.5mm Stereo Jack
Compatibility	Xbox Series X S, Xbox One, PC, Steam Deck, compatible Android devices
Manufacturer	HP Inc.

WARRANTY AND SUPPORT

The HyperX Clutch Tanto Mini Wired Gaming Controller typically comes with a 2-year manufacturer's warranty, as indicated on the product packaging. For detailed warranty information, terms, and conditions, please refer to the documentation included with your product or visit the official HyperX website. For additional support, troubleshooting guides, driver downloads, or to contact customer service, please visit the official HyperX support page:

[HyperX Support Website](#)