

[Manuals.plus](#) /

> [JOYIN](#) /

> JOYIN Animated Werewolf Groundbreaker Halloween Decoration Instruction Manual

JOYIN 16487

JOYIN Animated Werewolf Groundbreaker Halloween Decoration

INSTRUCTION MANUAL

Introduction

This manual provides instructions for the safe and proper use of your JOYIN Animated Werewolf Groundbreaker Halloween Decoration. Please read all instructions carefully before assembly and operation. Retain this manual for future reference.

The Animated Werewolf Groundbreaker is designed to enhance your outdoor Halloween decor with animated movements, light-up eyes, and sound effects.

Safety Information

- This product is intended for outdoor use only.
- Operates on 3 AA batteries (not included). Ensure proper handling and insertion of batteries.
- Inspect the product for any damage before each use. Do not use if damaged.
- This product is not a toy. Keep out of reach of children and pets.
- Avoid placing the decoration in areas where it could be a tripping hazard.
- Do not expose to extreme weather conditions for prolonged periods to prevent damage.

Package Contents

- 1 x JOYIN Animated Werewolf Groundbreaker Decoration
- Instruction Manual (this document)

Setup Instructions

1. Battery Installation:

Locate the battery compartment on the back of the werewolf decoration. Open the compartment cover (a screwdriver may be required). Insert 3 AA batteries, ensuring correct polarity (+/-). Close the battery compartment securely.



Figure 1: Battery compartment for 3 AA batteries.

2. Placement:

Position the Werewolf Groundbreaker in your desired outdoor location, such as a graveyard scene, lawn, or yard. Ensure it is on a stable, level surface. The decoration is designed to appear as if it is emerging from the ground.



Figure 2: Werewolf Groundbreaker in an outdoor setting.

Operating Instructions

1. Power On:

Locate the power switch, typically near the battery compartment. Switch it to the 'ON' position.

2. Activation:

The Werewolf Groundbreaker is sound-activated. When a sound is detected within approximately one meter, the decoration will activate.

3. Features:

Upon activation, the werewolf's arms will move, its eyes will light up with a green glow, and it will emit creepy sounds.



Figure 3: Werewolf's glowing LED eyes.



Figure 4: Werewolf emitting sound effects.

4. Poseable Arms:

The arms feature poseable joints, allowing you to adjust their position for varied display options.



Figure 5: Details of the werewolf's features, including poseable arms.

Maintenance

- **Cleaning:** Wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, store the decoration in a cool, dry place away from direct sunlight. Remove batteries before storing for extended periods to prevent leakage.
- **Battery Replacement:** Replace all 3 AA batteries simultaneously when performance diminishes. Do not mix old and new batteries or different types of batteries.

Troubleshooting

Problem	Possible Cause	Solution
Decoration does not activate.	Batteries are dead or incorrectly installed. Power switch is off. Insufficient sound for activation.	Check and replace batteries. Ensure power switch is 'ON'. Make a louder sound near the sensor.

Problem	Possible Cause	Solution
Lights or sounds are weak.	Low battery power.	Replace all 3 AA batteries with new ones.
Arms do not move.	Mechanism obstruction or damage. Low battery power.	Check for any obstructions. Replace batteries. If problem persists, contact support.

Specifications

- **Model Number:** 16487
- **Product Dimensions:** 39 x 25.6 x 7.8 inches (approximately 99 x 65 x 20 cm)
- **Item Weight:** 2.66 pounds (approximately 1.2 kg)
- **Power Source:** 3 x AA Batteries (not included)
- **Activation:** Sound-activated
- **Features:** Moving arms, light-up eyes, sound effects



Warranty Information

Warranty information for this product is not explicitly specified in the provided documentation. Please refer to the retailer's return policy or contact JOYIN customer service for details regarding warranty coverage.

Customer Support

For further assistance, questions, or to report issues, please contact JOYIN customer service through their official website or the retailer where the product was purchased.

© 2025 JOYIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2CQB5WJ>

More documents and user manuals: <https://manuals.plus/>