

[Manuals.plus](#) /

› [Timever](#) /

› Timever Potty Training Watch L6658 User Manual

Timever L6658

Timever Potty Training Watch L6658 User Manual

Model: L6658

1. INTRODUCTION

The Timever Potty Training Watch is designed to assist in a child's potty training journey by providing timely reminders. This watch features a digital display, countdown timers, and multiple alarm options to help establish a consistent routine. It is suitable for children aged 2-9 years.



Image: The Timeever Potty Training Watch helps build healthy habits with gentle reminders.

2. PRODUCT FEATURES

- **Reminder Options:** Features alarm clock sets, a 12/24-hour clock, cyclical countdown, and 2 reminder options: vibration and melody music.
- **Child-Friendly Design:** Crafted from soft, anti-allergic silicone and stainless steel material, designed to fit a toddler's small wrist.
- **Clear Display:** Equipped with a clear digital multi-color display for enhanced visibility and easy reading.
- **Distance Light Sensor:** Includes a distance light sensor for discreet operation, allowing alarms to be less disruptive when preferred.
- **Long Battery Life:** Conveniently charged via USB, providing long-lasting standby capability.
- **Water Resistance:** Water-resistant for daily wear, such as handwashing and light splashes. Not suitable for swimming, hot baths, or saunas.



Image: Key features of the Timever Potty Training Watch.

3. SETUP AND INITIAL USE

3.1 Charging the Watch

Before first use, fully charge the watch using the provided USB charging cable. Connect the magnetic charger to the watch's charging port and the USB end to a compatible power source. A full charge typically takes approximately 2 hours and provides 10-15 days of battery life with frequent use.

3.2 Setting the Time

Refer to the detailed instructions in the 'Operating Instructions' section for setting the current time (12/24-hour format).

4. OPERATING INSTRUCTIONS

4.1 Setting the Countdown Timer

The watch features a cyclical countdown timer to remind your child for potty breaks. Follow these steps:

1. **Step 1:** Press the 'B' button repeatedly until the display shows "Cd" (Countdown).

2. **Step 2:** Hold the 'B' button for 3 seconds. Then, press the 'B' button again to cycle through the available countdown intervals (e.g., 5 min, 10 min, 15 min, 30 min, 60 min, 90 min, 120 min, 180 min). Select your desired interval.
3. **Step 3:** Hold down the 'B' button for 3 seconds until the countdown timer appears on the screen.
4. **Step 4:** When the countdown finishes, the watch will display the "go go" icon and activate the chosen reminder (music or vibration).



Image: Easy-to-set countdown timer steps.

4.2 Setting Alarms (Music or Vibration)

The watch allows for multiple alarm settings. To set or adjust alarms:

- Press the appropriate button (usually 'A' or 'M' depending on the model) to cycle through modes until you reach the alarm setting.
- Use the 'B' button to adjust hours and minutes.
- Select between music or vibration alerts as your preferred reminder type.

Your browser does not support the video tag.

Video: Demonstration of setting multiple alarm clocks for easier training.

5. MAINTENANCE

5.1 Cleaning

Wipe the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the watch's surface or strap.

5.2 Water Resistance

The watch is water-resistant for daily activities like handwashing and light rain. It is not designed for prolonged water immersion. To prevent damage, remove the watch before swimming, bathing, or entering a sauna.

5.3 Battery Care

To maximize battery life, charge the watch regularly. Avoid completely draining the battery frequently. Store the watch in a cool, dry place when not in use for extended periods.

6. TROUBLESHOOTING

- **Watch not turning on:** Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes.
- **Alarms not sounding/vibrating:** Check that the alarm function is enabled and the volume/vibration setting is not set to silent or off. Ensure the time and countdown intervals are correctly set.
- **Display is dim or unresponsive:** Recharge the watch. If the issue persists, contact customer support.
- **Difficulty setting time/countdown:** Refer to the 'Operating Instructions' section carefully. The watch's buttons may require specific press durations (short press vs. long press) to access different settings.
- **Inaccurate time:** Reset the time following the instructions in the manual.

7. SPECIFICATIONS

Model Number	L6658
Product Dimensions	2.95 x 2.16 x 2.95 inches
Item Weight	2.89 ounces
Material	Silicone (Strap), Plastic (Case), Metal (Components)
Display Type	Digital LED
Watch Movement Type	Japanese Quartz
Water Resistance Depth	30 meters (Daily Water Resistant)
Power Source	Battery Powered (USB Rechargeable)
Age Range	Kid (2-9 years)



Image: Detailed product dimensions and material specifications.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a limited warranty. Please retain your proof of purchase for any warranty claims.

8.2 Customer Support

For further assistance, technical support, or warranty inquiries, please contact Timever customer service through the retailer's platform or the official Timever website.