

Segway F2 Pro

Segway Ninebot F2 Pro Electric KickScooter & Cable Lock User Manual

Model: F2 Pro

INTRODUCTION

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your Segway Ninebot F2 Pro Electric KickScooter and the accompanying 5-Digit Combination Cable Lock. Please read this manual thoroughly before using the product to ensure proper usage and to maximize your riding experience.



Image: The Segway Ninebot F2 Pro Electric KickScooter shown alongside the 5-Digit Combination Cable Lock, illustrating the complete product bundle.

SAFETY INFORMATION

Operating an electric kick scooter carries inherent risks. To reduce the risk of injury, it is crucial to follow all instructions and warnings in this manual. Always wear a helmet and other protective gear (knee pads, elbow pads) when riding. Ensure you are familiar with local laws and regulations regarding electric scooter usage.

- Always check the scooter before each ride for loose parts, tire pressure, and brake functionality.
- Do not ride in wet conditions, on slippery surfaces, or in heavy rain.

- Avoid riding on uneven terrain, potholes, or over obstacles.
- Maintain a safe distance from other vehicles and pedestrians.
- Do not perform stunts or sudden maneuvers.
- Ensure the kickscooter is fully charged before long rides.
- The cable lock is a deterrent and does not guarantee absolute security against theft.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Segway Ninebot F2 Pro Electric KickScooter
- 5-Digit Combination Cable Lock
- Charging Adapter
- User Manual (this document)
- Quick Start Guide
- Mounting Bracket for Cable Lock
- Necessary Screws and Hex Wrench

SETUP

1. KickScooter Assembly

1. **Unfold the Stem:** Carefully lift the stem until it locks into place.
2. **Attach the Handlebar:** Connect the handlebar to the stem. Ensure the cables are not pinched. Secure it with the provided screws and hex wrench.
3. **Initial Charge:** Fully charge the scooter before its first use. Connect the charging adapter to the charging port on the scooter and then to a power outlet. The indicator light on the charger will change when fully charged.



Image: A side view of the Segway Ninebot F2 Pro Electric KickScooter, illustrating its assembled form and overall design.

2. Cable Lock Setup

1. **Mounting Bracket Installation:** Attach the cable lock's mounting bracket to a suitable location on your

scooter's stem or frame using the provided hardware.

2. Setting Your Combination:

- The default code is 00000.
- Align the default code with the indicator marks.
- With the keyhole facing up, turn the number setting knob 90 degrees clockwise.
- Set your desired 5-digit combination.
- Turn the knob back 90 degrees counter-clockwise to its original position. Your new combination is now set.



Image: The Segway 5-Digit Combination Cable Lock, showing its coiled cable and the combination dial mechanism.

OPERATING INSTRUCTIONS

1. KickScooter Operation

1. **Power On/Off:** Press and hold the power button on the dashboard to turn the scooter on or off.
2. **Riding Modes:** Short press the power button to cycle through riding modes (e.g., ECO, Drive, Sport). Each mode offers different speed and power characteristics.
3. **Acceleration:** Push off with your foot to gain initial speed, then press the throttle lever to accelerate.
4. **Braking:** Use the hand brake lever to slow down or stop. The scooter features a dual braking system for effective stopping.
5. **Lights:** Double-press the power button to turn the headlight and taillight on or off.

6. **Smart Dashboard:** The dashboard displays speed, battery level, riding mode, and light status.



Image: A close-up of the Segway Ninebot F2 Pro's smart dashboard and power button, highlighting indicators for speed, battery, speed mode, lights, and cruise control.

Challenge the Stronger Motor



900W
Max Output



20 Mph
Max Speed



22%
Hill Grade



Image: An illustration detailing the Segway Ninebot F2 Pro's motor performance, showing 900W Max Output, 20 Mph Max Speed, and 22% Hill Grade capability.

2. Cable Lock Usage

1. **Locking:** Dial your personal combination to open the lock. Wrap the cable around your scooter and a secure fixed object (e.g., a bike rack, pole). Insert the locking head into the mechanism and scramble the numbers to secure.
2. **Unlocking:** Dial your personal combination to align with the indicator marks. The lock will open, allowing you to remove the cable.



Image: The Segway 5-Digit Combination Cable Lock shown attached to the handlebar of the KickScooter, demonstrating how it can be stored or used for security.



Image: A close-up view of the Segway 5-Digit Combination Cable Lock's dial mechanism while attached to the KickScooter's handlebar, showing the numbers.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Segway Ninebot F2 Pro KickScooter and Cable Lock.

- **Cleaning:** Wipe the scooter and lock with a damp cloth. Do not use alcohol, gasoline, kerosene, or other corrosive chemical solvents. Do not wash with a high-pressure water jet.
- **Tire Pressure:** Check tire pressure regularly and inflate to the recommended PSI (usually found on the tire sidewall).
- **Brakes:** Periodically inspect brake pads and cables for wear and tear. Adjust or replace as needed.
- **Battery Care:** Store the scooter in a dry place between 0°C and 40°C (32°F and 104°F). Charge the battery at least once every 30 days if not in use to prevent over-discharge.
- **Fasteners:** Check all screws and bolts regularly to ensure they are tight.
- **Cable Lock:** Keep the cable and locking mechanism clean. Lubricate the locking mechanism periodically with

a silicone-based lubricant.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter not turning on	Low battery; Loose connections; Power button malfunction	Charge the battery; Check all cable connections; Contact support if issue persists.
Reduced range/speed	Low tire pressure; Overload; Battery degradation; Riding uphill frequently	Inflate tires to recommended pressure; Reduce load; Ensure full charge; Adjust riding style.
Brakes feel weak	Worn brake pads; Loose brake cable	Inspect and replace brake pads; Adjust brake cable tension.
Cable lock not opening	Incorrect combination; Mechanism jammed	Ensure correct combination is entered precisely; Apply light pressure while turning dials; Lubricate if stiff.

SPECIFICATIONS

Feature	Detail
Model Name	F2 Pro
Brand	Segway
Color	Black
Motor Power (Rated/Max)	450W / 900W
Max Speed	Up to 20 mph (32 km/h)
Max Range	Up to 34 miles (55 km) (in ECO mode)
Max Incline	Up to 22%
Wheel Material	Rubber
Frame Material	Alloy Steel
Brake Style	Hand brake (Dual braking system)
Special Features	Portable, App-Enabled, Smart Dashboard
Cable Lock Type	5-Digit Combination Cable Lock
Cable Lock Material	Braided Steel with PVC coating

WARRANTY & SUPPORT

Segway products come with a limited warranty. Please refer to the warranty card included in your package or visit the official Segway website for detailed warranty terms and conditions specific to your region.

For technical support, spare parts, or service inquiries, please contact Segway customer service through their official website or the contact information provided in your product documentation. When contacting support, please have your product model number (F2 Pro) and purchase date ready.

Documents - Segway – F2 Pro

[\[pdf\]](#) User Manual Instructions

Ninebot KickScooter F2 User Manual Product Instruction store segway media code baby product file 2714

|||

EN The pictures shown are for illustration purposes only. The actual product or app interface may vary. Please use the app to turn on the device. 13 14 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use ho...

lang:nl score:41 filesize: 3.66 M page_count: 26 document date: 2023-07-27

[\[pdf\]](#) User Manual

CE 04 00 0847 A F2 20230112 User Instruction Ninebot KickScooter F2 Series PT assets segway cdn Manuals Multi Language UM |||

Leia com atencao e guarde para referencia futura. Para obter mais informacoes, visite www.segway.com O fa ... ularmente, o que pode ser desligado premindo o boto correspondente novamente. 6 Os utilizadores de **F2 Pro** podem usar a buzina pressionando o Boto da Buzina acima da Chave Indicadora de Direcao. Por fa...

lang:pt score:36 filesize: 5.46 M page_count: 31 document date: 2023-01-12

[\[pdf\]](#) Instructions

CE 04 00 0822 B F2 221226 Segway Ninebot KickScooter PLUS Instruction Manuals South Africa User Series EN FR DE IT SP POL NL segway ninebot co za 2024 07 |||

EN The pictures shown are for illustration purposes only. The actual product or app interface may vary. Please use the app to turn on the device. 15 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use ho...


lang:nl score:35 filesize: 4.81 M page_count: 28 document date: 2023-04-03


[\[pdf\]](#) User Manual Instructions

CE 04 00 0822 B F2 221226 User Instruction Ninebot KickScooter Series EN FR DE IT SP POL NL assets segway cdn Manuals Multi Language UM |||

EN The pictures shown are for illustration purposes only. The actual product or app interface may vary. Please use the app to turn on the device. 15 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use ho...

  lang:nl score:34 filesize: 4.78 M page_count: 28 document date: 2023-04-03

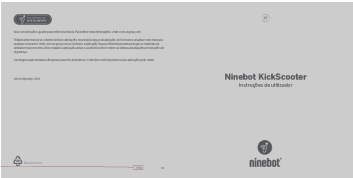

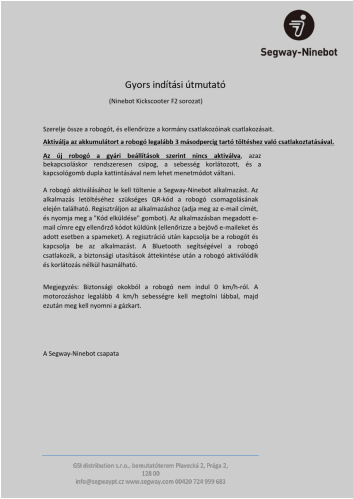

[pdf] User Manual

CE 04 00 0819 B F2 221226 2 docId FD10E925205278C9C35F3B44B697AFB8 Típus modell II Plus Pro Sorozat NAGE x yyyy védjegyei és e védjegyek Segway Ninebot általi használata engedélyhez kötött UM KickScooter Series HU dwn alza cz manual 115972 ||| Gyors indtsi tmutat Ninebot Kickscooter F2 sorozat Szerelje ssze a robogt, s ellenrizze a kormny c ... Inos megnevezs: Elektromos KickScooter Termk neve: Ninebot KickScooter Tpus/modell:F2 II F2 Plus II **F2 Pro** F2 Plus II **F2 Pro** Sorozat : NAGE x yyyy x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x y... lang:tl **score:23** filesize: 947.21 K page_count: 11 document date: 2023-08-22



[pdf] User Manual Instructions

CE 04 00 0822 B F2 221226 Ninebot by Segway Plus D 400 W E Scooter bis 60 km Reichweite 17 7 kg von expert Technomarkt1files technomarkt de manual mmo 115118832 1696000614 3323 17076 view fitH ||| EN The pictures shown are for illustration purposes only. The actual product or app interface may va ... eye tekrar basilarak kapatilabilir. AR . . 15 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use ho... lang:nl **score:23** filesize: 4.78 M page_count: 28 document date: 2023-04-03



[Ninebot KickScooter F2 Series User Manual and Specifications](#)

Comprehensive user manual and technical specifications for the Ninebot KickScooter F2, F2 Plus, and F2 Pro electric scooters, including diagrams, dashboard controls, specifications, maintenance schedules, and certifications. lang:es **score:22** filesize: 806.8 K page_count: 17 document date: 2023-04-13



[pdf] User Manual Instructions

CE 04 00 1164 A F2 PRO II 240919 Télécharger la notice d utilisationTrottinette électrique NINEBOT by Segway F2E Electro DépôtN10010133electrodepot fr media wysiwyg page N10010133 ||| EN The pictures shown are for illustration purposes only. The actual product or app interface may va ... eed Mode: There are three modes. The top speed is as follows: Mode Name F2 II 051201EE 051201DD **F2 Pro** II 051203EEE 051203DDD E ECO Mode D Standard mode Speed 15 km/h 9.3 mph Range* 55 km... lang:nl **score:22** filesize: 7 M page_count: 38 document date: 2024-12-02

[pdf] User Manual Diagram

eKickScooter F2 II Pro mStoreBekapcsolás a Segway Mobility alkalmazásban Érintsd meg az oldalsó

menüt Beállítások Gyalogos mód 10 50°C 14 122°F Ajánlott 10~30°C 50

86°F929b587ebcc94e25874827acbb2b9f6b segway f2 pro 2 user manualmstore hu custom mstore image

data srattached 929b587ebcc94e25874827acbb2b9f6b manual srsltid AfmBOoqUFqucsz1C U9g

YuxQ3JUiS6Rjf9uQpaY03Tu9xO8diTIPDc9 mStoreeKickScooter 86°FBekapcsolás Ninebot Modell

051203EE929b587ebcc94e25874827acbb2b9f6b manual929b587ebcc94e25874827acbb2b9f6b

YuxQ3JUiS6Rjf9uQpaY03Tu9xO8diTIPDc9mstore AfmBOOrF CpJ0uo6fGJ0dYON674U9p8zc0NZN3

dbSRjbgCDUAKf5Pqw 051203EESebességmérő Megjeleníti roller aktuális sebességét valamint

hibakódokat Irányjelző Balra vagy jobbra forduláskor nyomd

irányjelző 929b587ebcc94e25874827acbb2b9f6b dbSRjbgCDUAKf5Pqwmstore

AfmBOOrC1NvdyW4fFmoggOXROOD9zF8qRvwzYA8RebvyssklhDfoOYUE ||| ||| eKickScooter F2 II F2

Pro II Hasznlati tmutat dvzlnk 4 140cm 4 6 -- 2 -- Hasznlat kzben mindig viselj sisakot, knykvdt s trdvt.

Csomaglista Tartozkok 7/64 3 mm imbuszkulcs M5 csavar 5 Hasznlati tmutat Fontos informcik -- 3 --

Akkumulortlt ||| eKickScooter F2 II F2 Pro II Hasznlati tmutat dvzlnk 4 140cm 4 6 -- 2 -- Hasznlat kzben

mindig viselj sisakot, knykvdt s trdvt. Csomaglista Tartozkok 7/64 3 mm imbuszkulcs M5 csavar 5

Hasznlati tmutat Fontos informcik -- 3 -- Akkumulortlt

eKickScooter F2 II **F2 Pro** II Hasznlati tmutat dvzlnk 4 140cm 4 6 -- 2 -- Hasznlat

kzben mindig viselj sisakot, knykvdt s trdvt. Csomaglista Tartozkok 7/64 3 mm

imbuszkulcs M5 csavar 5 Hasznlati tmutat Fontos informcik -- 3 -- Akkumulortlt

Szelepszr hosszabbt bra / Diagram -- 4...

lang:tl score:22 filesize: 1.69 M page_count: 28 document date: 2025-04-23

[pdf] Instructions

Ninebot KickScooterES Información importante PL Ważne informacje KO aplicación Segway y dicha

información F2 Pro

mmo 109189227 1690802859 2423 4414assets media quzo co uk 2024

10 25 mmo 4414 |||

EN The pictures shown are for illustration purposes only. The actual product or app interface may va ... eye tekrar basilarak kapatilabilir. AR . . 15 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch.

Please use ho...

lang:nl score:22 filesize: 1.45 M page_count: 28 document date: 2024-10-25

[pdf]

Marco Fontana Trottinette électrique Ninebot F2 Pro E powered by Segway Avec une autonomie allant

jusqu à 55 km et un moteur d puissance maximale de 900 W vous vivrez expérience conduite

exceptionnelle La vous 8720254406480 f 0 boulanger scene7 is content Boulanger |||

Trottinette lectrique Ninebot **F2 Pro** E powered by Segway Une nouvelle re pour les dplacements quotidiens Vous recherchez une trottinette puissante et lgante avec une grande autonomie La trottinette Ninebot **F2 Pro** powered by Segway a tout pour plaire, idale pour les trajets quotidiens. Avec une ...

lang:fr score:22 filesize: 1.01 M page_count: 7 document date: 2024-04-04

[pdf]




Maylis Boulben Roulez avec plus de puissance Profitez chacun vos trajets Trottinette électrique Ninebot


F2 Pro E II powered by Segway La Series a été spécialement conçue pour répondre aux besoins des

déplacements quotidiens 8721008535883 0 boulanger scene7 is content Boulanger |||

Trottinette lectrique Ninebot **F2 Pro** E II powered by Segway La F2 Series a t spcialement conue pour rpondre aux besoins des dplacements quotidiens. Avec une puissance amliore, une suspension avant double ressort, un systme de contrle de traction et des clignotants intgrs, elle vous permet de profit...

    lang:fr score:22 filesize: 201.43 K page_count: 2 document date: 2025-01-31

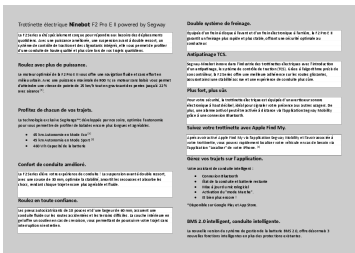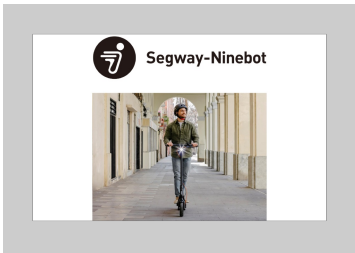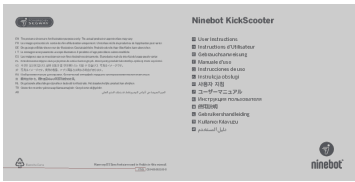

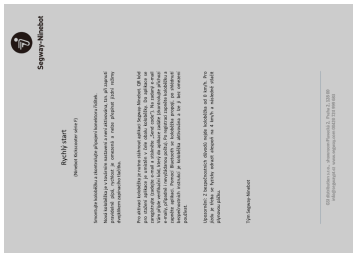

[pdf]



CE 04 00 0819 B F2 221226 ai Náhled * souboru s návodem k obsluze NÁVOD K OBSLUZE
Elektrická koloběžka Ninebot by Segway Databáze návodů v češtině elektricka kolobezka ninebot segway
f2 pro e 116663 locked navod cz preview 117 |||
Rychl start Ninebot Kickscooter srie F Smontujte kolobzku a zkontrolujte pipojen
konektoru dtek. N ... becn oznacen: Electrical KickScooter Nzev produktu: Ninebot
KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Srie : NAGE x yyyy x yyyy / NAGD x
yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N...
lang:hr **score:22** filesize: 5.34 M page_count: 4 document date: 2023-08-16

[pdf] Warranty

Warranty F2 Series Details Segway Ninebot KickScooter segway ninebot co za 2024 07 |||
Ninebot KickScooter XX CE.04.00.0823.03-A EN Europe Limited Warranty and
Arbitration Agreement NOT ... rottle Headlight Taillight Direction Indicator Direction
Indicator Switch Front Shock Absorber For **F2 Pro** Only Electronic Horn For **F2 Pro**
Only Horn Button For **F2 Pro** Only 12 months 02 Name of...
lang:en **score:21** filesize: 4.89 M page_count: 6 document date: 2024-07-16

[pdf] Declaration of Conformity

267812 PATIN ELECTRICO SEGWAY F2 PRO E 10 Eldisser Número de ruedas 2 Amortiguador golpes
Sí Sistema freno delantero Disco Faro frontal Intermitentes A prueba agua Tipo de doc eldisser producto
html2 codproducto |||
267812 PATIN ELECTRICO SEGWAY **F2 PRO** E 10 450W SEGWAY
CARACTERSTICAS Velocidad mxima : 25 Peso mximo de carga : 120 Distancia
mxima por carga* : 55 km Tamao de la rueda delantera sistema imperial : 25,4
Tamao de la rueda trasera sistema imperial : 25,4 Potencia del motor : 450 W Los
productos p...
lang:es **score:21** filesize: 46.79 K page_count: 2 document date: 2025-07-07

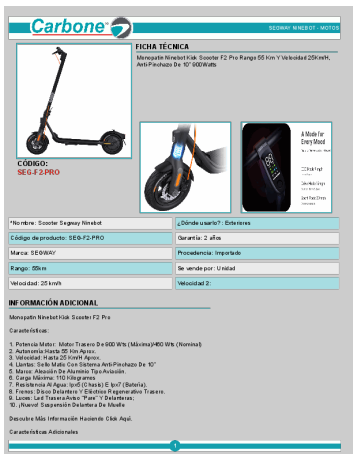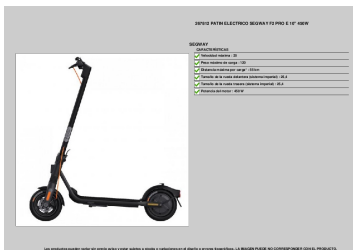  

[pdf]

Ficha técnica de productos Tecnica SEG F2 PRO monopatin ninebot k Monopatin Ninebot Kick Scooter
Rango 55 Km Y Velocidad 25Km H Carbone Store PanamÃ; seg f2 pro kic carbone data shopify |||
SEGWAY NINEBOT - MOTOS FICHA TCNICA Monopatin Ninebot Kick Scooter**F2**
Pro Rango 55 Km Y Velocidad 25Km/H, Anti-Pinchazo De 10 900Watts CDIGO:
SEG-**F2 PRO** *Nombre: Scooter Segway Ninebot Cdigo de producto: SEG-**F2 PRO**
Marca: SEGWAY Rango: 55km Velocidad: 25 km/h Dnde usarlo : Exteriores Garanta:
2 ...
lang:es **score:21** filesize: 408.04 K page_count: 3 document date: 0000-00-00

[pdf] User Manual Installation Guide Instructions

CE 04 00 0819 01 A F2 20221213 Product Manual Ninebot Changzhou Tech Co Ltd KS0016 2ALS8
2ALS8KS0016 ks0016
EN The manufacturer reserves the right to make changes to the product, release
firmware updates, and ... er Rear Light Reflector Insurance Plate Area Reflector
Battery Compartment Kickstand Charge Port **F2 Pro** Direction Indicators Handlebar
Bell Brake Lever Headlight Direction Indicators Quick-release ...
lang:es **score:21** filesize: 2.52 M page_count: 17 document date: 2022-12-13





[\[pdf\]](#) Instructions Accessories

Download Segway Ninebot Australia 24032818305732177 segwaytest oss cn beijing aliyuncs data upload 202403 KickScooter KO F2 Pro J P Pro KickScooterKO Pro segwaytest 24032818305732177segwaytest ||| Ninebot KickScooter EN User Instructions FR Instructions d Utilisateur DE Gebrauchsanweisung IT Manu ... tekrar basilarak kapatilabilir. AR . . 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use ho... lang:en **score:21** filesize: 4.19 M page_count: 43 document date: 2023-03-13



[\[pdf\]](#) User Manual Installation Guide Instructions

CE 04 00 0819 01 B F2 20230222 Ninebot Electric Scooter 800 W Motor 40 km Range Rhyde rhyde coNinebot KickScooter Product Manualcdn shopify s files 1 0556 1997 7395 Manual ||| EN The manufacturer reserves the right to make changes to the product, release firmware updates, and ... er Rear Light Reflector Insurance Plate Area Reflector Battery Compartment Kickstand Charge Port **F2 Pro** Direction Indicators Handlebar Bell Brake Lever Headlight Direction Indicators Quick-release ... lang:es **score:20** filesize: 2.12 M page_count: 16 document date: 2023-05-18



[\[pdf\]](#) Declaration of Conformity

CE 04 00 0820 01 C EU DoC F2 241212 Plus Pro DOC Other Segway Ninebot assets segway cdn DoC Multi language ||| EC DECLARATION OF CONFORMITY Manufacturer Name: Ninebot Changzhou Tech Co., Ltd. Address: 16F-17F ... ickScooter Product name: Ninebot KickScooter F2 / Ninebot KickScooter F2 Plus / Ninebot KickScooter **F2 Pro** Type/model: 051201D / 051201E / 051202D / 051202E / 051203D / 051203E Serial number: NAGE x y... lang:en **score:20** filesize: 1.02 M page_count: 3 document date: 2024-12-12



[\[pdf\]](#) User Manual Accessories

Ninebot eKickScooter 21 мая 2025 г — User Manual EN Page 2 Always wear a helmet elbow pads and knee when 6 Users of F2 Pro II can use horn by pressing the Horn Button above 0xyau5n9qolsqfkr3n0cs67t64bbvgcx segwave ru upload iblock 1e7 Segwave Инструкция пользователя RU TR Kullanici SegwaveNinebot 21 abovesegwave 0xyau5n9qolsqfkr3n0cs67t64bbvgcxsegwave ||| Ninebot eKickScooter EN User Manual RU TR Kullanici Kilavuzu AR Welcome / / / Ho Geldiniz ... tekrar basilarak kapatilabilir. AR . . 6 EN Users of **F2 Pro** II can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use... lang:en **score:20** filesize: 4.28 M page_count: 41 document date: 2024-12-27



[\[pdf\]](#) User Manual Guide Diagram

Ninebot KickScooter koble til funksjonen 25 Page 26 x8 SN l s opp l r mere Alle iOS brukere kan KickScooteren via Apple «Find My» appen og deretter kon trollere 90710212 manual no witt Files Images Witt ECOM Downloads ||| Merk at bildene i bruksanvisningen utelukkende er til illustrasjon. Bildene refererer ikke til en be ... il blinke regelmessig, hvilket kan sls av ved trykke p den tilsvarende knappen igjen. Brukere av **F2 Pro** kan bruke signalhornet, ved trykke p signalhorn-knappen plassert over retningsindikatoren. ... lang:no **score:20** filesize: 3.92 M page_count: 44 document date: 2023-06-08

[\[pdf\]](#) User Manual

Ninebot KickScooter witt fi 15 июн 2024 г — Jos on yhdistetty Find My toimintoon ja omistaja kaukana KickScooterista ei ole sen lähellä tai jälkeen kun ajo katkaisee 90710212 manual Files Images Witt ECOM Downloads |||

Huomaa, ett kyttoppaan kuvat ovat vain havainnollistavia. Kuvat eivt viittaa tiettyyn malliin ja tod Suuntavilkut vilkkuvat snllisesti, mik voidaan sammuttaa painamalla vastaavaa nppint uudelleen. **F2 Pron** kytjtjt voivat kytnt nimerkki painamalla suuntavilkun ylpuoolella olevaa nitorvinppint. Kytnt ni...

lang:fi **score:20** filesize: 3.92 M page_count: 44 document date: 2023-06-08

[\[pdf\]](#) User Manual

CE 04 00 0819 B F2 221226 Český manuál Ninebot KickScooter F2E Plus by Segway 7 6 MB E store cz um ninebot kickscooter f2 series 1 segway user related files |||

Rychl start Ninebot Kickscooter srie F2 Smontujte kolobzku a zkontrolujte pipojen konektoru dtek. ... becn oznacen: Electrical KickScooter Nzev produktu: Ninebot KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Srie : NAGE x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N...

lang:af **score:19** filesize: 7.56 M page_count: 11 document date: 2023-03-15

[\[pdf\]](#)

Uputstvo za upotrebu EN SEGWAY Ninebot KickScooter F2 Plus E električni trotinet uputstvo en segway ninebot kickscooter Tehnoteka KO Pro rs p f2 plus e elektricni · akcija cena

679c91deb05c5 api tehnoteka 2025 01 |||

https://tehnoteka.rs Uputstvo za upotrebu EN SEGWAY Ninebot KickScooter F2 Plus E elektricni troti ... eye tdkrar basilarak kapatilabilir. AR . . 15 6 EN Users of **F2 Pro** can use horn by pressing the Horn Button above the Direction Indicator Switch. Please use ho...

lang:nl **score:19** filesize: 1.75 M page_count: 30 document date: 2025-01-31

[Ninebot eKickScooter User Manual: Safety, Maintenance, and Operation Guide](#)

Comprehensive user manual for the Ninebot eKickScooter series, covering essential safety guidelines, pre-ride checks, riding tips, maintenance schedules, troubleshooting common failures, and product certifications. Learn how to safely operate and maintain your Ninebot eKickScooter.



lang:en **score:18** filesize: 9.98 M page_count: 82 document date: 2024-12-03

[\[pdf\]](#) Specifications Decleration of Conformity Label

Battery NCAF3612 A CE DOC F2 Pro Plus II Greenway Other Segway Ninebot battery NCAF3612A ProF2 PlusF2 Proll assets segway cdn EU DoC Batteries |||

EU DECLARATION OF CONFORMITY File No.:NCAF3612A-01 Manufacturer Name: Guangdong Greenway Technology Co., Ltd. Address: No. 6 Tongsha Tonghuan Road, Dongcheng Street, Dongguan , Guangdong. Email address: info greenway-battery.com Authorized Representative Name: Segway-Ninebot Europe Addre...

  lang:en **score:18** filesize: 369.3 K page_count: 2 document date: 2024-12-13

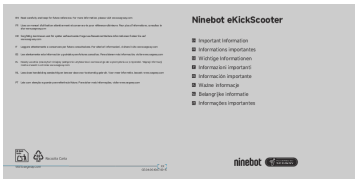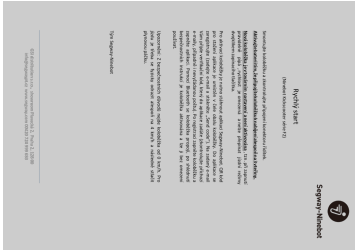




[\[pdf\]](#) Declaration of Conformity

CE 04 00 1163 A EU DOC F2 II 241122 Nome del prodotto Ninebot eKickScooter Pro e l o qualsiasi numero compreso tra 0 9 La presente Dichiarazione di DOC assets segway cdn DoC Multi language ||| Ninebot eKickScooter EN EC DECLARATION OF CONFORMITY FR DCLARATION DE CONFORMIT CE DE EG-KONFORMITTS ... enomination: Electrical KickScooter Product name: Ninebot eKickScooter F2 II / Ninebot eKickScooter **F2 Pro II** Type/model: 051201EE / 051203EE / 051201DD / 051203DD Serial number: NAHD x yyyy x yyyy / ... lang:en **score:18** filesize: 1.23 M page_count: 3 document date: 2025-02-06



[\[pdf\]](#) Specifications Declaration of Conformity Label

Battery NCAF3612 A CE DOC F2 Pro Plus II De power Other Segway Ninebot battery NCAF3612A ProF2 PlusF2 ProII assets segway cdn EU DoC Batteries ||| EU DECLARATION OF CONFORMITY File No.: NCAF3612A-01 Manufacturer Name: De.power Technology Limited Address: No.16 Hongyun Road,Lanjiang Street, Lanxi County Jinhua City,Zhejiang Province,P.R.China Email address: depower.com.cn Authorized Representative Name: Segway-Ninebot Europe ... lang:en **score:18** filesize: 429.06 K page_count: 2 document date: 2024-12-12

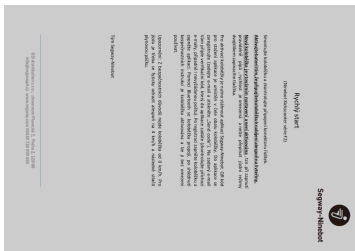 

[\[pdf\]](#)



CE 04 00 0819 B F2 221226 Návod Ninebot by Segway KickScooter Plus F2PLUSNinebot E od 11 777 Kč Heureka.czNávod F2PLUSim9.cz product docs ft2hn96w6lu07nyb F2PLUS ||| Rychl start Ninebot Kickscooter srie F2 Smontujte kolobzku a zkontrolujte pipojen konektoru dtek. ... becn oznacen: Electrical KickScooter Nzev produktu: Ninebot KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Srie : NAGE x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N... lang:af **score:18** filesize: 7.56 M page_count: 11 document date: 2023-03-15

[\[pdf\]](#)

CE 04 00 0819 B F2 221226 ai Náhled * souboru s návodem k obsluze NÁVOD K OBSLUZE Elektrická koloběžka Ninebot by Segway F2E Databáze návodů v češtině elektricka kolobezka ninebot segway f2e 115602 locked navod cz preview 116 ||| Rychl start Ninebot Kickscooter srie F Smontujte kolobzku a zkontrolujte pipojen konektoru dtek. N ... becn oznacen: Electrical KickScooter Nzev produktu: Ninebot KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Srie : NAGE x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N... lang:hr **score:18** filesize: 5.34 M page_count: 4 document date: 2023-08-15

[\[pdf\]](#)

CE 04 00 0819 B F2 221226 ai Náhled * souboru s návodem k obsluze NÁVOD K OBSLUZE Elektrická koloběžka Ninebot by Segway Databáze návodů v češtině elektricka kolobezka ninebot segway f2 plus e 115601 locked navod cz preview 116 ||| Rychl start Ninebot Kickscooter srie F Smontujte kolobzku a zkontrolujte pipojen konektoru dtek. N ... becn oznacen: Electrical KickScooter Nzev produktu: Ninebot KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Srie : NAGE x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N... lang:hr **score:18** filesize: 5.34 M page_count: 4 document date: 2023-08-15

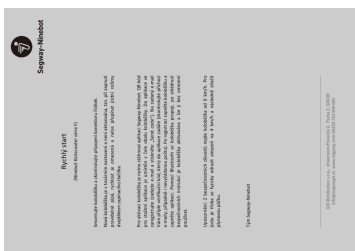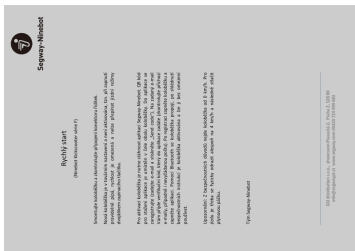  

[\[pdf\]](#) Decleration of Conformity


CE 04 00 0820 B EU DoC F2 20221209 ELJF2E prohlášení Prohlášení o shodě 687 85 KB Elektrická koloběžka Ninebot by Segway E KASA cz doc 5590181 kasa document 1 8 |||



EC DECLARATION OF CONFORMITY Manufacturer Name: Ninebot Changzhou Tech Co., Ltd. Address: 16F-1 ... ckScooter Product name: Ninebot KickScooter F2 / Ninebot KickScooter F2 Plus / Ninebot KickScooter **F2 Pro** Type/model: 051201D / 051201E / 051202D / 051202E / 051203D / 051203E Serial number: NAGE x... lang:en **score:18** filesize: 687.84 K page_count: 2 document date: 2023-03-24

[\[pdf\]](#) Decleration of Conformity

CE 04 00 0819 B F2 221226 ELJF2E návod CZ Návod k použití 7 5 MB Elektrická koloběžka Ninebot by Segway E KASA cz doc 5590179 kasa document 9 1 |||

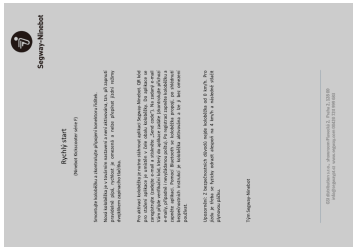 

Rychl start Ninebot Kickscooter srie F Smontujte kolobzku a zkontrolujte pipojen konektoru dtek. N ... becn oznacen: Electrical KickScooter Nzev produktu: Ninebot KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Srie : NAGE x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N... lang:hr **score:18** filesize: 7.5 M page_count: 11 document date: 2023-03-15

[\[pdf\]](#) User Manual Installation Guide Instructions

CE 04 00 0819 B F2 221226 14687 1681982673 5 8 МБ Купить Электросамокат Segway Ninebot F2E PLUS Dark Grey Orange AA 05 12 02 0003 83768440 zhuk ua content files |||



EN The manufacturer reserves the right to make changes to the product, release firmware updates, and ... er Rear Light Reflector Insurance Plate Area Reflector Battery Compartment Kickstand Charge Port **F2 Pro** Direction Indicators Handlebar Bell Brake Lever Headlight Direction Indicators Quick-release ... lang:it **score:17** filesize: 5.82 M page_count: 58 document date: 2023-03-15

[\[pdf\]](#) Dimension Guide


Sac de rangement universel votre trotinette Segway Alliez style et praticité au quotidien E3 Pro E2 Plus II E8 E10 E12 F3 F3 8721008535784 a 0 boulanger scene7 is content Boulanger |||




Accessoires pour trottinettes lectriques Sac de rangement universel Besoin d un espace pratique pour ... , MAX G30E II, MAX G30 E3 Pro, E3, E2 Pro, E2 Plus II, E2 Plus, E2 II, E2, E8, E10, E12 F3 Pro, F3, **F2 Pro** II, **F2 Pro**, F2 Plus, F2 II, F2 F25E, F25, F20, F-SE, F65, F40, F38E, F35, F30 GT1, GT2, GT2 P... lang:fr **score:17** filesize: 229.29 K page_count: 1 document date: 2025-04-16

[\[pdf\]](#) User Manual Diagram

24032818303483247 segwaytest oss cn beijing aliyuncs data upload 202403 Download Segway Ninebot Australia KickScooter Power Button Press the button to turn on press and hold for 3 seconds off When is KickScooterPower buttonsegwaytest 24032818303483247segwaytest ||| EN Ninebot KickScooter Product Manual 1 Diagram F2 / F2 Plus Direction Indicators Handlebar Bell B ... r Rear Light Reflector Insurance Plate Area Reflector Battery Compartment Kickstand Charge Port **F2 Pro** Direction Indicators Handlebar Bell Brake Lever Headlight Direction Indicators Quick-release ... lang:en **score:17** filesize: 1.32 M page_count: 19 document date: 2024-02-27

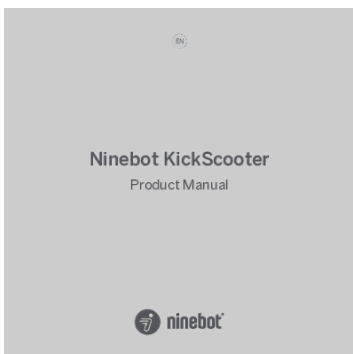 


[pdf] Dimension Guide

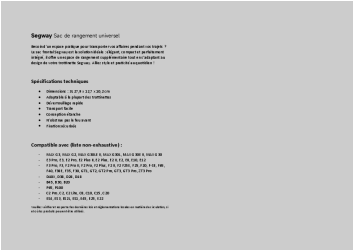 


Ludivine Monguin Spécifications techniques Compatible avec liste non exhaustive Le sac frontal Segway est la solution idéale élégant compact et parfaitement GT3 Pro ZT3 D40X D38 D28 D18 B45 B30 B20 P65 P100 8721008535784 f 0 boulanger scene7 is content Boulanger ||| Segway Sac de rangement universel Besoin d un espace pratique pour transporter vos affaires pendant ... X G30E II, MAX G30 - E3 Pro, E3, E2 Pro, E2 Plus II, E2 Plus, E2 II, E2, E8, E10, E12 - F3 Pro, F3, **F2 Pro II**, **F2 Pro**, F2 Plus, F2 II, F2 F25E, F25, F20, F-SE, F65, F40, F38E, F35, F30, GT1, GT2, GT2 ... lang:fr score:17 filesize: 134.38 K page_count: 1 document date: 2025-04-16

 [pdf] User Manual

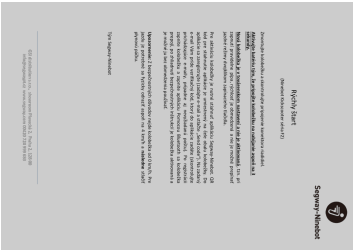

CE 04 00 0819 B F2 221226 15 feb 2023 — Tlačidlo zapínania Stlačte tlačidlo pre zapnutie vypnutie stlačte a podržte po dobu 3 sekúnd Keď je KickScooter zapnutý um ninebot kick scooter f2 series sk segway store cz user related files ||| Rchly start Ninebot Kick scooter sria F2 Zmontujte kolobezku a skontrolujte pripojenie konektora ri ... cn oznacenie: Electrical KickScooter Nzov produktu: Ninebot KickScooter Typ/model: F2 II F2 Plus II **F2 Pro** Sria : NAGE x yyyy x yyyy / NAGD x yyyy x yyyy / NAGK x yyyy x yyyy / NAGJ x yyyy x yyyy / N... lang:hr score:17 filesize: 8.21 M page_count: 11 document date: 2023-03-15

 [pdf]

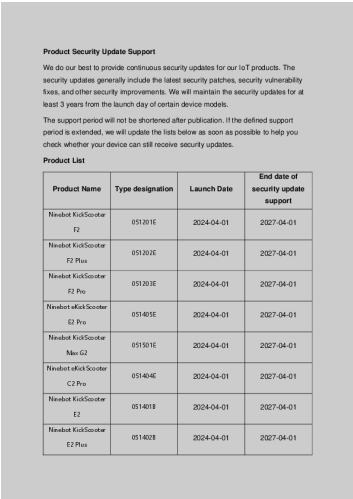

Perry Ding Product Security Update Support assets segway cdn Software List Name Launch Date End date of security update support Segway Ninebot App 2024 04 01 2034 Note The updates policies and devices are subject to change will be reviewed Telecommunications Infrastructure PSTI UK ||| Product Security Update Support We do our best to provide continuous security updates for our IoT p ... pport 2027-04-01 Ninebot KickScooter F2 Plus 051202E 2024-04-01 2027-04-01 Ninebot KickScooter **F2 Pro** 051203E 2024-04-01 2027-04-01 Ninebot eKickScooter E2 Pro 051405E 2024-04-01 2027-04-0... lang:en score:17 filesize: 33.51 K page_count: 2 document date: 2024-07-15