

[Manuals.plus](#) /

› [JISULIFE](#) /

› JISULIFE Handheld Fan Pro1 User Manual

JISULIFE JL-FA53PNV

JISULIFE Handheld Fan Pro1 User Manual

Model: JL-FA53PNV

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your JISULIFE Handheld Fan Pro1. Please read this manual thoroughly before using the product and retain it for future reference.

The JISULIFE Handheld Fan Pro1 is a portable fan designed for personal cooling. It features a powerful brushless motor, stepless wind speed adjustment, an LED display, and a hidden blade design for enhanced safety.

PRODUCT OVERVIEW



Figure 1: Front and back view of the JISULIFE Handheld Fan Pro1, showcasing its compact design and the fan outlet and inlet.



Figure 2: Two JISULIFE Handheld Fan Pro1 units, one in navy and one in white, highlighting the sleek design.

Key Features:

- **Hidden Blade Design:** Ensures safety by preventing accidental contact with fan blades, suitable for environments with children and pets.
- **Powerful Airflow:** Equipped with a high-performance brushless motor, delivering wind speeds up to 9 meters per second.
- **Stepless Wind Adjustment:** Intuitive scroll wheel allows for precise, stepless adjustment of wind speed from 1 to 100 levels.
- **LED Display:** Digital display shows real-time battery level, charging status, and current wind speed.
- **Long Battery Life:** Integrated 3600mAh high-capacity battery provides up to 12 hours of continuous operation on low wind settings.
- **USB-C Charging:** Features a versatile USB Type-C port for convenient charging.
- **Safety Lock:** A slide switch safety lock prevents accidental activation during transport.

- **Compact and Portable:** Lightweight design (215 grams) for easy carrying.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and in good condition:

- JISULIFE Handheld Fan Pro1 Main Unit
- USB-C Charging Cable
- Strap
- User Manual (Global Version)

SETUP

Initial Charging:

Before first use, fully charge the fan. Connect the provided USB-C charging cable to the fan's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The LED display will indicate charging status and battery level.

安全ロック機能搭載

スライドスイッチ式の安全ロック設計は、
バッグ内での誤操作を防ぎます。



持ち運びに
便利



USB-Cポート搭載

充電にはモバイル機器との
汎用性が高いUSB-Cポートを搭載していて、
実用性に優れています。

Figure 3: The JISULIFE Handheld Fan Pro1 connected to a USB-C charging cable, illustrating the charging port location.

Attaching the Strap:

Locate the strap attachment point at the base of the fan handle. Thread the strap through the opening and secure it as desired for convenient carrying.

OPERATING INSTRUCTIONS

Power On/Off:

Press and hold the power button located on the handle to turn the fan on or off.

Adjusting Wind Speed:

Rotate the scroll wheel (located above the power button) up or down to steplessly adjust the wind speed from 1 to 100 levels. The current wind speed will be displayed on the LED screen.

Jisulife Handheld Fan Pro1は、軽量でコンパクトサイズながら、

超強力な風量が特徴の高機能ハンディファンです。

LEDディスプレイや無段階風力調整など、多彩な機能を盛り込みました。

小さな子供やペットが近づいても安全に使用できるよう、

羽根を隠すデザインを採用しています。

安全 羽根隠し設計

髪の毛や指が触れにくい構造で、
お子様でも安心して使用可能です

効率的な吸気・防塵を実現

ガード部分は羽根を完全に囲い、風を他方に逃さず、
内部にほこりが入りにくい設計です。



Figure 4: Close-up of the LED display on the JISULIFE Handheld Fan Pro1, showing "AIR VOLUME" and "POWER" indicators with numerical values.



Figure 5: The JISULIFE Handheld Fan Pro1's LED display indicating battery level and wind speed, with a visual representation of the 3600mAh battery capacity.

Safety Lock Function:

To prevent accidental activation when carrying the fan in a bag, slide the safety lock switch to the "OFF" position. Slide it to "ON" to enable fan operation.



Figure 6: Illustration of the safety lock switch on the JISULIFE Handheld Fan Pro1, showing "ON" and "OFF" positions.

MAINTENANCE

Cleaning:

- Ensure the fan is turned off and disconnected from any power source before cleaning.
- Wipe the exterior of the fan with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or immerse the fan in water.
- The hidden blade design helps prevent dust accumulation on the blades. If necessary, use a soft brush or compressed air to gently clear any debris from the air inlet and outlet.

Storage:

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery before storing to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Safety lock is engaged.	Charge the fan using the USB-C cable. Disengage the safety lock by sliding it to the "ON" position.
Weak airflow.	Wind speed set too low. Obstruction in air inlet/outlet.	Increase wind speed using the scroll wheel. Check for and remove any obstructions.
Fan stops unexpectedly.	Battery is low. Overheating protection activated.	Recharge the fan. Turn off the fan, allow it to cool down, then restart.
LED display not working.	Fan is off or battery is completely depleted.	Turn on the fan or charge the battery. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Handheld Fan Pro1 (JL-FA53PNV)
Brand	JISULIFE
Color	Navy
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Capacity	3600 mAh
Max Wind Speed	9 Meters per Second
Wind Speed Adjustment	Stepless (1-100 levels) via scroll wheel
Charging Port	USB Type C
Voltage	5 Volts
Product Dimensions	2.4"D x 2.32"W x 6.18"H
Item Weight	215 Grams (7.6 ounces)
Certifications	CE, FCC, RoHS, UKCA

SAFETY INFORMATION

Please read and follow these safety precautions to prevent injury or damage to the product:

- Do not insert fingers or foreign objects into the fan grille.
- Keep the fan away from water or other liquids. Do not use in wet environments.
- Do not disassemble, repair, or modify the fan yourself. Contact qualified personnel for service.
- Keep out of reach of small children unless supervised.
- Do not expose the fan to extreme temperatures, direct sunlight, or open flames.

- Use only the provided charging cable or a certified USB-C cable for charging.
- If the fan exhibits abnormal behavior, emits smoke, or has a strange odor, immediately turn it off and disconnect it from the power source.

WARRANTY AND SUPPORT

JISULIFE products typically come with a limited warranty. Please refer to the warranty card included in your package or visit the official JISULIFE website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact JISULIFE customer service through their official channels. Contact information can usually be found on the product packaging or their official website.

© 2024 JISULIFE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question