

B0D2D2Y568

Generic Automatic Shoe Film Machine User Manual

Model: B0D2D2Y568

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Generic Automatic Shoe Film Machine. Please read this manual thoroughly before using the device and retain it for future reference.

The Automatic Shoe Film Machine is designed to apply a protective film to the soles of shoes, reducing the spread of dirt and contaminants in various environments such as homes, offices, laboratories, and hygiene areas. It offers a convenient, hands-free method for maintaining cleanliness.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the device:

- Do not touch the internal cutting blade. It is sharp and can cause injury.
- Keep the device away from water or excessive moisture.
- Ensure the device is placed on a stable, flat surface during use.
- This device is intended for applying shoe film only. Do not use it for other purposes.
- Keep out of reach of small children to prevent misuse or injury.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Automatic Shoe Film Machine
- 3 x Rolls of Shoe Film



Image: The Automatic Shoe Film Machine shown with three rolls of shoe film, as typically included in the package.

SPECIFICATIONS

Feature	Detail
Material	ABS, Sponge, Stainless Iron, PE
Product Dimensions (L x W x H)	58 x 26 x 10 cm (22.83 x 10.23 x 3.93 inches)
Net Weight	2.4 kg (5.29 lbs)
Shoe Film Roll Size	16 cm (W) x 40 M (L)
Approximate Uses per Roll	500 times



Image: Top-down view of the shoe film machine with its dimensions clearly indicated: 58cm/22.83in length, 26cm/10.23in width, and 10cm/3.93in height.

SETUP

Follow these steps to prepare your shoe film machine for use:

1. **Unpack the Device:** Carefully remove the shoe film machine and all accessories from its packaging.
2. **Open the Film Compartment:** Locate the top cover of the machine and open it to reveal the film loading area.



Image: The shoe film machine with its top cover open, showing a roll of shoe film correctly placed inside the compartment.

- 3. Load the Shoe Film Roll:** Place one of the provided shoe film rolls into the designated slot within the compartment. Ensure the film unwinds correctly.



Image: A close-up view of a shoe film roll being inserted into the machine's internal compartment, ready for use.

4. **Close the Cover:** Securely close the top cover of the machine.
5. **Position the Machine:** Place the machine on a flat, stable surface near the entrance of the area where it will be used.

OPERATING INSTRUCTIONS

Using the Automatic Shoe Film Machine is a simple three-step process:

1. **Step 1: Tread**

Place your foot firmly onto the designated tread area of the machine. Ensure your shoe is centered on the film application surface.



Image: A close-up of a foot with a shoe placed on the machine's tread area, initiating the film application process.

2. Step 2: Pull

While keeping your foot on the machine, gently pull your foot backward. This action will draw the shoe film from the roll and apply it to the sole of your shoe.



Image: A person demonstrating the 'pull' step, moving their foot backward on the machine to wrap the shoe film around the sole.

3. Step 3: Cut

Once the film is applied to your satisfaction, lift your foot at an approximate 45-degree angle. This action will engage the internal blade, cutting the film cleanly. Repeat for the other foot.



Image: A person lifting their foot from the machine, demonstrating the final step where the shoe film is cut after being applied to the shoe sole.

Important: Do not touch the internal cutting blade.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your shoe film machine.

- **Cleaning:** Periodically wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Film Replacement:** When a roll of shoe film is depleted, replace it with a new roll following the "Setup" instructions.
- **Blade Area:** Ensure the area around the cutting blade remains clear of debris. Exercise extreme caution and avoid direct contact with the blade.

TROUBLESHOOTING

If you encounter issues with your Automatic Shoe Film Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Film not applying correctly	Film roll incorrectly loaded or depleted.	Check film roll placement. Replace if empty. Ensure foot is centered and pulled back smoothly.
Film not cutting cleanly	Foot not lifted at correct angle or debris near blade.	Ensure foot is lifted at approximately a 45-degree angle. Carefully inspect the blade area for obstructions (do not touch the blade directly).
Machine is unstable	Placed on an uneven surface.	Relocate the machine to a flat, stable surface.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided by your retailer or the manufacturer's official website. Keep your purchase receipt as proof of purchase.