

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PHILIPS](#) /

› [PHILIPS Bluetooth Speaker TAS2218/94 User Manual](#)

## PHILIPS TAS2218/94

# PHILIPS Bluetooth Speaker TAS2218/94 User Manual

Model: TAS2218/94

## 1. INTRODUCTION

---

Thank you for purchasing the PHILIPS Bluetooth Speaker TAS2218/94. This portable speaker combines a timeless retro wooden design with modern audio technology, offering a rich and immersive sound experience. Designed for both indoor and outdoor use, it features versatile connectivity options and a long-lasting battery. Please read this manual carefully before using the product to ensure proper operation and to maximize its performance.

## 2. PRODUCT OVERVIEW

---

### 2.1 Key Features

- **Wooden Antique Design:** Blends classic aesthetics with modern technology.
- **Powerful 10W RMS Output:** Delivers clear and robust sound with 2.0 channel configuration.
- **Extended Playtime:** Up to 6 hours of continuous music playback on a single charge.
- **Versatile Connectivity:** Supports Bluetooth, USB playback, FM radio, and Mic Input.
- **Portable Design:** Equipped with a carry strap for easy transport.
- **Intuitive Controls:** Features touch controls for seamless operation.

### 2.2 Package Contents

- 1 x PHILIPS Bluetooth Speaker TAS2218/94
- 1 x Charging Cable
- 1 x User Manual (This document)

### 2.3 Product Diagram



Figure 1: Front view of the PHILIPS TAS2218/94 Bluetooth Speaker, showcasing its wooden antique design and fabric grille.



PHILIPS TAS2218/94 Back

Figure 2: Back view of the speaker, showing the integrated carry strap and input ports.



Figure 3: Close-up of the top panel, highlighting the touch-sensitive control interface.

## 3. SETUP

---

### 3.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and the other end to a suitable USB power adapter (not included). The charging indicator light will show the charging status and turn off when fully charged. A full charge provides up to 6 hours of playtime.

### 3.2 Powering On/Off

- To power on, press and hold the Power button (refer to Figure 3 for button location) until the indicator lights illuminate.
- To power off, press and hold the Power button again until the indicator lights turn off.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The speaker features an intuitive touch control panel located on the top surface. This panel allows you to manage playback, volume, and switch between different audio sources.



Figure 4: Detailed view of the touch control panel, showing icons for power, mode, volume, and playback.

### 4.2 Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue light.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "PHILIPS TAS2218/94" from the list of devices.
4. Once connected, the blue indicator light will become solid, and you can begin playing audio from your device.

### 4.3 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port on the back of the speaker.

2. The speaker will automatically switch to USB mode and begin playing the audio files.
3. Use the playback controls on the top panel to skip tracks or pause/play.

#### 4.4 FM Radio

1. Press the Mode button on the control panel until you hear the FM radio.
2. To automatically scan and save available stations, press and hold the Play/Pause button. The speaker will scan and store stations.
3. Use the Next/Previous track buttons to navigate between saved FM stations.

#### 4.5 Microphone Input

1. Connect a microphone (not included) to the Mic Input port on the back of the speaker.
2. Adjust the microphone volume using the speaker's volume controls or the microphone's own controls, if available.
3. The microphone input can be used simultaneously with other audio sources like Bluetooth or USB for karaoke or announcements.



Figure 5: Visual representation of the multiple connectivity options: FM, Bluetooth, USB, and Mic Input.

## 5. MAINTENANCE

---

### 5.1 Cleaning

- Wipe the speaker's surface with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings.

### 5.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery every 3-6 months to maintain its lifespan.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source and charge it fully.
No sound from the speaker.	Volume is too low; Incorrect audio source selected; Device not connected.	Increase the volume on both the speaker and the connected device. Ensure the correct mode (Bluetooth, USB, FM) is selected. Re-pair Bluetooth device.
Bluetooth device cannot pair.	Speaker is not in pairing mode; Device is too far; Interference.	Ensure the speaker is in Bluetooth pairing mode (flashing blue light). Move the device closer to the speaker (within 10 meters). Turn off other Bluetooth devices.
Poor FM radio reception.	Weak signal; Environmental interference.	Relocate the speaker to an area with better signal reception. Avoid placing near electronic devices that may cause interference.
Controls are unresponsive.	Temporary software glitch.	Power off the speaker, wait a few seconds, then power it back on.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Name	TAS2218/94
Speaker Type	Bluetooth Speaker
Audio Output	10W RMS (5W x 2)
Channels	2.0 Surround Sound
Connectivity	Bluetooth, USB, FM Radio, Mic Input
Wireless Technology	Bluetooth
Control Method	Touch, Button

Feature	Detail
Battery Life	Up to 6 Hours
Power Source	Corded Electric (for charging)
Product Dimensions (D x W x H)	16.5D x 24W x 10H Centimeters
Item Weight	1.74 kg (1740 Grams)
Material	Wood
Color	Brown
Included Components	1 - Bluetooth Speaker
Water Resistance Level	Water Resistant

## 8. WARRANTY AND SUPPORT

---

This PHILIPS product is manufactured and imported by TPV Technology India Private Limited. For any product-related queries, support, or warranty claims, please contact the manufacturer directly.

- **Manufacturer:** TPV Technology India Private Limited
- **Contact Number:** 18004256396
- **Address:** 501-508 Bestech Chambers, Block B, Sushant Lok Phase 1, Gurgaon, Haryana 122001

Please retain your purchase receipt and original packaging for warranty purposes. Refer to the warranty card included with your product for specific terms and conditions.