

KIRAINAFLY YMCCBG-8001

KIRAINAFLY YMCCBG-8001 Electric Burr Coffee Grinder Instruction Manual

Model: YMCCBG-8001

1. SETUP AND INITIAL ASSEMBLY

Before first use, ensure all components are correctly assembled. The KIRAINAFLY Electric Burr Coffee Grinder features a safety mechanism that prevents operation unless the bean hopper and powder container are properly installed and locked into place.

1.1 Installing the Upper Grinding Head

1. Align the arrow on the upper grinding head with the arrow on the grinder body.
2. Insert the upper grinding head vertically into its slot.
3. Rotate the upper grinding head counter-clockwise approximately 180 degrees until it locks securely into place and does not move.



Image: Proper installation of the upper grinding head, showing alignment arrows and rotation direction.

1.2 Installing the Coffee Bean Hopper

1. Align the arrow on the coffee bean hopper with the arrow on the grinder body.
2. Keep the hopper level as you insert it into the top of the grinder.
3. Gently twist the hopper back and forth until you hear steady clicking sounds, indicating it is securely seated.
4. Ensure the powder container (with its cover) is also properly inserted into the front slot until it clicks into place.



Image: Step-by-step guide for installing the coffee bean hopper, highlighting arrow alignment.

Once both the bean hopper and powder container are correctly installed, plug in the grinder. The red power button light will illuminate, indicating the grinder is in standby mode and ready for operation.

1.3 Setup Video Guide

Video: This video demonstrates the installation and preparation steps for starting the KIRAINAFLY Electric Burr Coffee Grinder, ensuring all parts are correctly assembled for safe operation.

2. OPERATING INSTRUCTIONS

The KIRAINAFLY Electric Burr Coffee Grinder is designed for simple, one-touch operation with customizable grind settings.

2.1 Adjusting Grind Settings

The grinder offers 28 precise grind settings, allowing you to achieve the perfect coarseness for various brewing methods. Rotate the bean hopper to select your desired grind level, from fine (1-5) for espresso to coarse (24-28) for French press.

- **Fine (1-5):** Ideal for Espresso.
- **Medium Fine (6-11):** Suitable for Moka Pot.
- **Medium (12-17):** Recommended for Filter Coffee.
- **Medium-Coarse (18-23):** Best for Pour Over.
- **Coarse (24-28):** Perfect for French Press.

EASY TO CLEAN

Include brush for cleaning easily



Image: Visual guide to the 28 precise grind settings, showing recommended settings for different coffee types.

2.2 Selecting Cup Quantity and Grinding

Use the cup selection dial to choose the desired number of servings, from 2 to 12 cups. This pre-sets the grinding duration for precise results.

1. Pour whole coffee beans into the hopper.
2. Rotate the bean hopper to your desired grind setting.
3. Turn the cup selection dial to the number of cups you wish to brew (2-12).
4. Press the power button to start grinding. The grinder will automatically stop once the selected quantity is processed.

ADJUSTABLE GRINDING

2-12 cup meet your need



Image: The adjustable cup selection dial on the grinder, allowing users to choose between 2 and 12 cups for grinding.

2.3 Anti-Static Technology

The grinder incorporates anti-static technology to minimize mess and prevent coffee grounds from sticking to the powder container, ensuring a cleaner grinding experience.

THE NEWEST ANTI-STATIC TECHNOLOGY

Makes the ground coffee chamber mess-free, improving your grinding experience



Image: The powder container, illustrating the anti-static feature that reduces coffee ground residue.

3. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your KIRAINAFly coffee grinder.

3.1 Disassembly for Cleaning

The coffee bean hopper and powder container can be completely disassembled for thorough cleaning.

1. Unplug the grinder from the power outlet.
2. Remove the coffee bean hopper by twisting it clockwise until it unlocks and lifts off.
3. Remove the upper grinding head by rotating it clockwise until you hear a "pop," then lift it vertically to remove.
4. Slide out the powder container from the front of the grinder.

Installation of upper grinding head



Image: Demonstrates how to remove the upper grinding head by twisting it clockwise and lifting it.

3.2 Cleaning the Components

Use the provided cleaning brush to remove any residual coffee grounds from the burrs, hopper, and container. The hopper and container can be washed with warm, soapy water. Ensure all parts are completely dry before reassembling.



Image: The grinder's easy-to-clean design, showing the removable burr and the included cleaning brush.

4. TROUBLESHOOTING

If you encounter issues with your KIRAINAFLY Electric Burr Coffee Grinder, refer to the following common solutions:

4.1 Grinder Not Starting / Standby Light Off

If the red power button light does not illuminate when plugged in, the safety mechanism may be engaged. This typically means the bean hopper or the upper burr assembly is not correctly installed.

- **Check Upper Burr Assembly:** Ensure the upper burr is inserted correctly and twisted counter-clockwise 180 degrees until it is locked in place.
- **Check Bean Hopper:** Verify the bean hopper is properly seated and twisted gently until steady clicking sounds are heard.
- **Check Powder Container:** Ensure the powder container with its cover is fully inserted and clicked into place.

Once all components are correctly installed, the red power light should turn on, indicating it's ready to operate.

Video: This troubleshooting guide addresses common issues like the grinder not starting, focusing on proper assembly of the burr and hopper.

Video: A short video explaining why the grinder might not start up correctly, emphasizing the importance of the red power light as an indicator.

4.2 Coffee Grounds Spreading / Messy Grinding

If coffee grounds are spreading outside the container during grinding, the lid on the grounds container may not be properly sealed.

- **Ensure Lid is Sealed:** Confirm that the lid of the powder container is securely closed before starting the grinding process. The anti-static design helps contain grounds when sealed correctly.

5. SPECIFICATIONS

Feature	Detail
Model Number	YMCCBG-8001
Brand	KIRAINAFLY
Color	Black
Style	Compact Burr Coffee Grinder
Product Dimensions	6.7"L x 4.3"W x 7.5"H
Item Weight	2.4 pounds (1.09 Kilograms)
Voltage	110 Volts
Material	Acrylonitrile Butadiene Styrene (ABS)
Grinding Settings	28 Precise Settings
Cup Capacity	2-12 Cups Customizable Grind

6. WARRANTY AND SUPPORT

For warranty information, technical support, or any product-related inquiries, please refer to the contact details provided with your purchase or visit the official KIRAINAFLY website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question