

[Manuals.plus](#) /

› [BERGNER](#) /

› BERGNER COPPER Kitchen Scale BG-50058-CP User Manual

## BERGNER BG-50058-CP

# BERGNER COPPER Kitchen Scale BG-50058-CP User Manual

Model: BG-50058-CP

## INTRODUCTION

---

Thank you for choosing the BERGNER COPPER Kitchen Scale. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new kitchen scale. Please read it thoroughly before use and retain it for future reference.

The BERGNER COPPER Kitchen Scale is designed for precise measurement of ingredients up to 5 kg, featuring a backlit LCD display, 1g accuracy, and durable stainless steel construction with a copper/rose gold finish.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Do not immerse the scale in water or other liquids.
- Clean the scale with a damp cloth; do not use abrasive cleaners.
- Place the scale on a flat, stable surface for accurate measurements.
- Do not overload the scale beyond its maximum capacity of 5 kg.
- Keep out of reach of children.
- Remove batteries if the scale will not be used for an extended period.

## PACKAGE CONTENTS

---

- 1 x BERGNER COPPER Kitchen Scale (Model: BG-50058-CP)
- 1 x User Manual

## SETUP

---

1. **Unpacking:** Carefully remove the scale from its packaging. Inspect for any damage.
2. **Battery Installation:**

Locate the battery compartment on the underside of the scale. Open the cover and insert two CR2032 lithium batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.



Image: Underside of the scale with the battery compartment visible. The label indicates "2xCR2032 Lithium Battery".

3. **Placement:** Place the scale on a hard, flat, and stable surface to ensure accurate readings. Avoid soft or uneven surfaces.

## OPERATING INSTRUCTIONS

---



Image: Top view of the BERGNER COPPER Kitchen Scale, showing the copper-finished weighing platform, the backlit LCD display, and the two control buttons (Unit and Tare/Power).

### 1. Power On/Off:

Press the "TARE/ON/OFF" button to turn the scale on. The LCD display will light up and show "0g" when ready. To turn off, press and hold the "TARE/ON/OFF" button for a few seconds, or the scale will automatically shut off after a period of inactivity to conserve battery life.

### 2. Unit Conversion:

Press the "UNIT" button to cycle through available measurement units (e.g., grams (g), ounces (oz), pounds (lb), milliliters (ml)). Select your desired unit before weighing.

### 3. Weighing Items:

Place the item directly onto the center of the weighing platform. The weight will be displayed on the LCD screen. Ensure the item does not exceed the 5 kg maximum capacity.

### 4. Tare Function (Zeroing):

To weigh multiple ingredients in the same container or to exclude the weight of a container:

- Place an empty container on the scale. The display will show its weight.
- Press the "TARE/ON/OFF" button. The display will reset to "0g".
- Add your first ingredient to the container. The display will show the weight of the ingredient.
- To add another ingredient, press the "TARE/ON/OFF" button again to zero the scale, then add the next ingredient. Repeat as needed.

### 5. Overload Indicator:

If "EEEE" or "O-Ld" appears on the display, the scale is overloaded. Remove items immediately to prevent damage.

#### 6. Low Battery Indicator:

If "Lo" appears on the display, the batteries are low and need to be replaced. Refer to the "Battery Installation" section under Setup.

## CARE AND MAINTENANCE

---

- **Cleaning:** Wipe the scale surface with a soft, damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners, harsh chemicals, or immerse the scale in water.
- **Storage:** Store the scale in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the "Lo" indicator appears to ensure continued accuracy and prevent battery leakage.

## TROUBLESHOOTING

---

| Problem                     | Possible Cause                                      | Solution  |
|-----------------------------|---|---|
| Scale does not turn on.     | Dead or incorrectly installed batteries.            | Check battery polarity. Replace batteries if necessary.                           |
| Inaccurate readings.        | Uneven surface, scale overloaded, or dirty sensors. | Place on a flat, stable surface. Do not exceed 5 kg. Clean the weighing platform. |
| "EEEE" or "O-Ld" displayed. | Scale is overloaded.                                | Remove items immediately. Do not exceed 5 kg capacity.                            |
| "Lo" displayed.             | Low battery power.                                  | Replace batteries (2xCR2032).   |

## SPECIFICATIONS

---

- **Model:** BG-50058-CP
- **Brand:** BERGNER
- **Capacity:** 0 - 5 kg (11 lbs)
- **Accuracy:** 1 g (0.05 oz)
- **Units:** g, oz, lb, ml
- **Display:** Backlit LCD
- **Material:** Stainless Steel and ABS
- **Power:** 2 x CR2032 Lithium Batteries (not included)
- **Dimensions:** 22.2 x 16.4 x 2 cm (8.74 x 6.46 x 0.79 inches)
- **Weight:** 420 grams (0.93 lbs)
- **Features:** Tare function, Overload indicator, Low battery indicator, Automatic shut-off

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact

BERGNER customer service through their official website or the retailer where the product was purchased.  
Visit the official BERGNER store for more products and support:[BERGNER Store](#)

