

## Complete Cuisine CC-PM1100

# Complete Cuisine CC-PM1100 Hot-Air Popcorn Maker User Manual

Model: CC-PM1100 | Brand: Complete Cuisine

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric

shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PRODUCT OVERVIEW

The Complete Cuisine CC-PM1100 is a hot-air popcorn maker designed for quick and convenient popcorn preparation. It features a compact design and operates without the need for oil.



Figure 1: Component breakdown of the CC-PM1100 Popcorn Maker.

**PC Material Cover:** Transparent cover allows visibility of the popping process. Hollow design aids heat dissipation.

**PC Material Measuring Cup:** Used to measure 2/3 of corn kernels. Can also be used to melt butter with the heat from popping.

**PP Material Body Shell:** High temperature resistant and easy to clean.

**Non-Slip Foot Pad:** Ensures stability during operation.

**One-Button Switch:** Simple on/off control.

## HOT AIR BLASTING TECHNOLOGY, BLASTING RATE AS HIGH AS 98%.

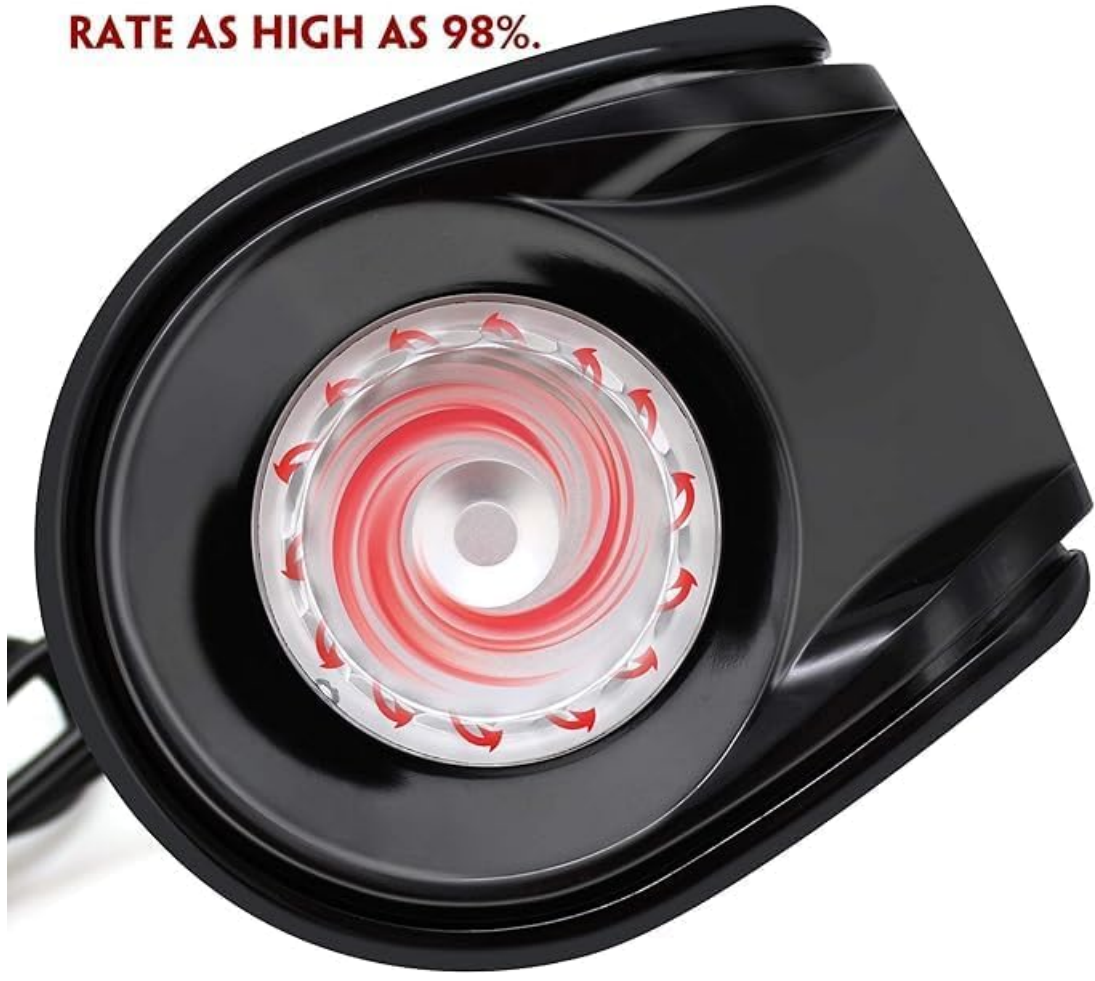


Figure 2: Hot air blasting technology for efficient popping.

The popcorn maker utilizes hot air blasting technology, achieving a popping rate as high as 98% for efficient and consistent results.

### SETUP

Before first use, ensure all packaging materials are removed. Wipe down the exterior of the unit with a damp cloth. Do not immerse the main unit in water.

1. Place the popcorn maker on a stable, flat, heat-resistant surface.
2. Ensure the power cord is not tangled and is within reach of a suitable electrical outlet.
3. Place a large bowl under the popcorn chute to collect the popped corn.



Figure 3: Popcorn maker ready for operation on a countertop.

## OPERATING INSTRUCTIONS

Follow these steps to make delicious hot-air popcorn:

1. Using the provided measuring cup, add 2/3 of corn kernels into the main popping chamber. Do not overfill.
2. Place the measuring cup on top of the transparent cover. If desired, you can place butter in the measuring cup to melt from the heat of the popping process. *Never put butter or oil directly into the aluminum heat chamber.*
3. Ensure a large bowl is positioned under the popcorn chute to catch the popped corn.
4. Plug the appliance into a standard electrical outlet.
5. Press the one-button switch to turn on the popcorn maker.
6. Popcorn will begin to pop and dispense into the bowl within approximately 3 minutes.
7. Once popping stops, turn off the appliance by pressing the switch and unplug it from the outlet.
8. Carefully remove the measuring cup (it may be hot) and the transparent cover.
9. Season your freshly popped popcorn as desired.

## PC MATERIAL CORN SPOON

- Add 2/3 Measuring Cup of corn kernels
- You can put butter, chocolate, etc. in the corn spoon, and melt it with the heat of making popcorn



Figure 4: Measuring and adding corn kernels.



Figure 5: Step-by-step operation overview.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your popcorn maker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the transparent cover and measuring cup. These parts can be washed in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the main unit with a damp cloth. For stubborn spots, use a mild detergent.
4. Clean the interior of the popping chamber with a dry cloth or soft brush to remove any unpopped kernels or debris.
5. *Do not immerse the main unit in water or any other liquid.*
6. Ensure all parts are completely dry before reassembling or storing the appliance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Popcorn not popping or only a few kernels pop.	Appliance not plugged in. Insufficient kernels. Old or dry kernels. Overfilling the popping chamber.	Ensure the appliance is securely plugged into a working outlet. Use the recommended 2/3 measuring cup of kernels. Use fresh popcorn kernels. Do not exceed the recommended kernel amount.
Popcorn burns.	Appliance running too long after popping stops. Foreign objects in the popping chamber.	Turn off the appliance immediately once popping has ceased. Ensure the popping chamber is clean before use.
Excessive unpopped kernels.	Old or dry kernels. Insufficient heating.	Use fresh popcorn kernels. Ensure the appliance is on a stable surface and not obstructed.

## SPECIFICATIONS

- **Model:** CC-PM1100
- **Brand:** Complete Cuisine
- **Color:** Red (as per current model)
- **Capacity:** 5.33 ounces of kernels
- **Special Feature:** Oil Free, Portable
- **Material:** Polypropylene (PP)
- **Product Dimensions:** 5"L x 9"W x 8"H
- **Included Components:** Lid (with measuring cup)
- **Power:** 1200 Watts
- **UPC:** 079902184293

## WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the documentation included with your product or visit the official Complete Cuisine website. Keep your purchase receipt for warranty claims.