

Manuals.plus /

› Rowenta /

› Rowenta Fresh 180 Digital Tower Fan VU6661 Instruction Manual

Rowenta VU6661

Rowenta Fresh 180 Digital Tower Fan VU6661 Instruction Manual

1. INTRODUCTION

Thank you for choosing the Rowenta Fresh 180 Digital Tower Fan, Model VU6661. This fan is designed to provide efficient and powerful cooling with a 180-degree oscillation feature. Its slim design and digital controls offer both style and convenience for indoor use.

This manual provides essential information for the safe and effective use, assembly, operation, and maintenance of your new tower fan. Please read it thoroughly before first use and keep it for future reference.





Figure 1: Rowenta Fresh 180 Digital Tower Fan with its remote control.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fan.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

- To disconnect the fan, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not use outdoors.
- Do not use in wet or moist locations such as bathrooms.
- Always place the fan on a stable, flat, and dry surface.
- Ensure the fan is unplugged before cleaning or performing any maintenance.

3. PACKAGE CONTENTS

Please check the contents of your package. It should include:

- Rowenta Fresh 180 Digital Tower Fan unit
- Remote Control
- Power Cord (integrated)
- User Manual (this document)

4. ASSEMBLY

The Rowenta Fresh 180 Digital Tower Fan is designed for easy, no-tool assembly. Follow these general steps:

1. Carefully remove all components from the packaging.
2. Place the fan base on a flat, stable surface.
3. Align the main fan body with the base and gently push down until it securely clicks into place. Ensure the power cord is not pinched during assembly.
4. Verify that all parts are firmly connected before plugging the fan into a power outlet.

5. OPERATING INSTRUCTIONS

Your Rowenta Fresh 180 Digital Tower Fan can be operated using the control panel on top of the unit or the included remote control.

5.1 Control Panel and Remote Control



Figure 2: The remote control for the Rowenta Fresh 180 Digital Tower Fan.

The remote control provides convenient access to all fan functions. It features dedicated buttons for power, speed adjustment, oscillation, timer, and auto mode. The fan unit also has a digital control panel with similar functions.

5.2 Power On/Off

- Plug the fan into a standard 120V AC electrical outlet.
- Press the Power button (⏻) on the control panel or remote to turn the fan on or off.

5.3 Speed Adjustment

The fan offers multiple speed settings for customized airflow.

- Press the Speed button (+/-) on the control panel or remote to cycle through the available speed levels.
- The digital display will indicate the current speed setting.

5.4 Oscillation Function

The 180-degree oscillation feature helps distribute air across a wider area.

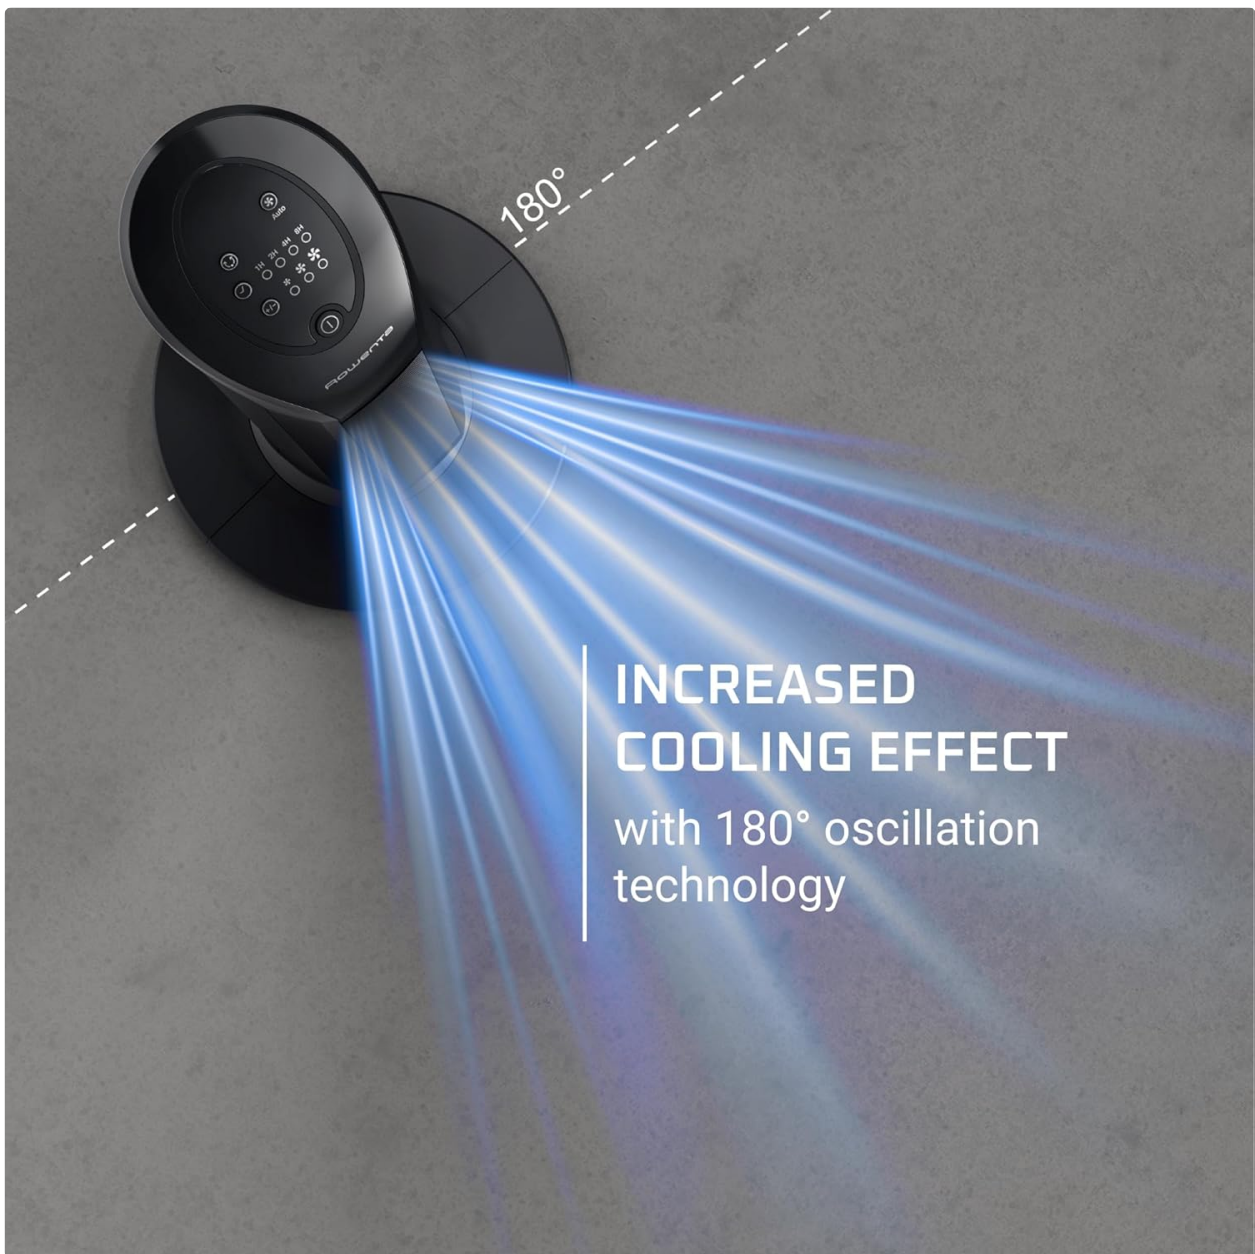


Figure 3: Illustration of the fan's 180-degree oscillation technology for increased cooling effect.

- Press the Swing/Oscillation button (~) on the control panel or remote to activate or deactivate the oscillation.
- When activated, the fan will rotate horizontally through a 180-degree arc.

5.5 Timer Function

Set the fan to automatically turn off after a specified period.

- Press the Timer button (**Clock icon**) on the control panel or remote.
- Each press will cycle through available timer settings (e.g., 1 hour, 2 hours, up to 8 hours).
- The digital display will show the selected timer duration.

5.6 Auto Mode

The fan features an automatic mode that adjusts speed based on ambient temperature.

- Press the Auto button (**Fan icon with 'A'**) on the control panel or remote to activate this mode.
- The fan will automatically select the optimal speed for cooling.

6. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your fan.

6.1 Cleaning the Fan

1. Always unplug the fan from the power outlet before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. The fan features a removable rear grid for easier cleaning of internal components. Carefully remove the rear grid as per the instructions in the full manual (if provided) and use a vacuum cleaner with a brush attachment to remove dust from the fan blades and internal parts.
4. Ensure all parts are completely dry before reassembling and plugging in the fan.

7. STORAGE

When not in use for extended periods, store your fan properly:

- Unplug the fan and clean it thoroughly as described in the Maintenance section.
- Store the fan in its original packaging or cover it to protect it from dust.
- Keep the fan in a cool, dry place, away from direct sunlight and extreme temperatures.
- The integrated carrying handle (



) allows for easy transport.

8. TROUBLESHOOTING


If you encounter issues with your Rowenta Fresh 180 Digital Tower Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Ensure the fan is securely plugged into a working electrical outlet. Press the Power button on the fan or remote.
Weak or no airflow.	Fan speed is too low. Air inlet/outlet blocked. Dust accumulation.	Increase the fan speed setting. Ensure there are no obstructions around the fan. Clean the fan, especially the rear grid and blades.
Fan is noisy.	Fan not on a stable surface. Internal dust/debris.	Place the fan on a flat, stable surface. Clean the fan thoroughly. If noise persists, contact customer support.
Remote control not working.	Battery depleted. Obstruction between remote and fan.	Replace the remote control battery (CR2032, not included). Ensure a clear line of sight between the remote and the fan's receiver.

If the problem persists after trying these solutions, please contact Rowenta Customer Support.

9. SPECIFICATIONS

Feature	Detail
Model Name	Rowenta Fresh 180 Tower Fan
Model Number	VU6661U0
Brand	Rowenta
Type	Floor Fan (Tower Fan)
Color	Black
Power Source	AC (120V)
Wattage	40 watts
Number of Power Levels	5
Oscillation	180 degrees
Control Method	Remote, Digital Control Panel
Special Features	8-hour Digital Timer, Auto Mode, Integrated Carrying Handle, Removable Rear Grid
Product Dimensions (D x W x H)	11.42" x 11.42" x 39.96"
Item Weight	8.64 pounds
Indoor/Outdoor Usage	Indoor
UPC	023108908306

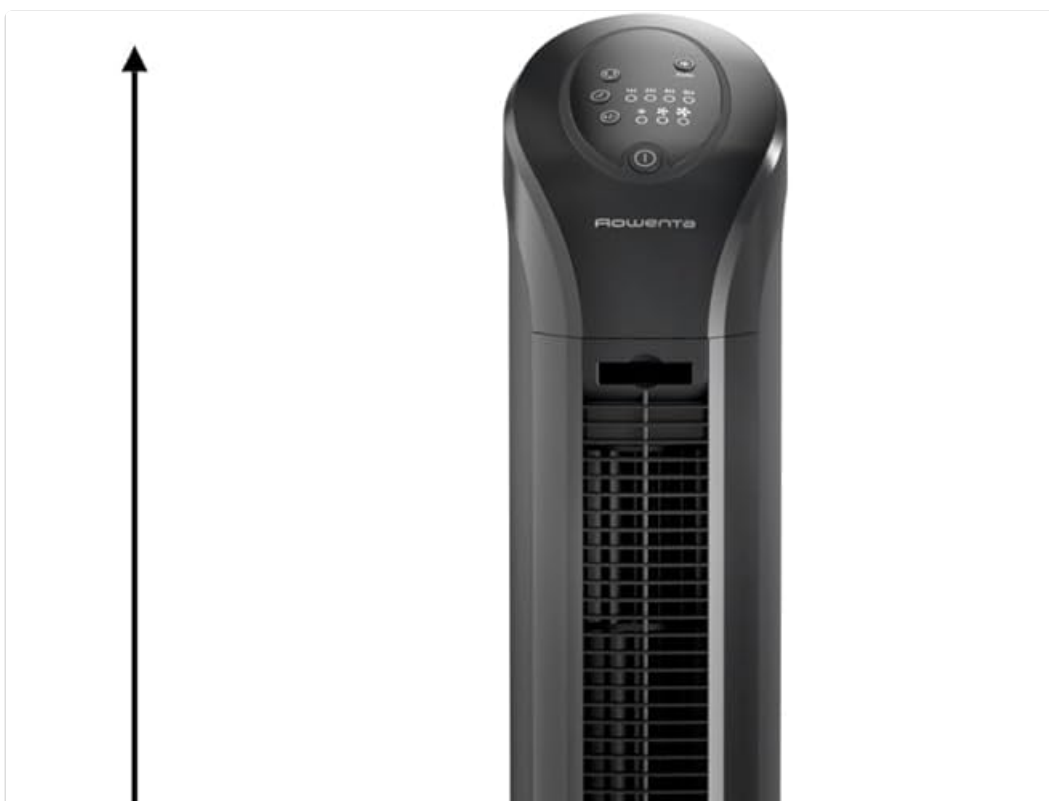

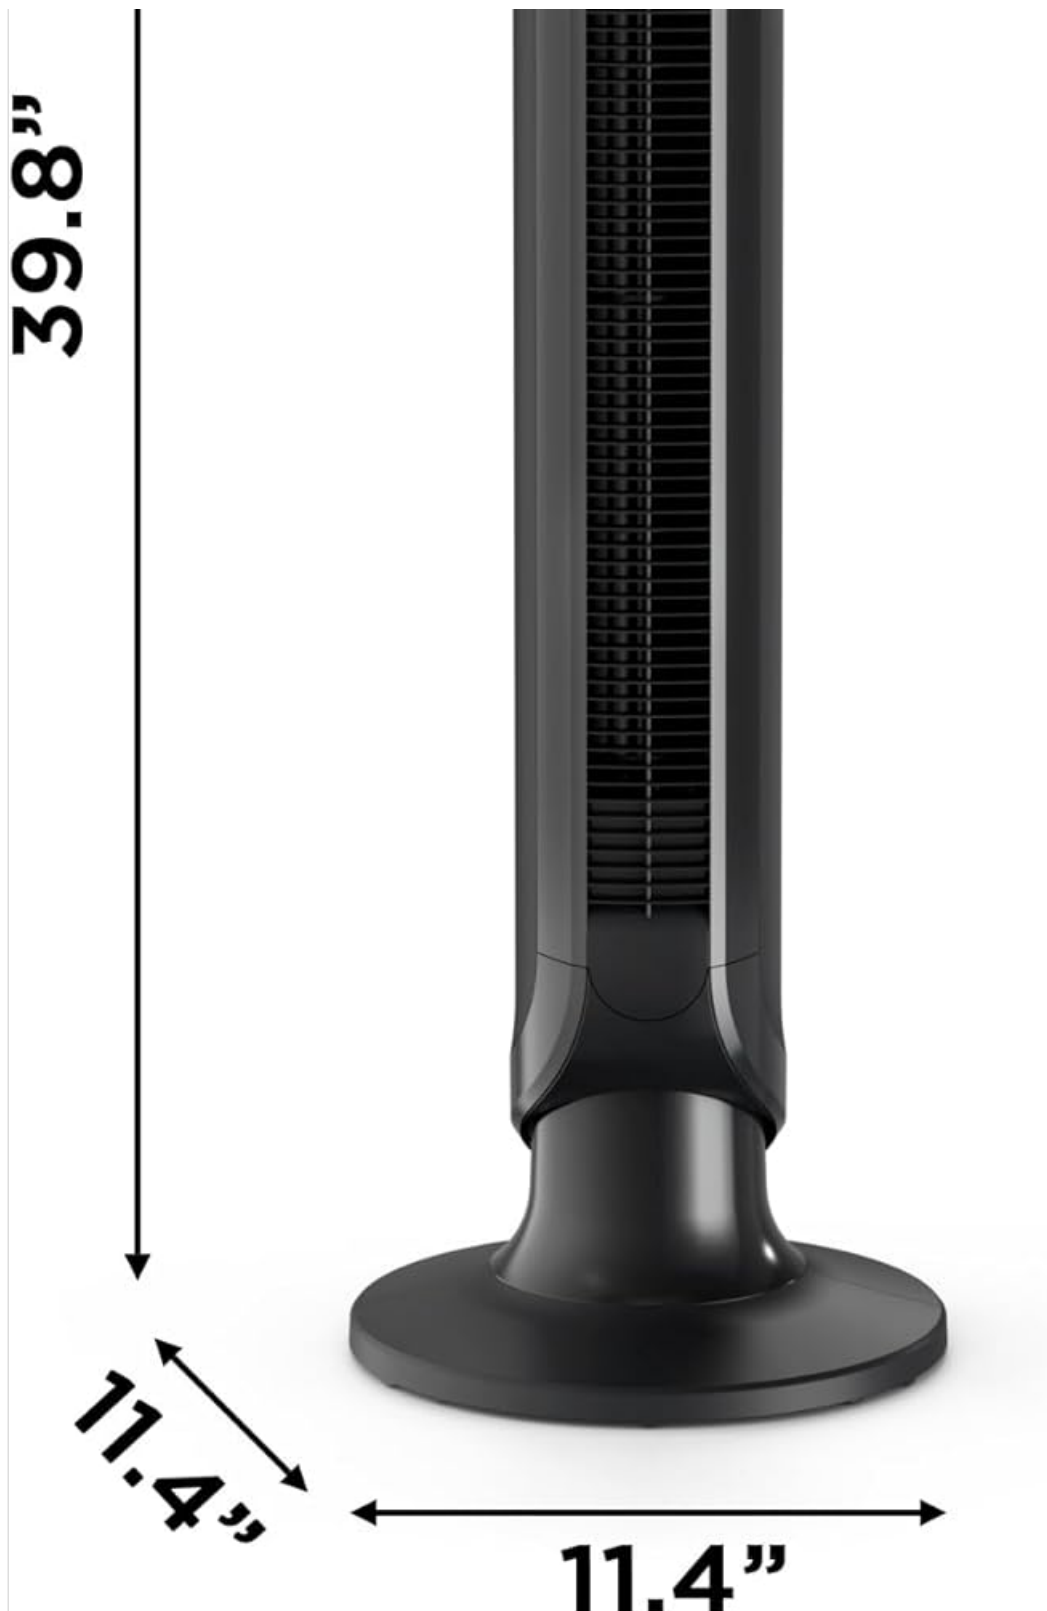


Figure 4: Key dimensions of the Rowenta Fresh 180 Digital Tower Fan.

10. WARRANTY AND CUSTOMER SUPPORT

Rowenta products are manufactured to high-quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Rowenta website. Keep your purchase receipt as proof of purchase.

For technical assistance, replacement parts, or any questions regarding your Rowenta Fresh 180 Digital Tower Fan, please contact Rowenta Customer Support. Contact information can typically be found on the Rowenta website or on your product packaging.

Online Support: Visit the official Rowenta Store on Amazon for product information and support resources.

