

[Manuals.plus](#) /

› [Rolosar](#) /

› Rolosar Wireless Earbuds (Model Q76) - Instruction Manual

Rolosar Q76

Rolosar Wireless Earbuds (Model Q76) - Instruction Manual

Your guide to setting up, operating, and maintaining your new wireless earbuds.

1. PRODUCT OVERVIEW

The Rolosar Wireless Earbuds Model Q76 are designed for an active lifestyle, offering advanced Bluetooth 5.4 connectivity, Hi-Fi sound quality with ENC noise canceling, and a durable IP7 waterproof rating. With flexible ear hooks and smart touch controls, these earbuds provide a comfortable and convenient audio experience for various activities.



Image: Rolosar Wireless Earbuds (Model Q76) in their charging case, showcasing the purple color and digital battery display.

2. WHAT'S IN THE BOX

- 2* Wireless Earbuds
- 1* User Manual
- 1* USB C Cable
- 1* Headphone Box (Charging Case)
- Multiple sizes of ear tips (S/M/L)

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge your earbuds and charging case. Connect the provided USB-C cable to the charging case and a power source. The LED display on the case will indicate the charging status and battery level.

50H LONG PLAYTIME



Image: The charging case displaying battery levels for both earbuds and the case itself, indicating USB-C fast charging. A full charge for the earbuds takes approximately 1.5 hours, and the charging case takes about 2 hours. The case provides up to 50 hours of extended usage time.

3.2 Pairing with Your Device

1. Ensure Bluetooth is enabled on your smartphone, tablet, or laptop.
2. Open the lid of the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device, search for Bluetooth devices and select "Q76" from the list to connect.
4. The earbuds will automatically connect to the previously paired device upon opening the case lid for subsequent uses.

2023 Bluetooth 5.3

ONE STEP AUTO PAIRING

Step1: Open the lid (Earbuds auto power on)

Step2: After open the Phone Bluetooth, Click the <Q76> to Pairing

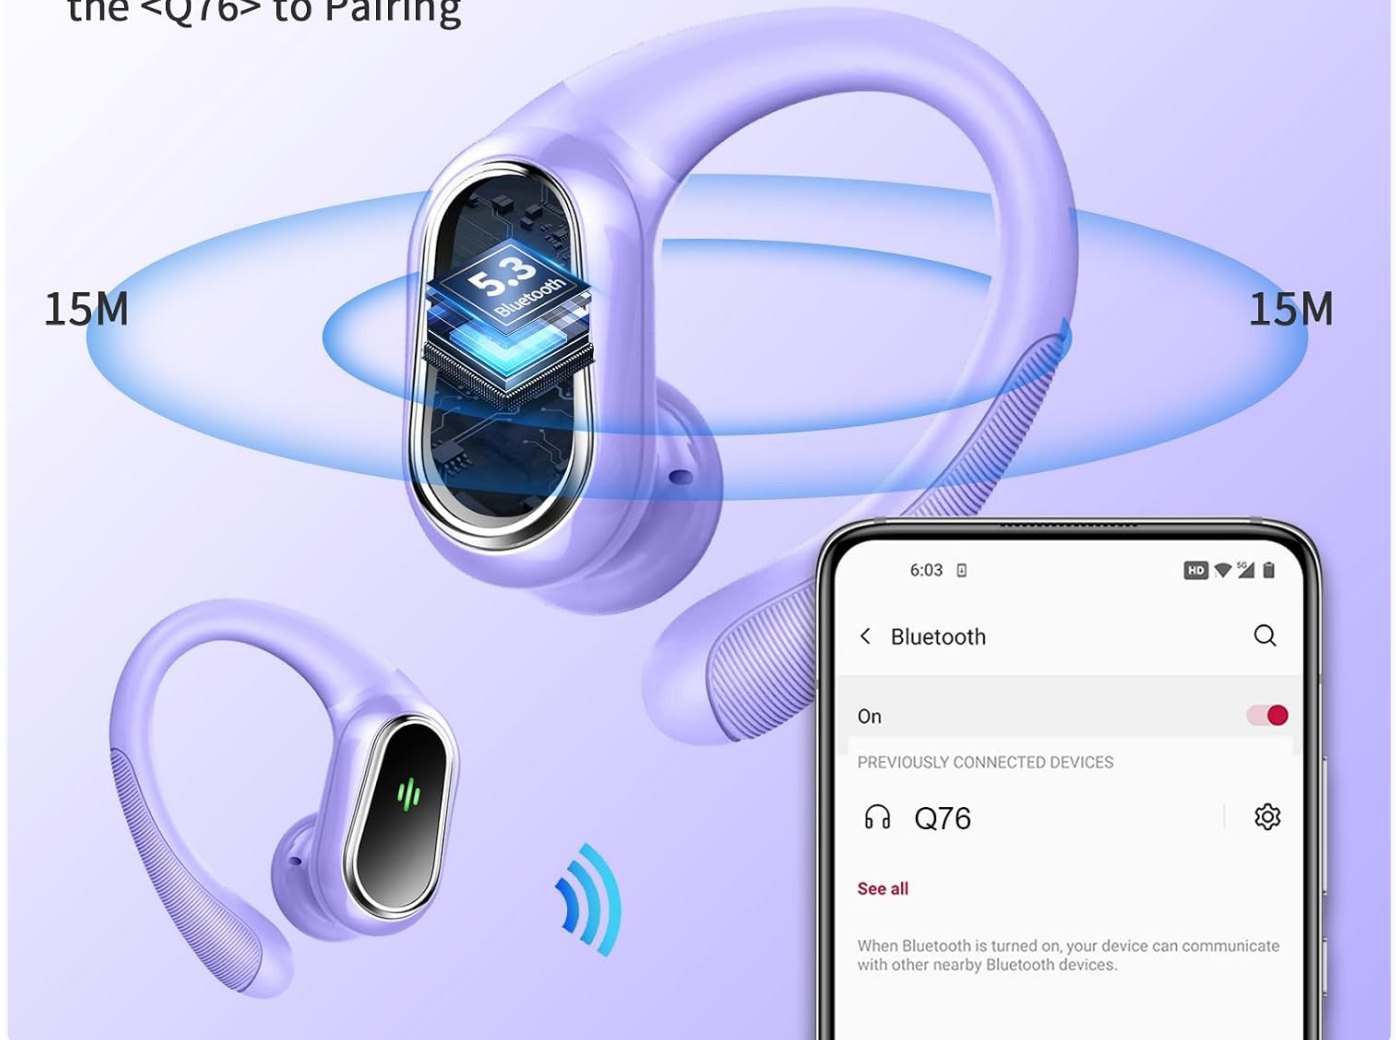


Image: Diagram illustrating the one-step auto pairing process for the earbuds with a smartphone, highlighting Bluetooth 5.3 connectivity range.

Your browser does not support the video tag.

Video: Demonstration of connecting the Rolosar Wireless Earbuds to a cell phone via Bluetooth.


3.3 Wearing the Earbuds

The earbuds are designed with flexible ear hooks for a secure and comfortable fit, especially during sports and workouts. Choose the ear tips (S/M/L) that best fit your ears for optimal sound and comfort.

1. Choose the right size ear caps (S/M/L).
2. Place the ear hook over your ear.
3. Rotate and adjust the earbud to a comfortable angle within your ear.

Designed for sports Earhooks Design

Comfortable, firm, not easy to fall off

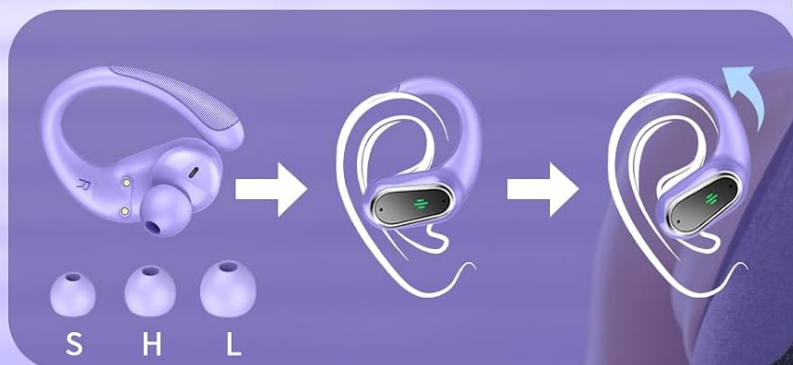

- ① Choose the right size ear caps.
- ② Place the earhook over your ear.
- ③ Rotate and adjust to a comfortable angle.

Image: Visual guide on how to properly wear the earbuds with ear hooks, including selecting ear tip sizes and adjusting for comfort.

4. OPERATING INSTRUCTIONS

4.1 Smart Touch Controls

The earbuds feature high-sensitivity smart touch controls located on the upper part of the earphone surface. Refer to the table below for common functions:

Action	Function
Tap once (Right Earbud)	Volume Up
Tap once (Left Earbud)	Volume Down
Double-tap (Either Earbud)	Play/Pause Music

Action	Function
Long press for 3 seconds (Right Earbud)	Next Song
Long press for 3 seconds (Left Earbud)	Previous Song
Tap once (during incoming call)	Answer Call
Long press (during incoming call)	Reject Call
Double-tap (during call)	End Call
Triple-tap (Either Earbud)	Activate Voice Assistant (Siri, Google Assistant)

SMART TOUCH CONTROL

High-sensitivity smart touch brings easy operation





ON/OFF



Play / Pause



Reject



Volume -/+



Answer a call



Hang up



Previous/
Next Song



Voice Assistant

Image: Visual representation of the smart touch control functions on the earbuds, including power, play/pause, volume, call management, and voice assistant activation.

Video: Demonstration of the touch command operations for the earbuds, showing how to control music playback and volume.

5. MAINTENANCE AND CARE

5.1 Waterproof Rating

The Rolosar Q76 earbuds feature an IP7 waterproof rating, making them resistant to sweat, rain, and minor water splashes. This makes them ideal for workouts, gym sessions, cycling, and other outdoor activities.



Image: Illustration highlighting the IPX7 waterproof feature of the earbuds, showing them resistant to rain, sweat, and splashes.

5.2 Cleaning

To maintain optimal performance and hygiene, regularly clean your earbuds. Use a soft, dry, lint-free cloth to wipe down the earbuds and charging case. For ear tips, you may gently remove them and clean with mild soap and water, ensuring they are completely dry before reattaching.

6. TROUBLESHOOTING

6.1 Pairing Issues

- Ensure both earbuds are fully charged.
- Make sure Bluetooth is enabled on your device and the earbuds are within range (up to 30ft/15m).
- If the earbuds do not connect automatically, try unpairing them from your device's Bluetooth settings (forget device) and then re-pair them. To unpair, quickly tap both the left and right earbuds 5 times simultaneously.
- Restart your device and try the pairing process again.

6.2 Sound Quality Issues

- Ensure the earbuds are properly seated in your ears and you are using the correct size ear tips for a good seal.
- Check the volume levels on both your device and the earbuds.
- Move closer to your connected device to avoid interference.

6.3 Charging Issues

- Ensure the USB-C cable is securely connected to both the charging case and the power source.
- Verify that the power source is active.
- Clean the charging contacts on both the earbuds and inside the case with a dry cotton swab.

7. SPECIFICATIONS

Feature	Detail
Model Name	Q76
Connectivity Technology	Wireless (Bluetooth 5.4)
Noise Control	Passive Noise Cancellation, ENC Noise Canceling Mic
Audio Driver Type	Dynamic Driver (14.2mm double-layer diaphragm)
Battery Life (Single Playtime)	Approx. 10 hours
Total Playtime (with Charging Case)	Up to 50 hours
Charging Time (Earbuds)	1.5 hours
Charging Time (Case)	2 hours
Charging Port	USB-C
Water Resistance Level	IP7 Waterproof
Control Type	Touch Control
Bluetooth Range	15 Meters (approx. 30ft)
Item Weight	1.76 ounces (50 Grams)

Feature	Detail
Product Dimensions	2.36 x 1.18 x 0.79 inches
Material	Plastic
Color	Purple

8. WARRANTY AND SUPPORT

The Rolosar Wireless Earbuds Model Q76 come with a **2-year warranty**. For any product inquiries or support needs, please contact Rolosar customer service. We aim to provide a **24-hour customer service response** to ensure your satisfaction.

For further assistance, please refer to the official Rolosar store or contact their support channels.

© 2024 Rolosar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question