

[Manuals.plus](#) /

› [Jeazans](#) /

› Jeazans Kids Tablet KT1016 User Manual: Android 14, 10-inch, 8GB RAM, 64GB ROM

Jeazans KT1016

Jeazans Kids Tablet KT1016 User Manual

Model: KT1016 | Android 14, 10-inch, 8GB RAM, 64GB ROM

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Jeazans Kids Tablet KT1016. Please read this guide thoroughly to ensure optimal performance and a safe user experience.

1.1 Package Contents

Upon unboxing, please verify that all items listed below are present:

- Jeazans Kids Tablet KT1016
- Protective Case
- USB Type-C Charging Cable
- Power Adapter (AC 110-240V, DC 5V 2A)
- User Guide (this document)
- 3 Extra DIY Stickers



Image 1.1: Jeazans Kids Tablet KT1016 in its blue protective case.

2. SETUP

2.1 Initial Power On

1. Press and hold the **Power Button** located on the top edge of the tablet until the screen illuminates.
2. Follow the on-screen prompts to select your language and region.

2.2 Wi-Fi Connection

1. From the home screen, navigate to **Settings**.
2. Tap on **Network & Internet**, then select **Wi-Fi**.
3. Toggle **Wi-Fi On**.
4. Select your desired Wi-Fi network from the list and enter the password if prompted.

2.3 Google Account Setup

A Google account is required to download apps from the Google Play Store and access other Google services.

1. During initial setup, you will be prompted to sign in with an existing Google account or create a new one.
2. If skipping this step, you can add an account later via **Settings > Accounts > Add account > Google**

2.4 Parental Control Setup

The Jeazans Kids Tablet features an advanced parental control system to ensure a safe online environment for children.

1. Locate and open the pre-installed parental control application (e.g., FamilyGroup or similar).
2. Follow the on-screen instructions to create a parent profile and set a password.
3. Configure settings such as screen time limits, content filtering, and app access permissions for your child's profile.

Buy One Get Three

We have precisely prepared 3 different colored stickers for your kids.

Kids can use these stickers to DIY the back of the tablet and make the kids tablet looks different in 3 styles.

It's like getting three different colored tablets for the cost of one.



Image 2.1: Parental control interface and pre-installed applications.

3. OPERATING THE TABLET

3.1 Basic Navigation

- **Touch:** Tap an icon to open an app or select an item.
- **Swipe:** Move your finger across the screen to scroll through pages or lists.
- **Pinch:** Use two fingers to zoom in or out on photos and web pages.
- **Home Button:** Returns to the home screen.
- **Back Button:** Returns to the previous screen.
- **Recent Apps Button:** Displays recently used applications.

3.2 Kids Mode

The tablet offers a dedicated Kids Mode, providing a curated and safe environment for children.

1. Access Kids Mode through the dedicated icon on the home screen or via the parental control app.
2. Within Kids Mode, children can access pre-approved apps and content.
3. Parents can customize the content available in Kids Mode through the parental control settings.

Explore the Creativity

The food-grade silicone case is designed to prevent kids' tablets from damage during falls and collisions, ensure an enjoyable playing time



Image 3.1: Overview of Kids Mode and parental control settings.

3.3 Downloading Applications

The tablet provides full access to the Google Play Store for downloading additional applications.

1. Ensure the tablet is connected to Wi-Fi and a Google account is set up.
2. Tap the **Play Store** icon on the home screen.
3. Search for desired apps and follow the on-screen instructions to download and install.

3.4 Camera Usage

The tablet is equipped with dual cameras for photos and videos.

1. Open the **Camera** application.
2. Tap the shutter button to take a photo or switch to video mode to record.
3. Use the front or rear camera by tapping the camera switch icon.



Image 3.2: Tablet components and button layout.

4. MAINTENANCE

4.1 Battery Charging

The tablet features a large capacity battery with fast-charging technology.

- Connect the provided USB Type-C charging cable to the tablet's Type-C port and the power adapter.
- Plug the power adapter into a wall outlet.
- A full charge typically takes approximately 1.5 hours.
- The tablet offers up to 6 hours of mixed usage on a single charge.

 


Image 4.1: Children enjoying the tablet, highlighting battery life.

4.2 Storage Management

The tablet comes with 64GB of internal storage, expandable up to 1TB via a Micro SD card (not included).

1. To insert a Micro SD card, locate the Micro SD card slot on the top edge of the tablet (refer to Image 3.2).
2. Gently open the slot cover and insert the Micro SD card with the gold contacts facing down until it clicks into place.
3. Manage storage and move files via **Settings > Storage**.

4.3 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and tablet body.
- For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution.
- Avoid using harsh chemicals or abrasive materials.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Jeazans Kids Tablet KT1016.

5.1 Tablet Does Not Turn On

- Ensure the battery is charged. Connect the tablet to the charger for at least 15 minutes before attempting to power on again.
- Press and hold the Power Button for 10-15 seconds to perform a forced restart.

5.2 Wi-Fi Connection Issues

- Verify that Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.

5.3 Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data via **Settings > Apps > [App Name] > Storage > Clear Cache/Clear Data**

- Ensure the tablet's software is up to date.

5.4 Slow Performance

- Close unused background applications.
- Clear unnecessary files and data to free up storage space.
- Restart the tablet periodically.

5.5 Volume Buttons Not Responding

- Adjust volume directly from the on-screen controls or via**Settings > Sound & Vibration**.
- If the issue persists, a factory reset might be considered as a last resort (see section 5.6).

5.6 Factory Reset

Warning: A factory reset will erase all data on your tablet. Back up important data before proceeding.

1. Navigate to **Settings > System > Reset options > Erase all data (factory reset)**
2. Confirm your decision and enter your PIN/password if prompted.

6. SPECIFICATIONS

Feature	Specification
Brand	Jeazans
Model Name	KT1016
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (IPS HD)
Processor	2.0 GHz Octa-Core (Allwinner)
RAM	8 GB
Internal Storage	64 GB
Expandable Storage	Up to 1 TB (Micro SD Card, not included)
Wireless Type	802.11ac
Rear Webcam Resolution	8 MP
Average Battery Life	6 Hours (mixed usage)
Item Weight	2.55 pounds
Product Dimensions	9.64 x 0.31 x 6.42 inches
Color	Blue

7. WARRANTY AND SUPPORT

7.1 Product Warranty

The Jeazans Kids Tablet KT1016 comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

7.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Jeazans Kids Tablet KT1016, please contact our customer support team. Refer to the contact information provided on the product packaging or your purchase receipt. We are committed to providing reliable products and a pleasant shopping experience.

© 2025 Jeazans. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question