

BAMBOOHOMIE YSJ-2bag-1

BAMBOOHOMIE Laundry Hamper Instruction Manual

Model: YSJ-2bag-1
Brand: BAMBOOHOMIE

1. INTRODUCTION

Thank you for choosing the BAMBOOHOMIE 2 x 50 L Laundry Hamper. This dual-section laundry sorter is designed to streamline your laundry routine, offering efficient organization and convenient mobility. Its robust construction and thoughtful features make it a practical addition to any laundry room, bathroom, or dorm.

This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new laundry hamper.

2. IMPORTANT SAFETY INSTRUCTIONS

- **Assembly:** Ensure all screws and fasteners are securely tightened before using the hamper. Periodically check connections for tightness.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 50 lbs for the top shelf. Overloading can cause damage or instability.
- **Stability:** Always engage the wheel locks when the hamper is in a stationary position to prevent unintended movement.
- **Children and Pets:** Keep small assembly parts away from children and pets to prevent choking hazards. Do not allow children to climb on or play with the hamper.
- **Placement:** Place the hamper on a flat, stable surface. Avoid placing it in areas with excessive moisture or direct heat sources.
- **Cleaning:** Use only mild cleaning agents and soft cloths for cleaning. Avoid abrasive cleaners that may damage

the finish.

3. PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.


Item	Quantity	Description
A	1	Metal Frame Assembly
B	1	Bamboo Top Shelf
C	2	Pull-Out Laundry Bags (1 Black, 1 White)
D	2	Bottom Plates for Laundry Bags
E	4	Casters (2 lockable)
F	1 set	Assembly Hardware (screws, hex key)

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your BAMBOOHOMIE Laundry Hamper. It is recommended to assemble on a soft, clean surface to prevent scratches.

Step 1: Attach Casters to the Base Frame


Carefully attach the four casters (E) to the designated holes on the bottom of the metal frame assembly (A). Ensure that the two lockable casters are positioned on the same side for easy access to the locking mechanism. Use the provided hex key to tighten the screws securely.

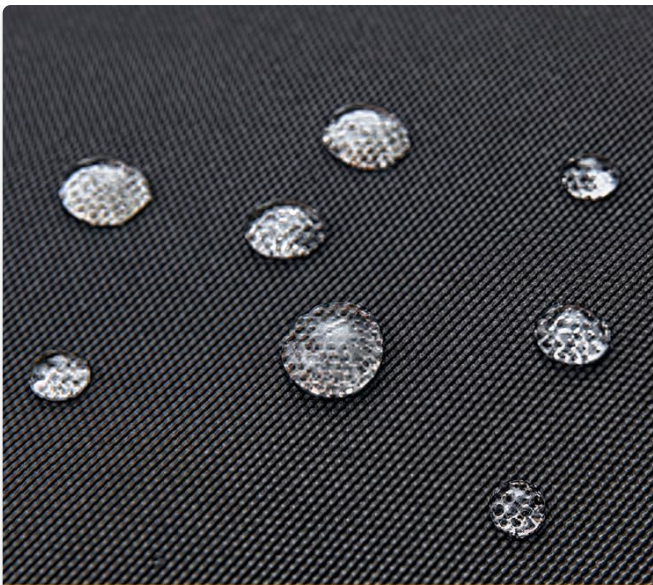

Water-Repellent



Sturdy Frame

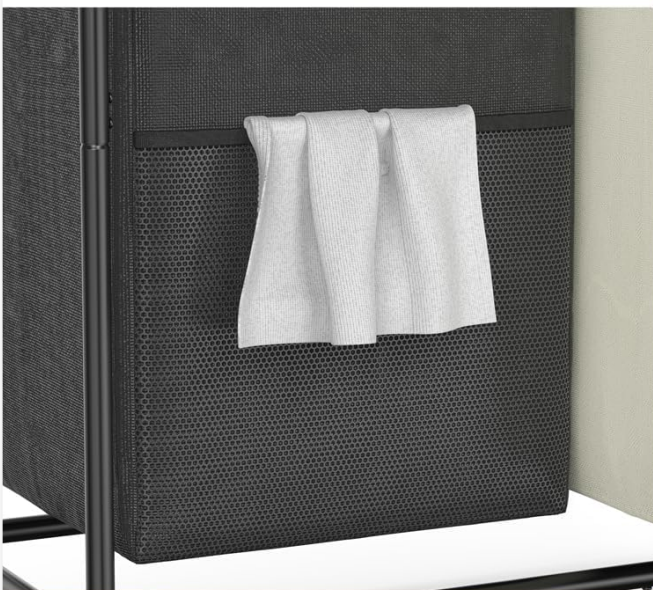

Side Storage Bag



4 Casters

Image: Detail showing the sturdy frame and 360-degree lockable casters.

Step 2: Install the Bamboo Top Shelf

Place the bamboo top shelf (B) onto the upper rails of the metal frame assembly (A). Align the pre-drilled holes on the shelf with the corresponding holes on the frame. Secure the shelf using the provided screws and hex key. Ensure the shelf is level and stable.



Image: The complete laundry hamper, showcasing the bamboo top shelf.

Step 3: Prepare and Insert Laundry Bags

For each laundry bag (C), insert the bottom plate (D) into the designated slot at the base of the bag. This plate provides stability and prevents sagging. Once the plates are in place, slide each laundry bag into its respective compartment within the metal frame. The bags are designed to pull out smoothly for easy access.

Detachable Laundry Bag

2 laundry bag in different colors for sorting clothes by type.



Oxford bag for easy carrying



Magic buckle for easy removal

Image: Details of the detachable laundry bags, highlighting the Oxford material and easy removal.

Assembly Overview Video

Watch this short video for a visual guide to the laundry hamper's features and assembly process.

Your browser does not support the video tag.

Video: A brief demonstration of the BAMBOOHOMIE Laundry Hamper, showcasing its design and functionality.

5. OPERATING INSTRUCTIONS

- **Laundry Sorting:** Utilize the two distinct 50 L sections to sort your laundry, for example, separating darks from lights, or delicates from regular items.
- **Removable Bags:** The pull-out laundry bags can be easily removed from the frame using their side handles, allowing for convenient transport of clothes to the washing machine.
- **Top Shelf Usage:** The sturdy bamboo top shelf provides a convenient surface for placing folded laundry, laundry detergents, fabric softeners, or other household items.

- **Side Pockets:** Use the integrated side mesh pockets on the laundry bags for storing smaller items like socks, underwear, or laundry accessories.
- **Mobility:** To move the hamper, unlock the two lockable casters. To keep the hamper stationary, press down on the locking mechanism of the casters until they click into place.



Image: The laundry hamper in a functional laundry room environment.

6. MAINTENANCE AND CARE

- **Cleaning the Frame and Shelf:** Wipe the metal frame and bamboo top shelf with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, followed by wiping dry. Avoid harsh chemicals or abrasive cleaning materials.
- **Cleaning the Laundry Bags:** The Oxford fabric laundry bags are water-repellent. They can be spot cleaned with a damp cloth and mild detergent. For deeper cleaning, hand wash the bags with cold water and air dry. Do not machine wash or tumble dry.
- **Regular Checks:** Periodically inspect all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.

- **Storage:** If storing the hamper for an extended period, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Hamper feels wobbly or unstable.	Screws are loose.	Check and tighten all assembly screws using the provided hex key.
Laundry bags are sagging at the bottom.	Bottom plate not inserted or incorrectly positioned.	Ensure the rigid bottom plate is fully inserted and flat at the base of each laundry bag.
Wheels are not rolling smoothly.	Wheel locks are engaged or debris is caught in wheels.	Disengage the wheel locks. Check for and remove any lint, hair, or debris from the caster wheels.
Difficulty pulling out laundry bags.	Bags are overloaded or misaligned.	Reduce the amount of laundry in the bag. Ensure the bag is properly seated within its compartment and not catching on the frame.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	YSJ-2bag-1
Product Dimensions (L x W x H)	11.81" x 30.31" x 29.92"
Capacity	2 x 50 Liters (Total 100 Liters)
Number of Compartments	2
Material	Bamboo, Metal, Oxford Fabric
Color	Multicolor (Black and White bags)
Special Features	Wheeled, Removable Shelf, Pull-Out Bags, Side Pockets
Item Weight	13.38 pounds
Recommended Uses	Laundry Hamper, Laundry Sorter
Room Type	Bathroom, Dorm Room, Laundry Room

LARGE CAPACITY & HIGH LOAD-BEARING



WEIGHT
CAPACITY
50 lbs



MAXIMUM
CAPACITY
100 L



Image: Detailed dimensions and capacity information for the laundry hamper.

9. WARRANTY AND SUPPORT

BAMBOOHOMIE is committed to providing high-quality products. For any questions, concerns, or assistance with your laundry hamper, please contact our customer support team. Please have your model number (YSJ-2bag-1) and purchase information ready when contacting support.

For further information or to explore other BAMBOOHOMIE products, please visit the official BAMBOOHOMIE store:

[Visit the BAMBOOHOMIE Store](#)

© 2024 BAMBOOHOMIE. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

