

ECONTROLLY PROSCAN-11-AFFF

Universal Replace Remote Control User Manual

Model: PROSCAN-11-AFFF | Brand: ECONTROLLY

INTRODUCTION

This manual provides instructions for the ECONTROLLY Universal Replace Remote Control, designed for use with various Proscan 4PRO TV models. This remote control is a direct replacement and does not require any programming or pairing for immediate use with compatible televisions.

Compatible Proscan 4PRO TV models include: **PLED1526ACAR**, **PLED2329AB**, **PLDED4018B**, **PLDED4331A**, **PLED6515CUHD**, **PLDED6535AUHD**.

PACKAGE CONTENTS

- 1 x ECONTROLLY Universal Replace Remote Control

Please note: Instructions and batteries are not included in the package.

SETUP

1. Installing Batteries

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, ready for battery insertion.

2. Initial Use

This universal replacement remote control is designed for immediate use with compatible Proscan 4PRO TV models. No programming, code entry, or pairing is required. Simply insert the batteries, point the remote at your television, and begin operation.

OPERATING INSTRUCTIONS

Remote Control Layout

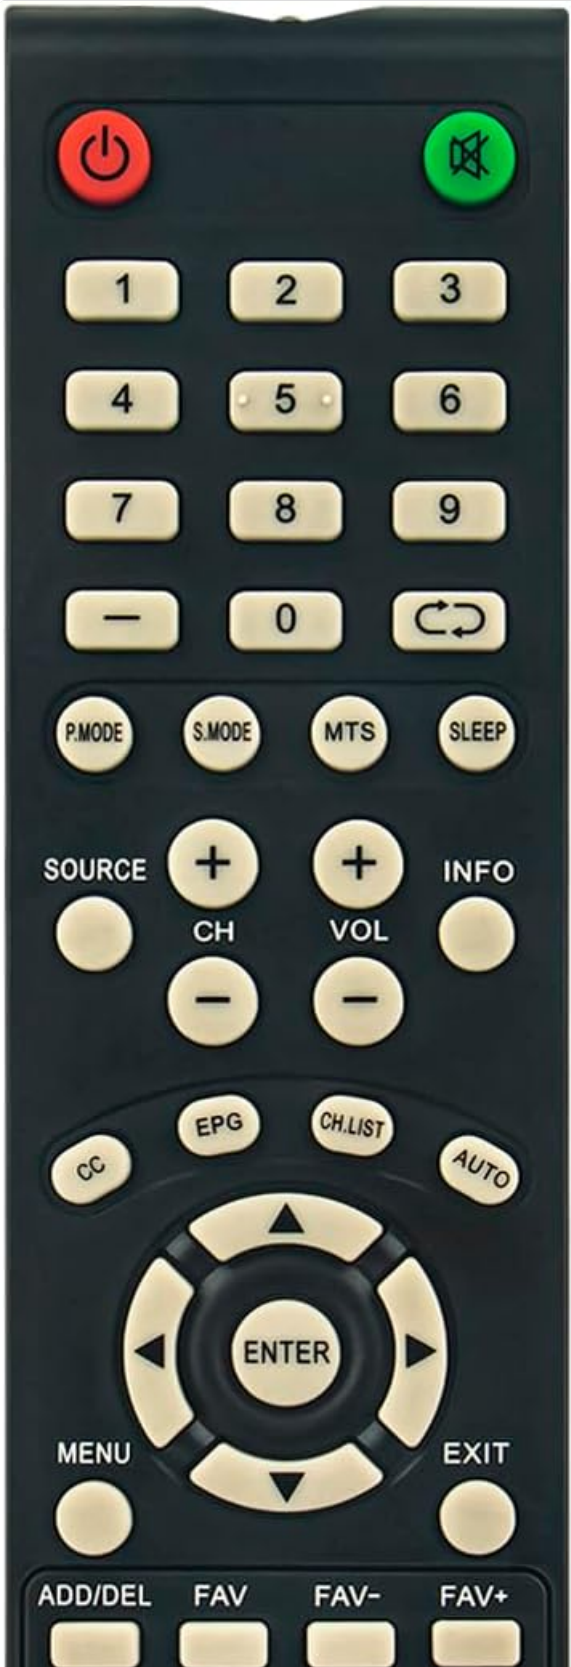




Image: Front view of the remote control, displaying all functional buttons.

The remote control features a standard layout for TV functions. Below is a general overview of common buttons and their functions:

- **Power (Red Button):** Turns the TV on or off.
- **Mute (Green Button):** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly select channels.
- **P.MODE (Picture Mode):** Adjusts picture settings (e.g., Standard, Dynamic, Movie).
- **S.MODE (Sound Mode):** Adjusts sound settings (e.g., Standard, Music, Movie).
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **SOURCE:** Selects input sources (e.g., HDMI 1, AV, Component).
- **VOL +/-:** Increases or decreases the volume level.
- **CH +/-:** Changes the channel up or down.
- **INFO:** Displays current channel information.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **EPG (Electronic Program Guide):** Accesses the program guide.
- **CH.LIST (Channel List):** Displays the list of available channels.
- **AUTO:** Initiates automatic channel scanning.
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections in menus.
- **EXIT:** Exits the current menu or screen.
- **ADD/DEL (Add/Delete):** Manages favorite channels.
- **FAV, FAV-, FAV+:** Accesses and navigates through favorite channels.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.

- Do not use liquid cleaners, alcohol, or abrasive chemicals, as these can damage the remote's surface or internal components.

Battery Replacement

- Replace batteries when the remote control becomes unresponsive or its range decreases significantly.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

Storage

- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range of the TV's IR sensor.
- **Specific buttons not working:**
 - This remote is a direct replacement. If specific buttons do not function, it may indicate that the original TV remote did not have that specific function, or the TV model does not support it.
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- **Intermittent operation:**
 - Weak batteries can cause intermittent operation. Replace them.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
Model Number	PROSCAN-11-AFFF
Product Dimensions	7 x 2 x 0.65 inches (18 x 4.8 x 1.65 cm)
Item Weight	2.3 ounces (65 grams)
Compatible Devices	Television (Proscan 4PRO TV models)
Power Source	2 x AAA Batteries (not included)
Special Feature	No programming required
Color	Black

4.8 cm / 1.89 in

18 cm / 7.09 in





Image: Remote control with its physical dimensions labeled.

WARRANTY AND SUPPORT

For any questions regarding the operation or compatibility of this remote control, please refer to the product listing or contact the manufacturer, ECONTROLLY, directly through their official support channels. Specific warranty information may be available from the point of purchase or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D2HP5Y9F>

More documents and user manuals: <https://manuals.plus/>