

ECONTROLLY RC833-GUB2

ECONTROLLY RC833-GUB2 Voice Remote Control User Manual

Model: RC833-GUB2

INTRODUCTION

This user manual provides detailed instructions for the ECONTROLLY RC833-GUB2 Voice Remote Control. This remote is designed as a replacement for compatible TCL LCD LED TVs, including models 65C845, 55, 75, and 65C745. It features voice control capabilities and is ready for use after pairing, with no additional programming required.





Figure 1: Front view of the ECONTROLLY RC833-GUB2 Voice Remote Control.

SETUP AND PAIRING

The RC833-GUB2 remote control requires pairing with your compatible TCL TV before it can be used. No additional programming is needed.

1. Battery Installation

The remote control requires batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.





Figure 2: View of the battery compartment with the cover removed, showing slots for two AAA batteries.

2. Pairing with Your TV

This remote control must be paired with your TCL TV to enable full functionality, especially voice control. Refer to your TCL TV's user manual for specific pairing instructions, as the process may vary slightly by TV model. Generally, pairing involves navigating to the TV's settings menu and selecting the option to add a new remote or Bluetooth device. Once paired, the remote control will be ready for use.

OPERATING THE REMOTE CONTROL

The RC833-GUB2 remote control provides intuitive access to your TCL TV's functions. Its design includes dedicated buttons for common actions and streaming services.



Figure 3: Angled view of the remote control, highlighting button layout.

Key Functions:

- **Power Button:** Located at the top right, used to turn the TV on or off.
- **Number Pad:** For direct channel input.
- **Navigation Pad (Directional Buttons and OK):** Used to navigate menus and confirm selections.
- **Voice Control Button:** Features a microphone icon, press and hold to activate voice commands.
- **Volume Control (VOL +/-):** Adjusts the TV's volume.
- **Channel Control (CH +/-):** Changes TV channels.
- **Home Button:** Returns to the TV's main home screen.
- **Back Button:** Returns to the previous screen or menu.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix, Prime Video, YouTube, and others.





Figure 4: The remote control alongside a microphone icon, indicating its voice control capability.

Voice Control Usage:

To use the voice control feature, press and hold the dedicated voice button (microphone icon) on the remote. Speak clearly into the remote's microphone. Release the button when you are finished speaking. This feature allows for searching content, controlling playback, and navigating the TV hands-free.

MAINTENANCE AND CARE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While made from durable ABS environmental protection material, avoid dropping the remote to prevent internal damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Remote not paired. Obstruction between remote and TV.	Check battery polarity and replace if necessary. Ensure the remote is paired with your TV. Remove any objects blocking the signal path.
Voice control not working	Remote not paired correctly for voice function. Microphone blocked.	Re-pair the remote with your TV. Ensure nothing is covering the microphone on the remote. Speak clearly and hold the voice button.
Short operating distance	Low batteries. Interference.	Replace batteries. Ensure no strong electronic devices are causing interference. The transmitting distance is approximately 10 meters (33 feet).

SPECIFICATIONS

- **Model:** RC833-GUB2
- **Compatibility:** TCL LCD LED TV models 65C845, 55, 75, 65C745
- **Material:** ABS Environmental Protection Material
- **Control Type:** Voice Remote Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Transmitting Distance:** Approximately 10 meters (33 feet)

- **Dimensions:** 7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
- **Item Weight:** 2 ounces (56.7 grams)
- **Color:** Black
- **Special Feature:** Voice Search





Figure 5: Diagram showing the dimensions of the RC833-GUB2 remote control: 20.8 cm (8.19 in) length and 4.2 cm (1.65 in) width.

SUPPORT AND CONTACT

For further assistance or inquiries regarding your ECONTROLLY RC833-GUB2 remote control, please refer to the official ECONTROLLY support channels or the retailer from whom you purchased the product.

Note: Instructions and batteries are not included with the product package. This manual serves as a comprehensive guide.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question