

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY TAB7305 Replacement Remote Control User Manual for Philips Soundbars

ECONTROLLY TAB7305

ECONTROLLY TAB7305 Replacement Remote Control User Manual

For Philips Soundbar Models: Tab405, TAB8405/10, TAB7305/37, TAB6305/96

INTRODUCTION

This user manual provides instructions for the ECONTROLLY TAB7305 replacement remote control. This remote is designed to be fully compatible with various Philips Soundbar models, including Tab405, TAB8405/10, TAB7305/37, and TAB6305/96. It operates without the need for any programming or pairing, offering a direct replacement solution.

SETUP

The ECONTROLLY TAB7305 remote control requires two AAA batteries (LR03/UM-4). Batteries are not included with the remote control and must be purchased separately.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Battery compartment of the remote control. Insert two AAA batteries according to polarity markings.

Once batteries are installed, the remote control is ready for immediate use with compatible Philips Soundbar models without any additional setup.

OPERATING INSTRUCTIONS

The ECONTROLLY TAB7305 remote control provides direct access to all essential functions of your compatible Philips Soundbar. Point the remote control directly at the soundbar's infrared receiver for optimal performance.







Figure 2: Layout of the ECONTROLLY TAB7305 remote control buttons.

Button Functions

- **Power:** Turns the soundbar on or off.
- **Mute:** Mutes or unmutes the soundbar audio.
- **HDMI ARC:** Selects HDMI ARC as the audio input source.
- **AUX:** Selects Auxiliary input as the audio source.
- **Pair BT:** Initiates Bluetooth pairing mode.
- **OPTICAL:** Selects Optical input as the audio source.
- **USB:** Selects USB input as the audio source.
- **EQ:** Cycles through available Equalizer sound modes.
- **Previous Track:** Skips to the beginning of the current track or the previous track.
- **Play/Pause:** Plays or pauses media playback.
- **Next Track:** Skips to the next track.
- **Volume Down (-):** Decreases the main volume.
- **Volume Up (+):** Increases the main volume.
- **Subwoofer Volume Down (-):** Decreases the subwoofer volume.
- **Subwoofer Volume Up (+):** Increases the subwoofer volume.



Figure 3: Remote control in typical use, pointing towards a display device.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal circuitry or external casing.

TROUBLESHOOTING

If you experience issues with your ECONTROLLY TAB7305 remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly installed batteries.	Replace both AAA batteries with new ones, ensuring correct polarity.
Remote is not responding.	Obstruction between remote and soundbar.	Ensure a clear line of sight between the remote control and the soundbar's infrared receiver.
Remote functions are intermittent.	Weak batteries.	Replace batteries with new ones.
Specific button not working.	Button stuck or damaged.	Gently press the button multiple times. If it remains unresponsive, the remote may be damaged.
Soundbar not responding to input source buttons (e.g., HDMI ARC, AUX).	Incorrect cable connection or soundbar setting.	Verify that the corresponding audio cable is securely connected to both the soundbar and the source device. Check your soundbar's own manual for input selection details.

If the problem persists after trying these solutions, please contact the seller for further assistance.

SPECIFICATIONS

Model Number	TAB7305
Brand	ECONTROLLY
Compatible Soundbar Models	Philips Tab405, TAB8405/10, TAB7305/37, TAB6305/96
Product Dimensions	7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
Item Weight	2 ounces (56.7 grams)
Power Source	2 x AAA Batteries (not included)
Special Feature	No programming required
Color	Black



Figure 4: Dimensions of the ECONTROLLY TAB7305 remote control.

For information regarding warranty coverage, return policies, or technical support, please refer to the specific terms provided by the seller at the time of purchase. As this is a replacement remote control, warranty and support are typically handled directly by the retailer or the ECONTROLLY brand.

Please retain your purchase receipt or order details for any warranty claims or support inquiries.

© 2024 ECONTROLLY. All rights reserved. Philips is a registered trademark of Koninklijke Philips N.V.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question