

[Manuals.plus](#) /

› [WISCENT](#) /

› WISCENT Home Stereo System WTB-798 User Manual

WISCENT WTB-798White

WISCENT Home Stereo System WTB-798 User Manual

Comprehensive guide for setup, operation, and maintenance of your WISCENT WTB-798 Home Stereo System.

INTRODUCTION

Thank you for choosing the WISCENT Home Stereo System WTB-798. This compact and versatile audio system offers a premium sound experience with multiple playback options, including CD, Bluetooth, USB, FM Radio, and AUX input. It also features a dual alarm clock, snooze function, sleep timer, and convenient wireless charging. This manual provides detailed instructions to help you set up and operate your new stereo system effectively.



Image: Front view of the WISCENT Home Stereo System WTB-798 in white, with its remote control.

SETUP: WHAT'S IN THE BOX

Before you begin, please ensure all components are present in the packaging:

- WISCENT Home Stereo System (WTB-798)
- AC Power Cable (5ft / 1.55m)
- 3.5mm AUX Cable
- Remote Control (Batteries not included)
- User Manual (this document)



Image: All components included in the WISCENT Home Stereo System WTB-798 box, laid out on a surface.

Initial Setup

1. Place the stereo system on a stable, flat surface.

2. Connect the AC Power Cable to the "AC IN" port on the back of the unit and plug it into a wall outlet.
3. Ensure the Main Power Switch on the back of the unit is in the "ON" position.
4. Extend the FM Radio Antenna for optimal radio reception.
5. Insert 2 AAA batteries (not included) into the remote control.

PRODUCT OVERVIEW: COMPONENTS AND CONTROLS

Familiarize yourself with the various parts and controls of your WISCENT Home Stereo System:

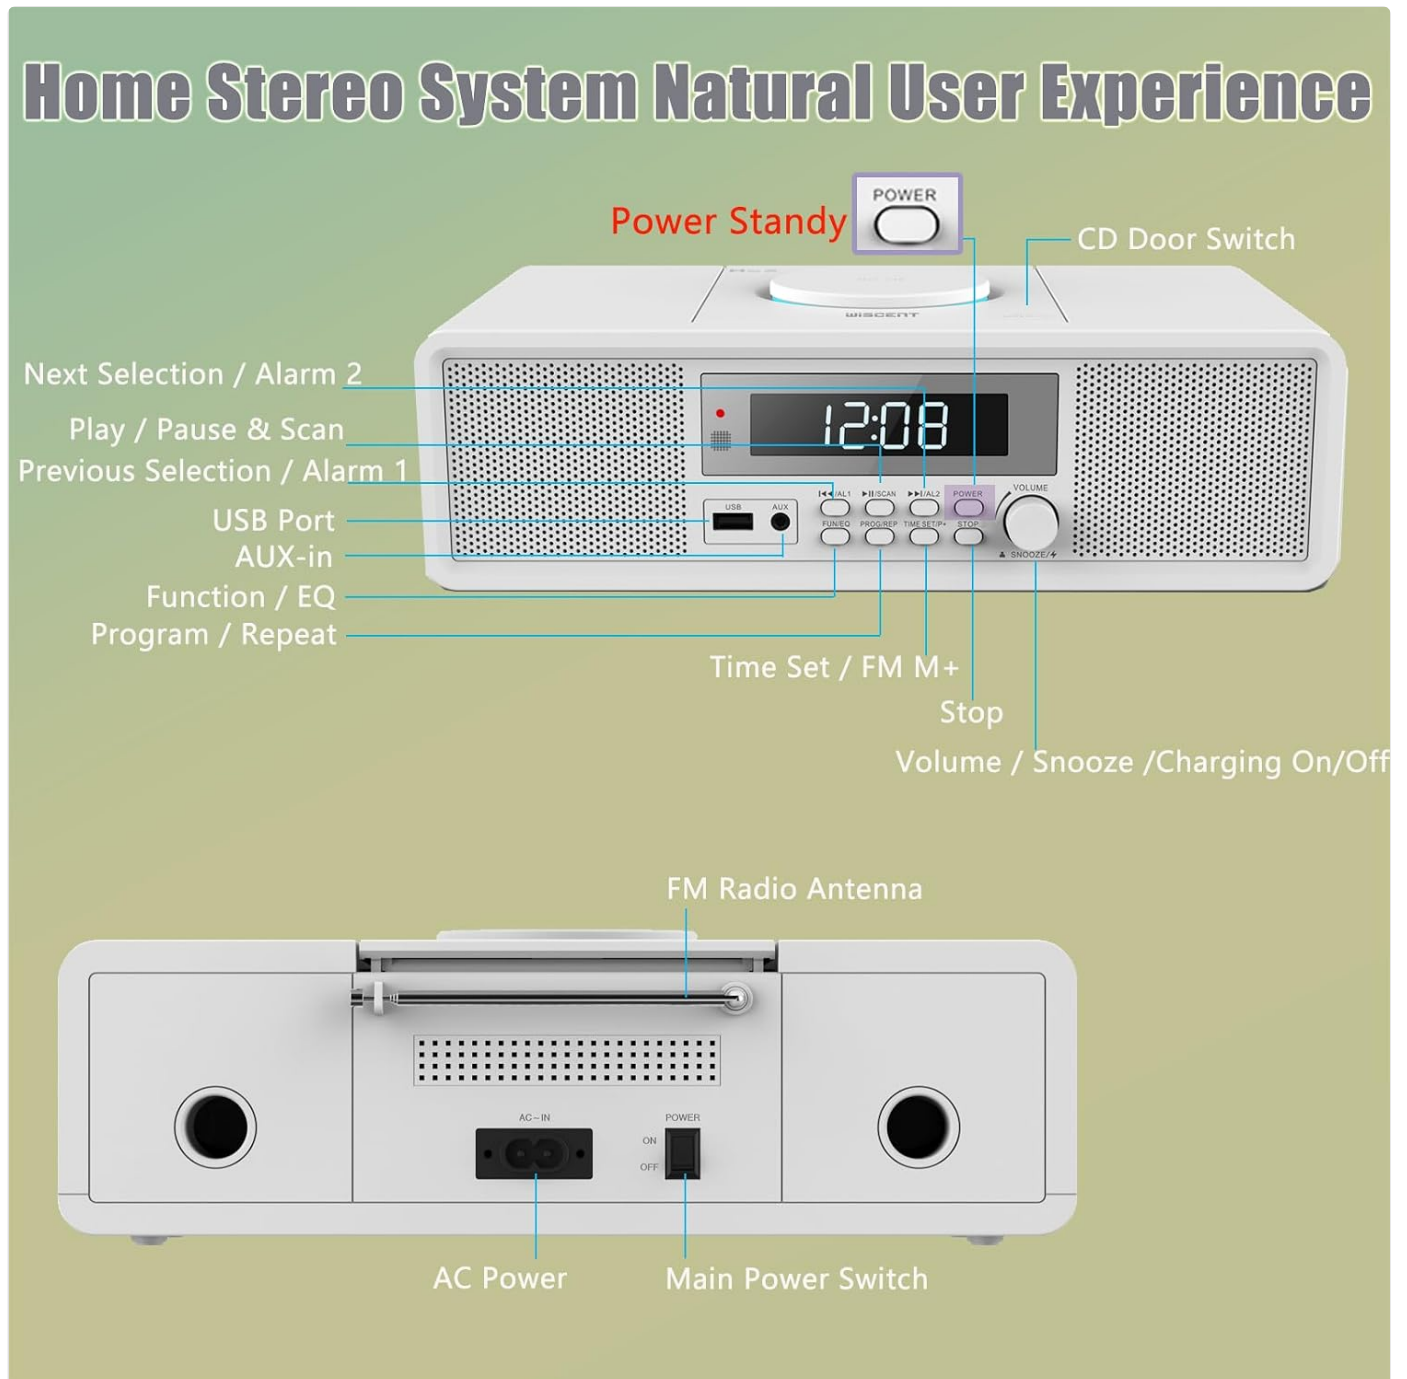


Image: Detailed view of the front panel of the WISCENT Home Stereo System, highlighting various buttons and ports.

Front Panel Controls:

- **USB Port:** For USB playback and charging.
- **AUX-in:** 3.5mm audio input for external devices.
- **FUN/EQ Button:** Short press to cycle through modes (CD, USB, AUX, Bluetooth, Radio). Long press to cycle

through EQ modes (Flat, Classic, Rock, Pop, Jazz).

- **PROG/REP Button:** Program tracks in CD/USB mode; Repeat playback.
- **TIME SET/P+ Button:** Set time; Preset radio stations.
- **STOP Button:** Stop playback.
- **POWER Button:** Turn unit on/off.
- **VOLUME/SNOOZE/Charging On/Off Knob:** Rotate to adjust volume; Press to activate Snooze; Press and hold to turn wireless charging on/off.
- **Previous Selection / Alarm 1 Button:** Skip to previous track/station; Short press to turn Alarm 1 on/off; Long press to set Alarm 1.
- **Play / Pause & Scan Button:** Play/Pause playback; Scan for radio stations.
- **Next Selection / Alarm 2 Button:** Skip to next track/station; Short press to turn Alarm 2 on/off; Long press to set Alarm 2.
- **Display Panel:** Shows time, mode, track info, etc.

Top-Loading CD Player

- 5 Play mode: CD / Radio / USB / Bluetooth / AUX
- 5 EQ-mode: Flat / Rock / Pop / Classic / Jazza
- 3 Repeat mode: Single / All / Random
- Memory Function for CD / USB / Radio
- Convenient Remote Control



1. Press the **POWER** button  to enter the power-on mode.

2. Short press **FUN/EQ** to enter modes (CD, USB, AUX, Bluetooth, Radio).

- Compatible with Playback your favorite CD/CD-R/CD-RW/Audiobooks CD/CD-MP3

Back Panel Controls:

- **AC Power Input:** Connects to the AC power cable.
- **Main Power Switch:** Master power on/off switch for the unit.
- **FM Radio Antenna:** Extend for better FM reception.

BASIC OPERATION

Power On/Off

To turn the unit on, ensure the Main Power Switch on the back is ON, then press the **POWER** button on the front panel. Press the **POWER** button again to put the unit into standby mode.

Adjusting Volume

Rotate the **VOLUME** knob clockwise to increase volume and counter-clockwise to decrease volume.


CD PLAYER OPERATION

The WISCENT Home Stereo System features a convenient top-loading CD player compatible with CD/CD-R/CD-RW/Audiobooks CD/CD-MP3 discs.

Top-Loading CD Player

- 5 Play mode: CD/ Radio / USB/ Bluetooth / AUX
- 5 EQ-mode: Flat / Rock / Pop / Classic / Jazza
- 3 Repeat mode: Single / All / Random
- Memory Function for CD / USB / Radio
- Convenient Remote Control



1. Press the **POWER** button  to enter the power-on mode.

2. Short press **FUN/EQ** to enter modes (CD, USB, AUX, Bluetooth, Radio).

- Compatible with Playback your favorite CD/CD-R/CD-RW/Audiobooks CD/CD-MP3

Image: The top-loading CD player compartment open, showing where to insert a CD.

1. Gently press the "CD Door Switch" on the top of the unit to open the CD compartment.
2. Place a CD with the label side facing up onto the spindle.
3. Close the CD compartment cover firmly.
4. Press the **FUN/EQ** button to select "CD" mode.
5. Press the **Play/Pause** button to start playback.
6. Use the **Previous Selection** and **Next Selection** buttons to skip tracks.
7. Press the **PROG/REP** button to cycle through repeat modes (Single, All, Random).

Equalizer (EQ) Modes

Long press the **FUN/EQ** button to cycle through different equalizer presets:

- Flat
- Rock
- Pop

- Classic
- Jazz

BLUETOOTH OPERATION

Connect your Bluetooth-enabled device to the stereo system for wireless audio streaming.

Dual Alarms Clock & Sleep & Snooze

Adjustable Backlit LED Display

08:00

Morning
Wake-up song

21:00

Evening
Light music



To set in standby mode:

1. Short press AL1/AL2 to turn on or off alarm1/2,
2. Long press AL1/AL2 to set alarm1/2.
(adjust the volume knob to select the time.)



Image: A smartphone placed on top of the stereo system, with a large Bluetooth symbol indicating connection to the stereo system.

1. Press the **FUNEQ** button to select "Bluetooth" mode. The display will show "bt" and flash, indicating it's ready for pairing.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "WISCENT WTB-798" from the list. Once connected, the "bt" indicator will stop flashing.
4. You can now play audio from your device through the stereo system.

FM RADIO OPERATION

Enjoy your favorite FM radio stations with clear reception.

Immersive Acoustic Design Clear & Deep Bass

Dual independent sound chambers, 2-inch full-range units, **Adopting 20W RMS** advanced sound system, the sound quality is full and delicate, allowing music to fill the entire space and create a comfortable listening environment for you.

Bluetooth 5.1, Fast to connect.



Image: The stereo system displaying an FM radio frequency (87.5 MHz), with its antenna extended.

1. Extend the FM Radio Antenna on the back of the unit for best reception.
2. Press the **FUN/EQ** button to select "FM Radio" mode. The display will show "RAD".
3. **Automatic Scan:** Long press the **Play/Pause & Scan** button to automatically search and store available radio stations.
4. **Manual Tuning:** Short press the **Previous Selection** or **Next Selection** buttons to fine-tune the frequency.
5. **Preset Stations:** Press the **TIME SET/P+** button to cycle through stored preset stations.

USB AND AUX OPERATION

USB Playback

Play audio files directly from a USB flash drive.

1. Insert your USB flash drive into the USB Port on the front panel.
2. Press the **FUN/EQ** button to select "USB" mode.
3. Playback will begin automatically. Use the **Previous Selection** and **Next Selection** buttons to navigate tracks.

AUX Input

Connect external audio devices using the 3.5mm AUX cable.

1. Connect one end of the 3.5mm AUX cable to the AUX-in port on the front panel of the stereo system.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player).
3. Press the **FUN/EQ** button to select "AUX" mode.
4. Control playback and volume from your external device.

ALARM CLOCK SETUP AND OPERATION

The system features dual alarms (Alarm 1 and Alarm 2) with customizable wake-up options.

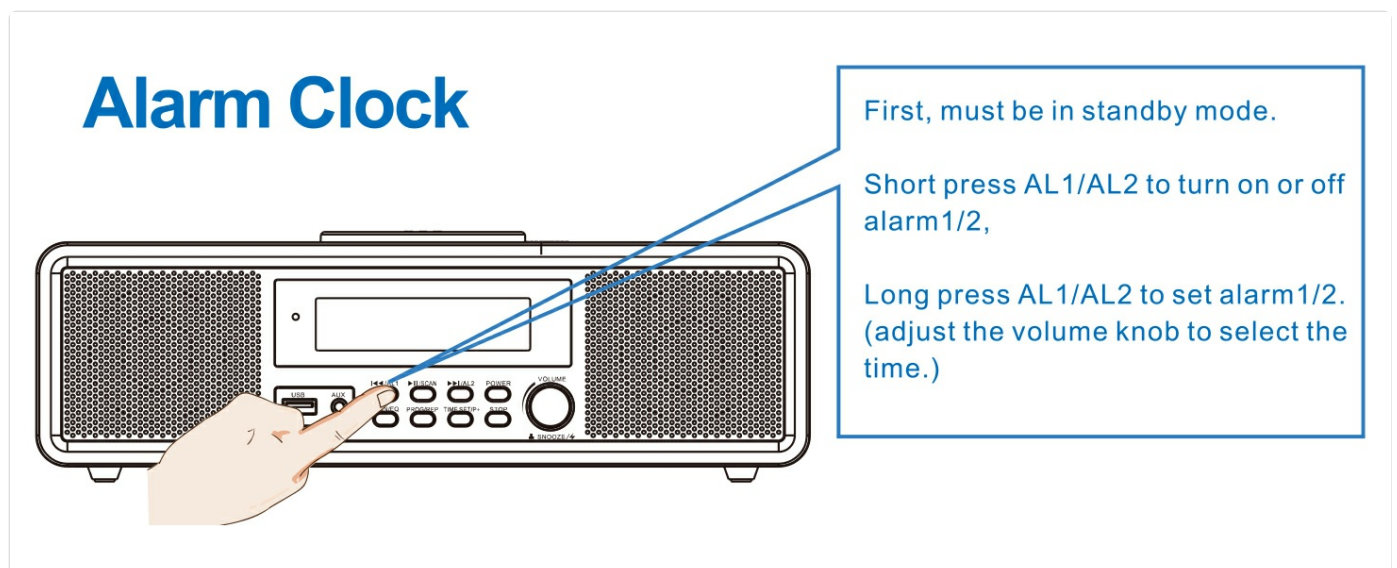


Image: A person waking up, with an overlay showing the dual alarm clock feature set for 08:00 (Morning Wake-up song) and 21:00 (Evening Light music).

Setting Alarms (Alarm 1 and Alarm 2)

Ensure the unit is in standby mode (press POWER button once to enter standby mode from active play mode) before setting the alarm.

Your browser does not support the video tag.

Video: A step-by-step guide on how to set the alarm time and select playback modes (CD, USB, Bluetooth, Radio) for the WISCENT WTB-798 stereo system.

Your browser does not support the video tag.

Video: Instructions on how to set the dual alarms and current time on the WISCENT WTB-798 stereo system.

1. Long press the **Previous Selection / Alarm 1** button to set Alarm 1, or long press the **Next Selection / Alarm 2** button to set Alarm 2. The hour digits will flash.
2. Rotate the **VOLUME** knob to adjust the hour. Press the corresponding Alarm button (AL1 or AL2) to confirm the hour.
3. The minute digits will flash. Rotate the **VOLUME** knob to adjust the minute. Press the corresponding Alarm button

(AL1 or AL2) to confirm the minute.

4. The display will show the alarm source options (Cd, USb, bt, bP (Beep), rAd). Rotate the **VOLUME** knob to select your desired alarm source. Press the corresponding Alarm button (AL1 or AL2) to confirm.
5. The display will show the alarm volume (Uxx). Rotate the **VOLUME** knob to adjust the alarm volume. Press the corresponding Alarm button (AL1 or AL2) to confirm.
6. The alarm icon (1 or 2) will appear on the display, indicating the alarm is set.

Turning Alarms On/Off

Short press the **Previous Selection / Alarm 1** button to turn Alarm 1 on or off. Short press the **Next Selection / Alarm 2** button to turn Alarm 2 on or off. The corresponding alarm icon will appear or disappear from the display.

Snooze Function

When the alarm sounds, press the **VOLUME/SNOOZE** knob to activate the snooze function. The alarm will temporarily stop and sound again after 9 minutes.

Sleep Timer

The sleep timer allows the unit to play for a set duration before automatically turning off. This feature is ideal for falling asleep to music or audiobooks.

1. While the unit is playing, press the **SLEEP** button on the remote control repeatedly to cycle through sleep timer options (10-90 minutes).
2. The unit will automatically turn off after the selected time.

SETTING THE CURRENT TIME

You can set the time in either 12-hour or 24-hour format.

1. Ensure the unit is in standby mode.
2. Press the **TIME SET/P+** button. The display will show "24H" or "12H".
3. Rotate the **VOLUME** knob to select your preferred time format (24H or 12H). Press **TIME SET/P+** to confirm.
4. The hour digits will flash. Rotate the **VOLUME** knob to adjust the hour. Press **TIME SET/P+** to confirm.
5. The minute digits will flash. Rotate the **VOLUME** knob to adjust the minute. Press **TIME SET/P+** to confirm.
6. The time is now set.

WIRELESS CHARGING

The top of the unit features a wireless charging pad for compatible devices.

All-in-One Home Stereo System



CD Player



Blue-tooth



USB Player



Dual Alarm Clock



FM Radio



Digital Time



AUX-in



Remote Control



Image: A smartphone placed on top of the stereo system, indicating active wireless charging with a green lightning bolt icon.

1. Ensure the stereo system is powered on or in standby mode.
2. Place your Qi-compatible smartphone or device on the wireless charging pad located on the top center of the unit.
3. The charging indicator on your device should activate, confirming that charging has begun.
4. To turn wireless charging on/off, press and hold the **VOLUME/SNOOZE** knob.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Main power switch off.	Check power cable connection; Ensure Main Power Switch on back is ON.
No sound	Volume too low; Incorrect mode selected; Device not connected properly.	Increase volume; Press FUN/EQ to select correct mode; Reconnect device (AUX/Bluetooth).

Problem	Possible Cause	Solution
CD skipping/not playing	Dirty or scratched CD; CD not inserted correctly.	Clean CD with a soft cloth; Reinsert CD properly.
Poor FM reception	Antenna not extended; Weak signal.	Fully extend FM antenna; Reposition unit for better signal.
Bluetooth not pairing	Unit not in Bluetooth mode; Device too far; Bluetooth already connected to another device.	Select Bluetooth mode; Move device closer; Disconnect from other devices.
Alarm not sounding	Alarm not set or turned off; Alarm volume too low.	Verify alarm settings and ensure alarm icon is displayed; Increase alarm volume during setup.
Wireless charging not working	Device not Qi-compatible; Device not placed correctly; Wireless charging turned off.	Ensure device supports Qi wireless charging; Reposition device on the pad; Press and hold VOLUME/SNOOZE knob to turn on.

SPECIFICATIONS

- **Brand:** WISCENT
- **Model:** WTB-798White
- **Product Dimensions:** 15.35 x 8.27 x 4.72 inches (390 x 210 x 120 mm)
- **Item Weight:** 4.42 pounds (2.01 kg)
- **Speaker Type:** Stereo
- **Power Source:** Corded Electric
- **Audio Output:** 20W RMS
- **Connectivity:** CD Player, Bluetooth 5.1, USB, FM Radio (87.5-108MHz), AUX-in
- **Additional Features:** Dual Alarm Clock, Snooze, Sleep Timer, Wireless Charging, Adjustable Backlit LED Display

MAINTENANCE

To ensure the longevity and optimal performance of your stereo system, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.
- **CD Player Care:** Handle CDs by their edges to avoid fingerprints and scratches. If the lens of the CD player becomes dirty, use a specialized CD lens cleaner.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block any ventilation openings.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official WISCENT website. Keep your purchase receipt as proof of purchase for warranty claims.

You can also visit the [WISCENT Store on Amazon](#) for more product information and support resources.

