



[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Jack Skellington Inflatable with O' Lanterns Instruction Manual

Gemmy 551518

Gemmy Jack Skellington Inflatable with O' Lanterns Instruction Manual

Model: 551518

INTRODUCTION

Thank you for choosing the Gemmy Jack Skellington Inflatable with O' Lanterns. This manual provides essential information for the safe and proper setup, operation, maintenance, and troubleshooting of your inflatable decoration. Please read these instructions carefully before use and retain them for future reference.



Image: The Gemmy Jack Skellington Inflatable with O' Lanterns, featuring Jack Skellington in his pinstripe suit with several illuminated jack-o'-lanterns at his base.

SAFETY INFORMATION

- Always ensure the inflatable is securely anchored to prevent wind damage.
- Do not operate in strong winds or stormy weather.
- Keep away from open flames, heaters, and other heat sources.

- Ensure the power cord and electrical components are protected from water and moisture. Use a weatherproof extension cord if necessary.
- Keep children and pets away from the inflatable during inflation and operation.
- Do not block the fan intake or exhaust.

PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Jack Skellington Inflatable with O' Lanterns
- Stakes
- Tethers
- Internal Blower Fan
- Internal LED Lights



Image: Included stakes and tethers for securing the inflatable.

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a flat, clear area for your inflatable. Ensure there are no sharp objects or debris that could puncture the material. Allow sufficient space for the inflatable to fully expand (approximately 90.16 inches L x 47.24 inches W x 107.87 inches H).
2. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
3. **Position the Inflatable:** Lay the inflatable flat on the ground in your desired display location. Ensure the fan is positioned correctly and its intake is clear of obstructions.
4. **Secure the Base:** Use the provided plastic stakes to secure the base of the inflatable to the ground.

5. **Connect Power:** Plug the inflatable's power cord into a suitable outdoor-rated electrical outlet. If using an extension cord, ensure it is rated for outdoor use and is weatherproof.
6. **Inflate:** The inflatable will begin to self-inflate within seconds. Allow it to fully inflate and stand upright.
7. **Attach Tethers:** Once fully inflated, locate the tether points on the inflatable. Attach the provided tethers to these points and secure them to the ground using the metal stakes at an angle to provide stability. Adjust tension as needed to keep the inflatable upright and stable.



Image: The Jack Skellington inflatable fully set up and illuminated in an outdoor yard setting.



Image: Close-up view of the internal blower fan located at the base of the inflatable, responsible for inflation.

OPERATING INSTRUCTIONS

- **Inflation:** Once plugged in, the internal blower fan will automatically inflate the decoration. Ensure all zippers are fully closed for proper inflation.
- **Lighting:** The inflatable features internal LED lights that illuminate the decoration when powered on, enhancing visibility during nighttime.
- **Deflation:** To deflate, simply unplug the power cord. The inflatable will slowly deflate for easy storage.
- **Moving Parts:** This model features moving arms, which operate automatically when the unit is inflated.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** After use, unplug and allow the inflatable to fully deflate. Fold or roll it neatly and store it in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Before each use, inspect the inflatable for any tears, punctures, or damage to the fabric, fan, lights, or power cord. Do not use if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Inflatable does not inflate fully or stands upright weakly.	Power cord not plugged in or loose. Fan intake/exhaust blocked. Zipper not fully closed. Small tear or hole in fabric. Fan motor issue.	Ensure power cord is securely plugged into a working outlet. Clear any obstructions from the fan. Check and fully close all zippers on the inflatable. Inspect for damage; small tears may be repairable with a patch kit (not included). If the fan motor is not operating, contact customer support.
Lights are not working.	Power issue. Damaged LED bulb or wiring.	Ensure the unit is receiving power. Internal lights are not user-replaceable. If lights fail, contact customer support.
Inflatable blows over in wind.	Insufficient anchoring. Strong winds.	Ensure all stakes and tethers are properly installed and tightened. Do not operate in strong winds. Deflate and store the unit during adverse weather conditions. Consider additional anchoring for very windy areas.

SPECIFICATIONS

- **Model Number:** 551518
- **Brand:** Gemmy
- **Dimensions (L x W x H):** 90.16 x 47.24 x 107.87 inches (approximately 9 ft tall)
- **Weight:** 12.47 pounds
- **Material:** Polyester
- **Features:** Self-inflating, Lights up, Moving arms
- **UPC:** 191245515180

WARRANTY INFORMATION

Specific warranty details for this product are typically provided by the manufacturer or the retailer at the time of purchase. Please refer to your purchase documentation or contact the retailer where you purchased this item for information regarding warranty coverage and claims.

CUSTOMER SUPPORT

For further assistance, questions, or to report issues with your Gemmy Jack Skellington Inflatable, please contact the retailer from whom you purchased the product. You may also visit the official Gemmy website for general product information and support resources.

Note: This manual is for informational purposes only. The manufacturer reserves the right to make changes to product specifications without prior notice.

