

- Manuals.plus /
- › COMHOMA /
- › COMHOMA Recliner Chair (3-Seater Sofa) User Manual

COMHOMA B0D2KDZ8WH

COMHOMA Recliner Chair (3-Seater Sofa) User Manual

Brand: COMHOMA | Model: B0D2KDZ8WH

1. INTRODUCTION

Thank you for choosing the COMHOMA Recliner Chair (3-seater sofa). This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new furniture. Please read these instructions thoroughly before use and retain them for future reference.



Figure 1.1: The COMHOMA 3-seater recliner sofa in a typical living room setup, showcasing its design and functionality.

2. PRODUCT FEATURES

The COMHOMA Recliner Chair (3-seater sofa) is designed for comfort and functionality, offering a luxurious seating experience. Key features include:

- **Reclining Functionality:** The 3-seat sofa features two reclining seats, one on each side, allowing individual adjustment for optimal comfort.
- **Adjustable Footrest:** Each reclining seat includes an extendable footrest to support your legs and promote circulation.
- **Integrated Cup Holders:** Convenient cup holders are built into the armrests for easy access to beverages.
- **Comfortable Padding:** Soft padding and excellent lumbar support ensure comfort and support where it's needed most.
- **Durable Construction:** Built with a robust wood frame and metal components for strength and longevity.

Note: While the COMHOMA sofa set may include single recliners with additional features such as rocking, massage,

heating, and swivel functions, these specific features are exclusive to the single recliner units and are not present on the 3-seater sofa.

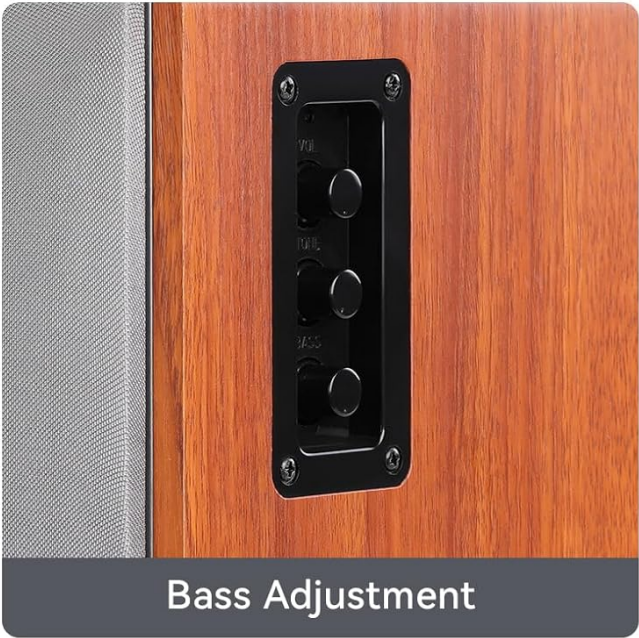


Figure 2.1: Detailed view of the integrated cup holder, expandable footrest, and a side pocket (common on single recliners in the set).

3. SPECIFICATIONS

Refer to the table below for detailed product specifications:

Attribute	Detail
Brand	COMHOMA
Model Number	B0D2KDZ8WH
Product Dimensions	95D x 90.9W x 102.8H Centimetres
Item Weight	45.13 kg

Attribute	Detail
Number of Pieces	3 (for the 3-seater sofa)
Colour	Black
Material	Bonded Leather (surface), Metal (mechanism), Wood (frame)
Assembly Required	Yes
Included Components	Arm Pad



Figure 3.1: Comprehensive product dimensions for the COMHOMA 3-seater recliner sofa.

4. ASSEMBLY INSTRUCTIONS

Assembly of the COMHOMA Recliner Chair (3-seater sofa) is required. While one person can assemble it, the boxes

are heavy, and assistance is recommended for handling. Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list are present.
2. **Assemble Arms:** This is often the most challenging part. Extend the arm brackets and align them with the corresponding points on the main frame. Secure them with the provided screws. It may require holding the brackets in an extended position while fastening.
3. **Attach Backrests:** Slide the backrests into place on the main frame until they securely lock.
4. **Connect Sections:** If assembling a multi-piece sofa, connect the individual sections at the base using the designated connectors.
5. **Final Checks:** Ensure all connections are secure and the sofa is stable before use.

Note on Folds: It is normal for minor folds to appear on the PU leather surface due to vacuum-packing during shipping. These folds will gradually reduce and flatten after 3-10 uses, or can be gently encouraged to flatten by light tapping or using a hairdryer on a low, appropriate heat setting.

5. OPERATING INSTRUCTIONS

Operating your COMHOMA Recliner Chair is straightforward:

5.1 Reclining the Chair

1. **Activate Recline:** Locate the lever on the side of the armrest (typically on the outer side). Pull this lever to release the footrest and initiate the recline mechanism.
2. **Recline Backwards:** Place your hands on the armrests and gently push your body weight backward. The backrest will recline smoothly to your desired angle (between approximately 90° and 160°).
3. **Return to Upright:** To return to the upright position, lean forward and use your body weight to push the backrest forward. Use your heel to push the footrest down until it locks into place.

Important: The 3-seater sofa's reclining mechanism is designed to return to the upright position when you leave the chair. It will not stay in a reclined position without body weight.

5.2 Using the Footrest

The footrest extends automatically when you pull the recline lever. To retract it, apply gentle pressure with your heels until it clicks back into its locked, stored position.

COMPREHENSIVE DESIGN



Cup Holder



Expandable Footrest



Side Pocket

Figure 5.1: Illustration of the manual recline mechanism, showing the pull lever and the extended footrest.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your COMHOMA Recliner Chair:

- **Regular Cleaning:** Dust the surface regularly with a soft, dry cloth. For spills, wipe immediately with a clean, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Addressing Folds:** As mentioned in assembly, minor folds from packaging are normal. Gentle tapping or the application of warm air (e.g., from a hairdryer on low setting, held at a safe distance) can help accelerate the flattening process.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the PU leather to fade or crack. Position your sofa away from direct sunlight.
- **Keep Away from Heat Sources:** Do not place the sofa too close to radiators, fireplaces, or other heat sources, as this can damage the material.

- **Protect from Sharp Objects:** Avoid placing sharp objects on the sofa that could puncture or scratch the upholstery.

7. TROUBLESHOOTING

If you encounter any issues with your recliner chair, refer to the following common problems and solutions:

- **Chair Does Not Recline Smoothly:**
 - Check for any obstructions around or under the mechanism.
 - Ensure all assembly screws are tightened correctly.
- **Footrest Does Not Extend/Retract:**
 - Verify that the pull lever is fully engaged or disengaged.
 - Ensure no objects are blocking the footrest's path.
- **Folds on Upholstery Persist:**
 - Allow more time for natural flattening with regular use.
 - Gently tap the affected areas or apply low, warm air from a hairdryer.
- **Squeaking Noises:**
 - Inspect the metal frame and mechanism for loose bolts or connections. Tighten if necessary.
 - Apply a small amount of silicone-based lubricant to moving parts if the noise persists (consult manufacturer for recommended lubricant).

If problems persist after attempting these solutions, please contact COMHOMA customer support.

8. WARRANTY AND SUPPORT

For specific warranty information regarding your COMHOMA Recliner Chair, please refer to the warranty card included with your purchase or visit the official COMHOMA website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

For customer support, technical assistance, or to inquire about replacement parts, please contact COMHOMA directly through their official website or the contact information provided in your purchase documentation. When contacting support, please have your model number (B0D2KDZ8WH) and proof of purchase readily available.

© 2024 COMHOMA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2K6CH2X>

More documents and user manuals: <https://manuals.plus/>