

[Manuals.plus](#) /

› [Coinmit](#) /

› Coinmit 2 Pack 39.4-Inch Outdoor LED Wall Light (Model HW603) Instruction Manual

Coinmit HW603

Coinmit 2 Pack 39.4-Inch Outdoor LED Wall Light (Model HW603) Instruction Manual

Model: HW603

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Coinmit 2 Pack 39.4-Inch Outdoor LED Wall Light, Model HW603. Please read this manual thoroughly before installation and retain it for future reference.

SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing. Improper installation can lead to electric shock or fire.

- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Ensure the supply voltage is correct for the fixture (110V).
- Do not install near flammable materials.
- Do not connect this fixture to an ungrounded electrical system.
- Wear safety glasses and gloves during installation.
- Keep the fixture away from corrosive substances.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 2 x LED Wall Light Fixtures (39.4-inch)
- 2 x Mounting Brackets
- 4 x Mounting Screws
- 4 x Wall Anchors
- 6 x Wire Nuts
- 1 x Instruction Manual

SPECIFICATIONS

Feature	Specification
Brand	Coinmit
Model Number	HW603
Size	39.4 Inches (Length)
Dimensions (L x W x H)	39.4"L x 3.54"W x 1.73"H
Material	Acrylic, Metal
Color	Black
Wattage	30 Watts
Brightness	3090 Lumens
Color Temperature	3000 Kelvin (Warm Light)
Voltage	110 Volts
Water Resistance Level	IP65 Waterproof
Installation Type	Wall Mount, Hardwired
Light Source	LED

Note: Specifications are subject to change without notice.

SETUP AND INSTALLATION

Before starting, ensure the power is turned off at the circuit breaker. This fixture is designed for hardwired wall mounting and can be installed vertically or horizontally.

Tools Required (Not Included):

- Screwdriver (Phillips and Flathead)
- Drill with appropriate drill bit
- Wire Strippers
- Electrical Tape
- Pencil
- Level

Installation Steps:

- 1. Turn Off Power:** Locate the circuit breaker controlling the light switch or outlet where you intend to install the fixture. Turn off the power.
- 2. Prepare Mounting Surface:** Use the mounting bracket as a template to mark the desired drilling locations on the wall. Ensure the bracket is level.
- 3. Drill Holes:** Drill pilot holes at the marked locations. Insert wall anchors if installing into drywall or masonry.
- 4. Attach Mounting Bracket:** Secure the mounting bracket to the wall using the provided mounting screws.


5. **Wire Connections:** Carefully connect the fixture's wires to your household electrical wires using wire nuts. Match the wires:

- Black (Live) to Black (Live)
- White (Neutral) to White (Neutral)
- Green or Bare Copper (Ground) to Green or Bare Copper (Ground)

Ensure all connections are secure and insulated with electrical tape if necessary.

6. **Mount Fixture:** Align the fixture with the mounting bracket and secure it in place with the provided screws. Ensure the fixture is flush against the wall.

7. **Restore Power:** Once the fixture is securely installed, turn the power back on at the circuit breaker.

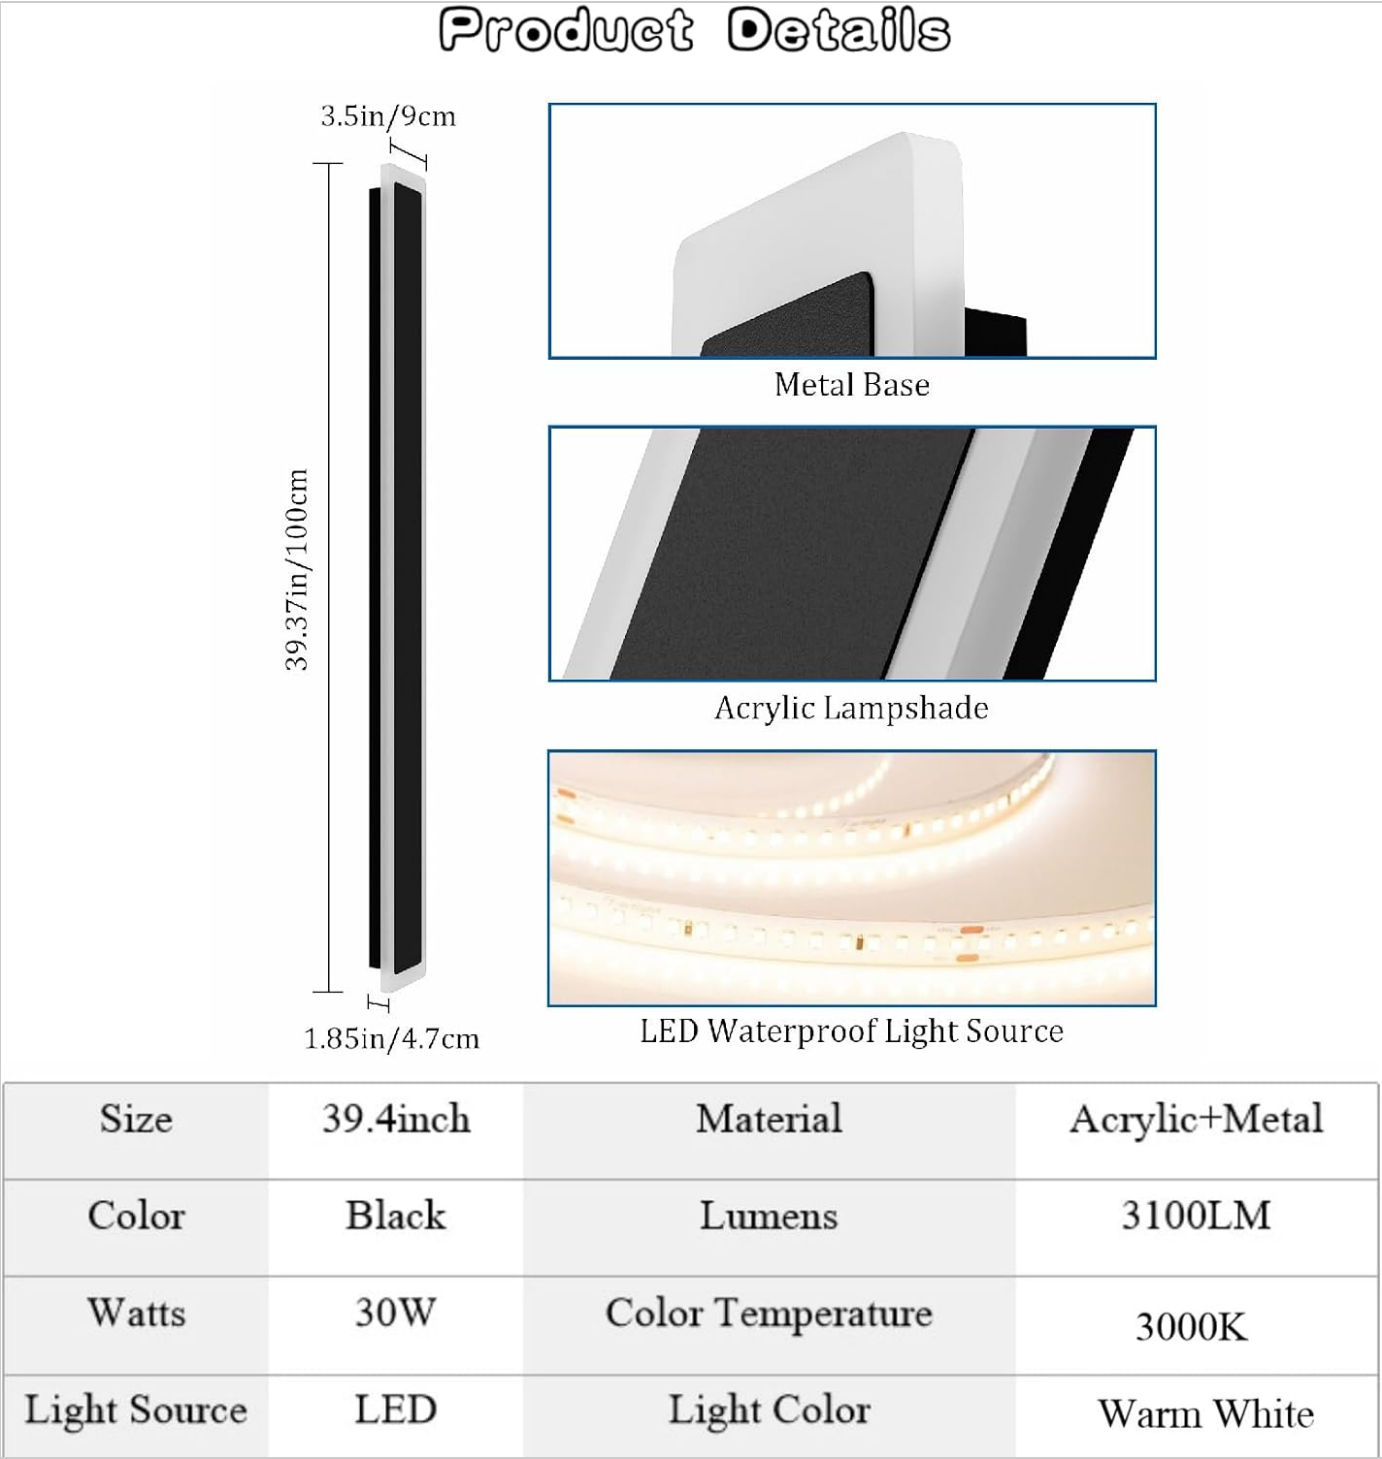

Outdoors&Indoors



Figure 2: Versatile application and key features. This graphic highlights the suitability of the Coinmit LED wall light for both exterior and interior applications, emphasizing its energy efficiency, color rendering index (CRI > 85), and straightforward installation process.

Video 1: Coinmit IP65 Waterproof Outdoor Wall Light. This video demonstrates the IP65 waterproof capabilities and overall design of the Coinmit outdoor wall light, showcasing its durability and modern aesthetic.

OPERATING INSTRUCTIONS

The Coinmit LED Wall Light operates via a standard wall switch. Once properly installed and wired, simply toggle the connected wall switch to turn the light fixture ON or OFF.

LIGHT OFF



LIGHT ON

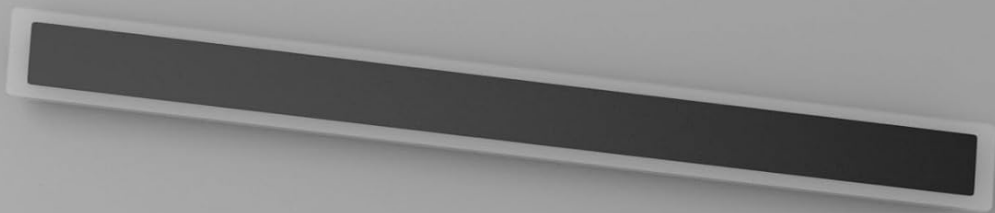


Figure 3: Light ON/OFF comparison. This visual comparison illustrates the appearance of the light fixture when turned off (black strip) and when illuminated (warm white glow).

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your LED wall light.

- **Cleaning:** Disconnect power before cleaning. Use a soft, damp cloth to wipe the surface of the fixture. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or acrylic lampshade.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician for repair.
- **LED Longevity:** The integrated LED light source is designed for long-term use (up to 50,000 hours) and is not user-replaceable.

TROUBLESHOOTING

If you encounter issues with your LED wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn ON	No power supply; Loose wiring; Faulty switch; Damaged fixture.	Check circuit breaker and wall switch. Verify all wire connections are secure. If issues persist, consult a qualified electrician.
Light flickers or dims	Loose wiring; Incompatible dimmer switch (if applicable); Voltage fluctuations.	Ensure all wire connections are tight. This fixture is not designed for use with dimmer switches unless explicitly stated. Check household voltage stability.
Water inside fixture	Improper sealing during installation; Damage to fixture.	Disconnect power immediately. Inspect installation for proper sealing. If fixture is damaged, it may need replacement.

Video 2: Real Feedback of Coinmit Long Outdoor Wall Light. This video provides a real-world perspective on the Coinmit long outdoor wall light, featuring user feedback and showcasing its performance in various settings.

WARRANTY AND SUPPORT

Coinmit products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Coinmit website. Please have your model number (HW603) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2KJ41Q1>

More documents and user manuals: <https://manuals.plus/>