

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Norwii](#) /
- › [Norwii N26 Wireless Presentation Clicker User Manual](#)

## Norwii N26

# Norwii N26 Wireless Presentation Clicker User Manual

Model: N26 | Brand: Norwii

## 1. INTRODUCTION

---

This manual provides detailed instructions for the Norwii N26 Wireless Presentation Clicker. Please read this guide thoroughly to ensure proper use and optimal performance of your device.

## 2. WHAT'S INCLUDED

---

- Norwii N26 Wireless Presenter x 1
- USB Receiver x 1
- User Manual x 1
- Pouch x 1

*Note: 1 AAA battery is required and not included in the package.*

# What's included in the package?



Image: Package contents of the Norwii N26 Wireless Presentation Clicker.

## 3. SETUP AND BATTERY INSTALLATION

### 3.1 Battery Installation

The Norwii N26 requires one AAA battery (not included). To install the battery:

1. Locate the battery cover on the back of the presenter.
2. Slide the battery cover open.
3. Insert one AAA battery, ensuring correct polarity (+/-).
4. Close the battery cover securely.

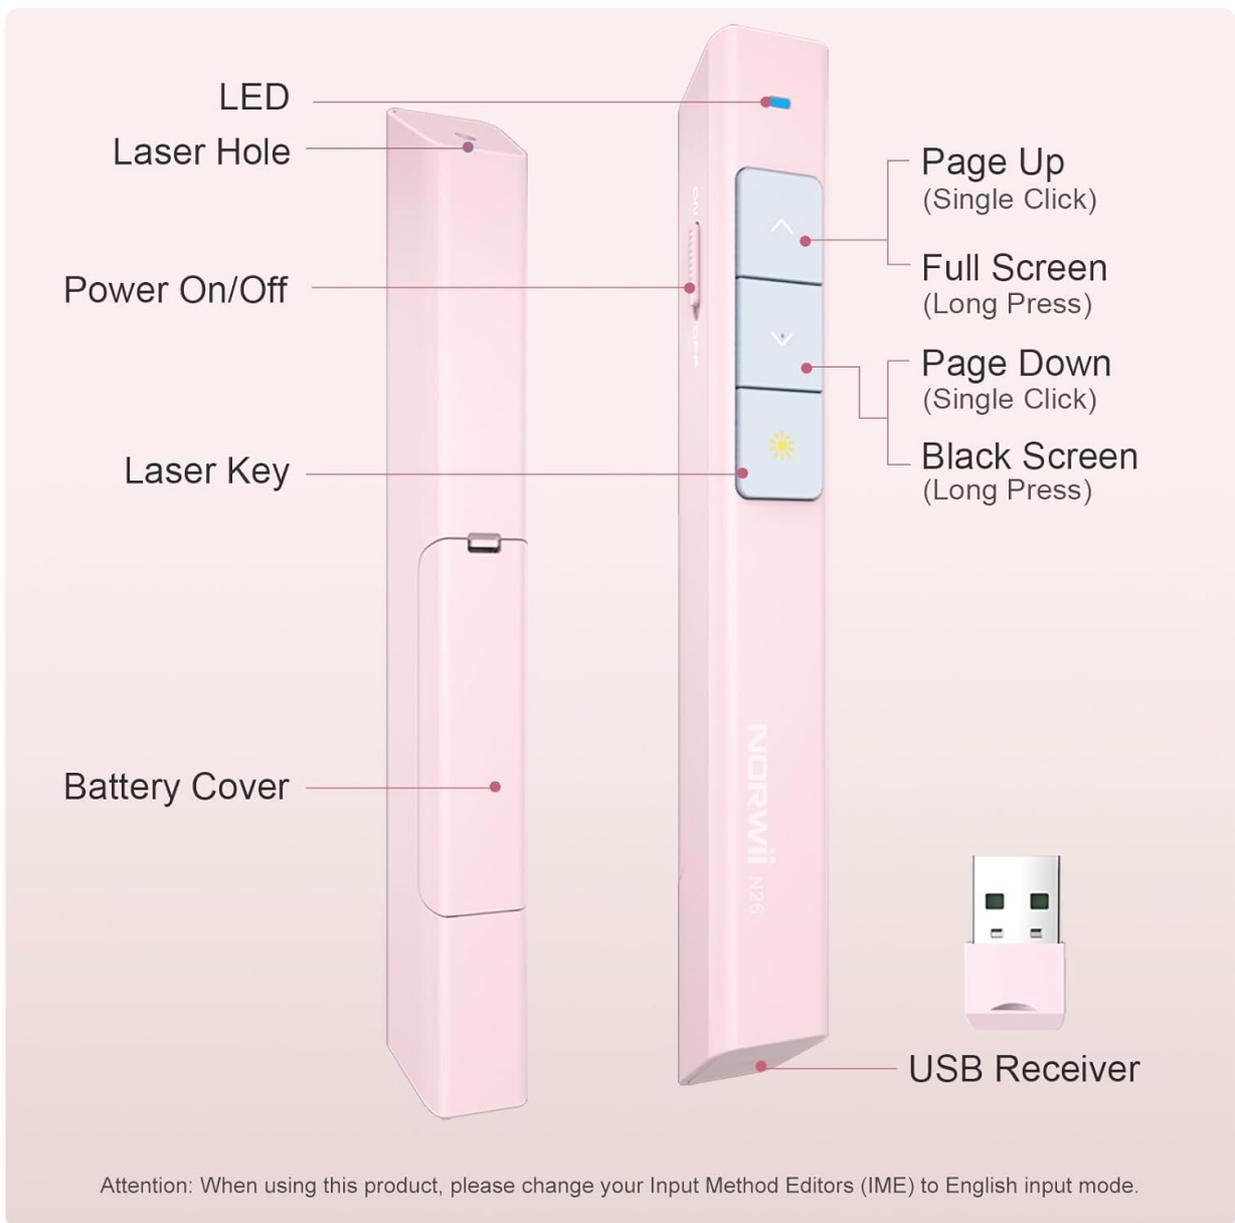


Image: Labeled diagram of the Norwii N26 Wireless Presenter, indicating the battery cover location.

### 3.2 Connecting the USB Receiver (Plug & Play)

The Norwii N26 is designed for plug-and-play functionality, requiring no software installation for basic use.

1. Remove the USB receiver from its magnetic storage slot at the end of the presenter.
2. Plug the USB receiver into an available USB port on your computer.
3. The system will automatically detect and install the necessary drivers.
4. Turn on the presenter using the Power On/Off switch.



Image: Plug-and-Play setup with the USB receiver.



Image: Magnetic USB receiver storage.

## 4. OPERATING INSTRUCTIONS

---

The Norwii N26 features intuitive controls for effective presentations.

- **Page Up (Single Click):** Advances to the next slide.
- **Page Down (Single Click):** Returns to the previous slide.
- **Full Screen (Long Press):** Toggles full-screen mode in presentation software.
- **Black Screen (Long Press):** Displays a black screen during a presentation.
- **Laser Key:** Activates the red light pointer.

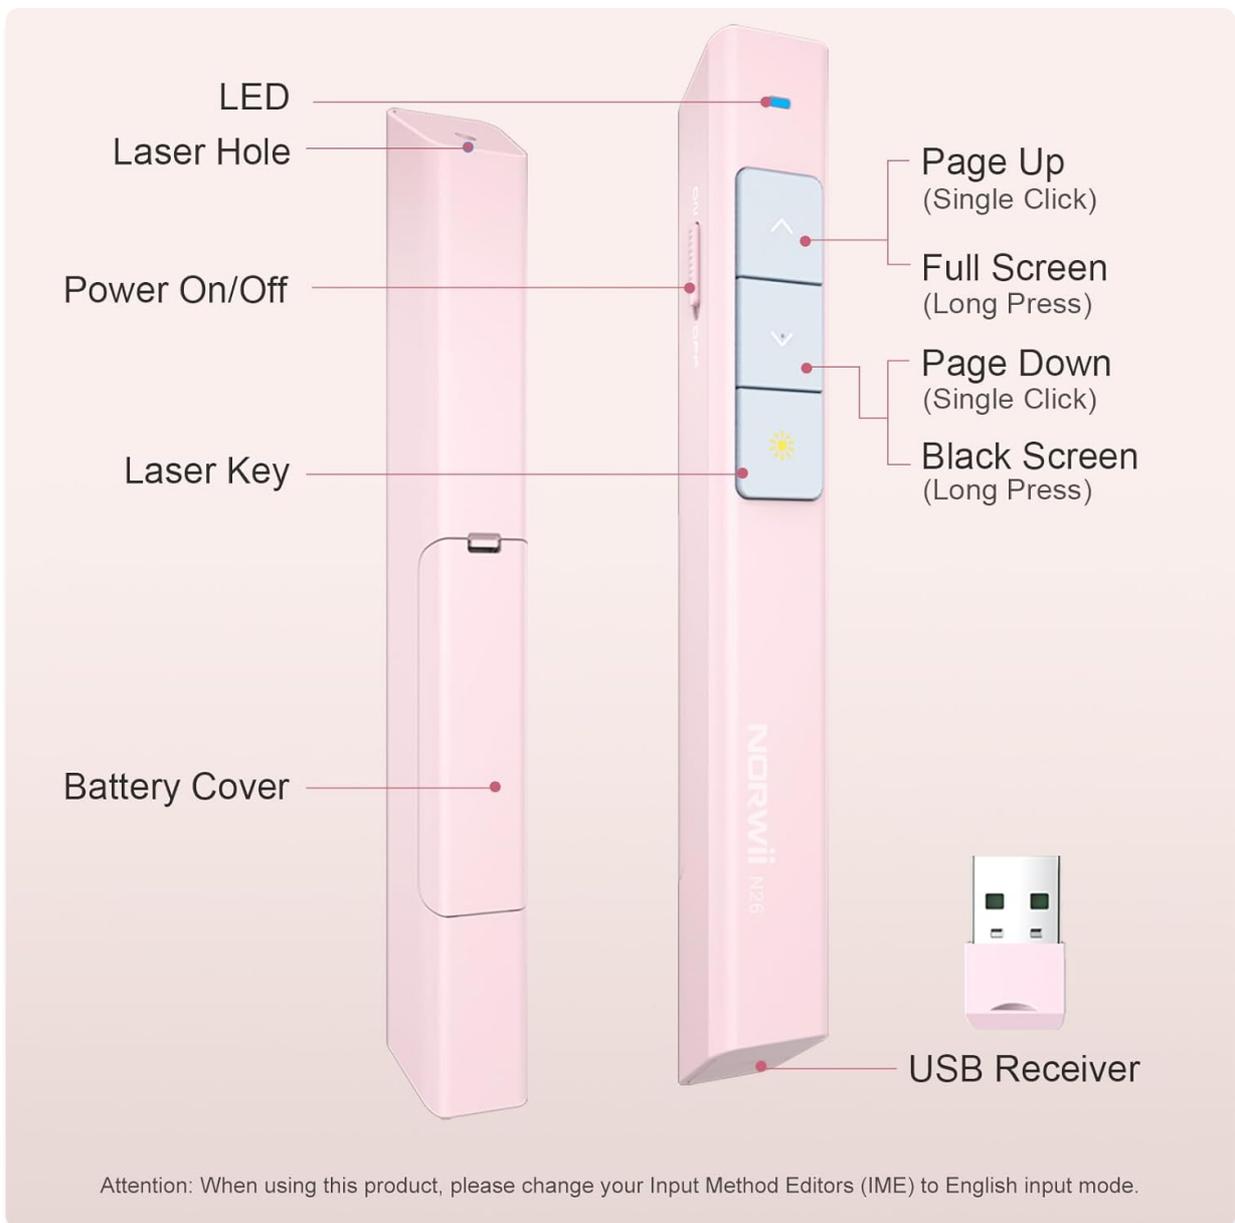


Image: Labeled diagram of the Norwii N26 Wireless Presenter buttons.

#### 4.1 Red Light Pointer

The integrated red light pointer is designed for highlighting content on most projection screens. It strictly complies with IEC-60825-1 safety standards. **Note:** The red light pointer is not recommended for TV screens due to prohibitive regulations and may not be clearly visible.



Image: Norwii N26 in use, demonstrating the red laser pointer and control range.

#### 4.2 Control Range

The Norwii N26 offers a wireless control range of up to 328 feet (100 meters), making it suitable for large presentation spaces. The actual range may vary depending on environmental factors and obstructions.



Image: Demonstration of the long control range.

### 4.3 Low Battery Alert

The presenter features a low battery smart alert. The indicator light will blink blue when the battery level is low, signaling that it's time to replace the AAA battery.



Image: Low battery smart alert indicator.

## 5. CUSTOMIZATION

The functions of the presenter's keys can be reconfigured using the Norwii Presenter software, available for download from the official Norwii website. This allows for personalized control over your presentations.

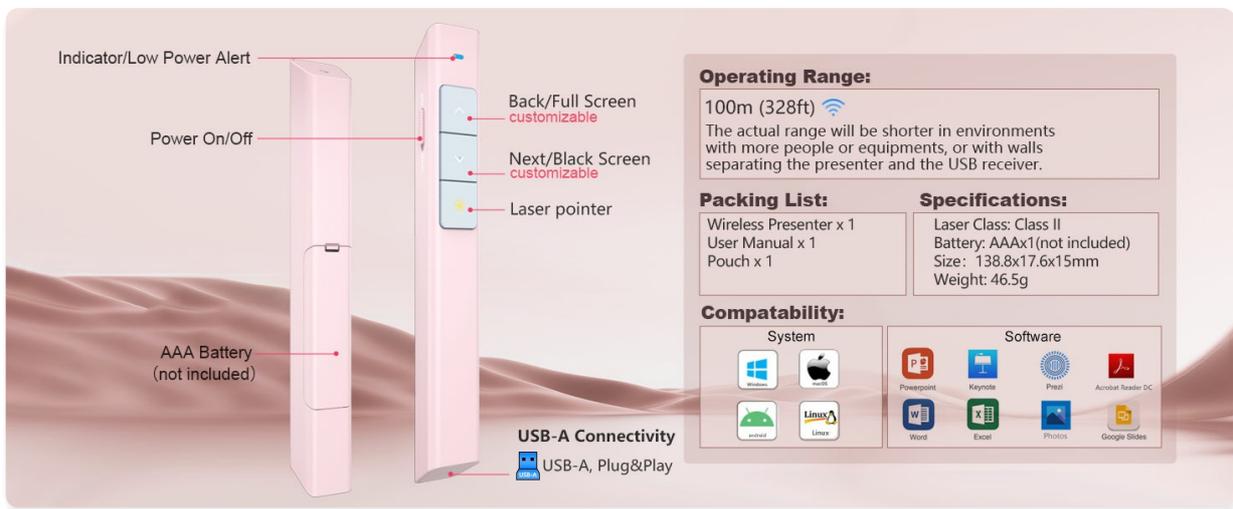


Image: Key-functions are customizable via Norwii Presenter software.

To switch between different working modes (e.g., Up/Down, Left/Right, Scroll, PgUp/PgDn), long press the “^” (Page Up) and “v” (Page Down) keys simultaneously for 3 seconds.

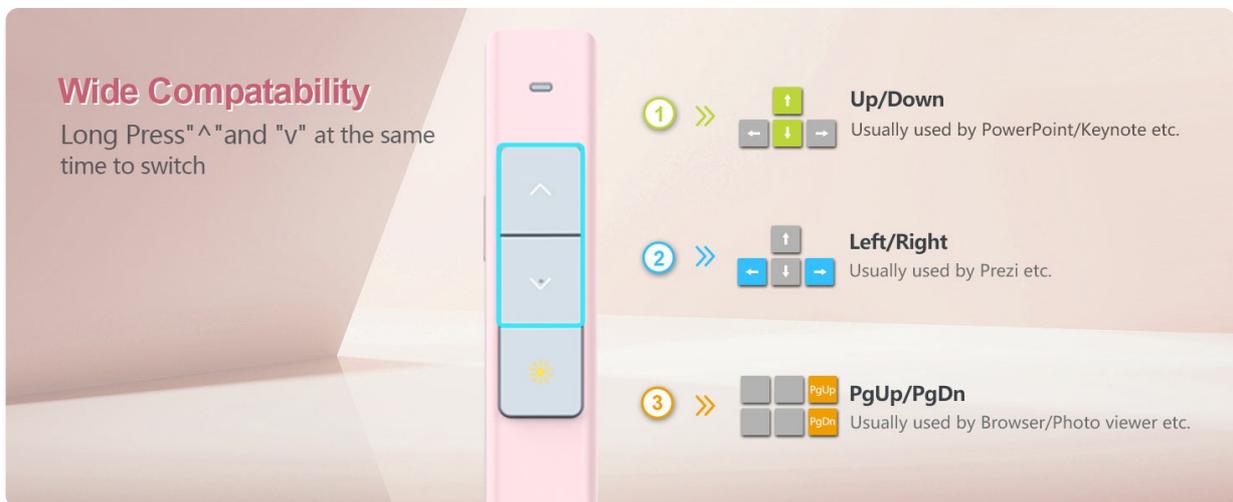


Image: Switching between compatibility modes.

## 6. COMPATIBILITY

The Norwii N26 is broadly compatible with various operating systems and presentation software:

- **Operating Systems:** Windows, macOS, Linux, Android, ChromeOS
- **Presentation Software:** PowerPoint, Keynote, Prezi, Google Slides, Word, Excel, ACD See, OneNote, Pages, Numbers, Photos, and more.

# Widely Compatible

Compatible with Windows, macOS, Android and Linux, support multiple software



## Softwares



Word



Excel



Powerpoint



ACD See



OneNote



Keynote



Google Slides



Prezi



Pages



Numbers



Photos

.....



## Plug and Play

No need to download driver software.

Image: Wide compatibility with operating systems and software.

## 7. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.45 x 0.59 x 0.69 inches
Item Weight	0.65 ounces
Batteries Required	1 AAA battery (not included)
Operating Range	Up to 100 meters (328 feet)
Laser Class	Class II
Special Feature	Key-function customizable

## 8. TROUBLESHOOTING

---

If you encounter issues with your Norwii N26, refer to the following common solutions:

### **8.1 Weak Laser Pointer**

- Ensure the battery has sufficient power. Replace with a fresh AAA battery if needed.
- The laser may appear weak on TV screens due to prohibitive regulations. For TV screens, consider Norwii N95s Pro or N97s models.

### **8.2 Short Control Range**

- Verify the battery has sufficient power.
- Ensure there are no significant obstructions between the wireless presenter and the USB receiver, as these can shorten the control distance.

### **8.3 Page Turn Not Responding**

- Confirm that the presentation window is the currently active window on your computer. Click on the presentation window to activate it.
- Long press the “^” (Page Up) and “v” (Page Down) keys simultaneously for 3 seconds to switch between the available working modes (Up & Down, Left & Right, Scroll, PgUp & PgDn).
- For macOS users: After plugging the USB receiver into your computer for the first time, set the keyboard type to ANSI.

# Troubleshooting



## 1. Causes for weak laser

- Ensure the battery has sufficient power.
- Laser is weak on TV screens due to prohibitive regulations. Please see Norwii N95s Pro or N97s for TV screens.

## 2. Causes for short control range

- Ensure the battery has sufficient power.
- An obstruction between the wireless presenter and the USB receiver may shorten the control distance.

## 3. The laser works fine, but the control page turn does not respond

- Ensure that the presentation window is the currently active window by click the presentation window.
- Long press the “^” & “v” key for 3s to switch among the 3 or 4 working modes: Up & Down, left & right, Scroll, Pgup & Pgdn.
- For the first time on macOS, set the keyboard type to ANSI after plugging the USB receiver into your computer.

**Be free to contact us via email for the most prompt technical support.**

Image: Troubleshooting tips for common issues.

## 9. IMPORTANT SAFETY INFORMATION

---

The red light pointer is a Class II laser product. Do not stare directly into the laser beam or point it at people or animals. Avoid direct eye exposure. Use responsibly.

## 10. SUPPORT

---

For further technical assistance or inquiries, please contact Norwii customer support via email. Refer to the product packaging or official website for contact details.