

TIMESS 13 Inch Silent Wall Clock

TIMESS 13 Inch Silent Wall Clock Instruction Manual

Model: 13 Inch Silent Wall Clock (Sliver)

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your TIMESS 13 Inch Silent Wall Clock. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the clock to extreme temperatures or direct sunlight.
- Avoid using abrasive cleaners on the clock's surface.
- Keep out of reach of children.
- Dispose of batteries properly according to local regulations.

PACKAGE CONTENTS

- 1 x TIMESS 13 Inch Silent Wall Clock
- 1 x Instruction Manual (This document)

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA carbon battery (not included) into the compartment, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

Note: Only use carbon-zinc batteries. Alkaline batteries may cause damage to the clock mechanism over time.



Image: Rear view of the TIMESS wall clock, highlighting the battery compartment and the silent quartz movement. A sleeping person is shown in the background, illustrating the silent operation.

2. Mounting the Clock

1. Choose a suitable location on a wall for mounting.
2. Use a nail or screw (not included) appropriate for your wall type.
3. Hang the clock securely using the integrated hanging slot on the back.



Image: Front view of the TIMESS 13 Inch Silent Wall Clock with a silver frame and white dial, displaying the time 10:10.

OPERATING INSTRUCTIONS

Setting the Time

1. Locate the time adjustment knob on the back of the clock, usually near the battery compartment.
2. Gently turn the knob clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Avoid forcing the hands directly, as this may damage the movement.



Image: Angled side view of the TIMESS 13 Inch Silent Wall Clock, showing the depth of the silver frame and the clear glass cover.

MAINTENANCE

Cleaning

To clean the clock, wipe the frame and glass with a soft, dry cloth. Do not use liquid cleaners or sprays directly on the clock.

Battery Replacement

Replace the AA carbon battery annually or when the clock begins to lose time. Follow the battery installation steps outlined in the 'Setup' section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Dead or incorrectly installed battery	Check battery polarity or replace with a new AA carbon battery.
Clock losing time	Weak battery	Replace the AA carbon battery.
Hands are stuck	Obstruction or damage to movement	Ensure hands are not bent or touching. If issue persists, contact support.

SPECIFICATIONS

- **Brand:** TIMESS
- **Model:** 13 Inch Silent Wall Clock
- **Color:** Silver

- **Display Type:** Analog
- **Movement:** Ultra-Quiet Quartz Sweep Movement
- **Power Source:** 1 x AA Carbon Battery (not included)
- **Product Dimensions:** 13"W x 13"H
- **Indoor/Outdoor Usage:** Indoor



Image: Close-up of the TIMESS wall clock face, showing the clear numbers and minute markers, with the protective glass cover lifted away.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's contact information on your purchase receipt or visit the official TIMESS store on Amazon.

Amazon Store Link: [TIMESS Official Store](#)