

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon Basics](#) /
- › [Amazon Basics 2 Slice Toaster Instruction Manual, Model TA01318B-UL](#)

## Amazon Basics TA01318B-UL

# Amazon Basics 2 Slice Toaster Instruction Manual

Model: TA01318B-UL | Brand: Amazon Basics

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Amazon Basics 2 Slice Toaster. Please read all instructions carefully before use and retain this manual for future reference.



Image: Front view of the Amazon Basics 2 Slice Toaster in black and silver.

## IMPORTANT SAFETY INFORMATION

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not toast bread with extremely runny ingredients (butter, jam, jelly, etc.) as they may burn.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.
- Be careful not to cover the slots with bread slices or other food during the baking process to avoid damage to the product due to abnormal heat dissipation.

## PRODUCT OVERVIEW

---

### Key Features:

- **Capacity:** Toasts 1 or 2 slices at once.
- **Customizable Browning:** 7 precise browning levels for personalized toast.
- **Extra-Wide Slots:** 5.25" x 1.25" slots accommodate thick bagels and artisan breads.
- **Illuminated Control Buttons:** Provides clear visibility and elegant operation.
- **Frozen Mode:** Special defrost setting for frozen bread.
- **Quick Stop:** One-touch cancel button for immediate cessation of toasting.
- **Easy Clean:** Convenient rear crumb tray slides out for effortless maintenance.
- **Power:** 800W.
- **Material:** Metal, Plastic.
- **Color:** Black & Silver.

# Customized Toasting

Perfect toast, your way, instantly

7 shade settings for  
light to dark toast

Cancel function ends  
the session instantly



Frozen setting button defrosts  
bread for quick toasting

Image: The toaster highlighting the browning dial (1-7), Cancel button, and Defrost button.

## SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, heat-resistant, non-flammable surface, away from curtains or other combustible materials. Ensure adequate ventilation around the toaster.
3. **Initial Use (Burn-off Cycle):** Before first use, operate the toaster without bread for 3-4 cycles at the highest browning setting (7). This will burn off any manufacturing residues and odors. It is normal for some smoke and odor to be present during this process. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

## 1. Basic Toasting:

1. Insert up to two slices of bread into the toaster slots. The extra-wide slots accommodate various bread types, including bagels.
2. Select your desired browning level using the rotary dial (1 for lightest, 7 for darkest).
3. Press the toast lever down until it locks into place. The toasting cycle will begin.
4. Once the selected browning level is achieved, the toast will automatically pop up and the toaster will turn off.

## 2. Defrost Function:

- Place frozen bread into the slots.
- Select your desired browning level.
- Press the toast lever down.
- Press the **DEFROST** button. The indicator light will illuminate. The toaster will automatically adjust the toasting time to defrost and toast the bread.

## 3. Bagel Function:

- Insert bagel halves into the slots with the cut side facing inwards.
- Select your desired browning level.
- Press the toast lever down.
- Press the **BAGEL** button. The indicator light will illuminate. This function toasts the cut side of the bagel while gently warming the outer side.

## 4. Cancel Function:

- To stop the toasting cycle at any time, press the **CANCEL** button. The toast will pop up immediately.

# Easy, Clean, & Versatile

Built for everyday easy use



Two-slot toaster for toasting one or two slices at once

Durable design ensures long-lasting use

Quick to heat, reducing energy usage

Image: The toaster illustrating the dimensions of the extra-wide slots and the location of the removable crumb tray at the back.

## MAINTENANCE

### Cleaning the Crumb Tray:

1. Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. Locate the removable crumb tray at the back of the toaster.
3. Slide the crumb tray out.
4. Discard accumulated crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
5. Push the crumb tray back into place until it clicks securely.

**Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.



Image: A hand pulling out the removable crumb tray from the rear of the toaster.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure toaster is securely plugged in. Test outlet with another appliance. Check circuit breaker.
Toast is too light/dark.	Browning setting is incorrect for desired toast level or bread type.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast. Different bread types may require different settings.

Problem	Possible Cause	Solution
Toast does not pop up.	Lever not fully depressed; mechanical issue.	Ensure the toast lever is fully pressed down until it locks. If issue persists, unplug and contact customer support.
Smoke or burning smell.	Crumbs accumulated in tray; food stuck in slots; initial burn-off.	Immediately press CANCEL and unplug. Clean crumb tray. Remove any stuck food (only when unplugged and cool). Initial burn-off is normal.

## SPECIFICATIONS

- **Brand:** Amazon Basics
- **Model Number:** TA01318B-UL
- **Color:** Black & Silver
- **Material:** Metal, Plastic
- **Product Dimensions:** 10.98"D x 6.91"W x 7.59"H
- **Wattage:** 800 watts
- **Voltage:** 120 Volts (AC)
- **Number of Slices:** 2
- **Number of Settings:** 7 browning levels
- **Special Feature:** Removable Crumb Tray
- **Item Weight:** 2.99 pounds (1.36 Kilograms)
- **UPC:** 840324418491
- **Manufacturer:** Amazon
- **Manufacture Year:** 2024

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Amazon Basics customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, visit the [Amazon Basics Store](#).

© 2024 Amazon Basics. All rights reserved.

## Related Documents - TA01318B-UL

 <p>amazon basics</p> <p>2-Slice Toaster Tostadora Para 2 Rebanadas Grillador para 2 Rebanadas 9272P11H8L</p>	<p><a href="#">Amazon Basics 2-Slice Toaster User Manual - Operation, Safety &amp; Specifications</a></p> <p>User manual for the Amazon Basics 2-Slice Toaster (Model B072P11H8L), providing instructions on operation, safety, cleaning, and specifications. Features include 6 browning settings, extra-wide slots for bagels and specialty breads, and a removable crumb tray.</p>
--	---

 <p>amazon basics</p> <p>Safety and Use Manual Manuel de Sécurité et d'Utilisation Manual de uso y Seguridad 安全と取扱マニュアル</p> <p>Electronic Keypad Entry Lever Door Lock Cerradura de Puerta a Levanta para Puerta de Entrada con Cierres Cerradura de Puerta con Manija y Tacheta Electrónica de Acceso 電子キーパッド電子ロック付レバー錠 B0BJAK5FXA, B0BJ46R8DVL, B0BJ4J73WU</p>	<p><a href="#">Amazon Basics Electronic Keypad Entry Lever Door Lock: Safety and Use Manual</a></p> <p>Comprehensive safety and use manual for the Amazon Basics Electronic Keypad Entry Lever Door Lock, covering installation, operation, programming, troubleshooting, and specifications.</p>
---	---

 <p>amazon basics</p> <p>User Manual Bluetooth Wireless On-Ear Headphones, Black Manuel de l'utilisateur Casque d'écoute Bluetooth sans fil, noir Bedienungsanleitung Kabellose drahtlose Kopfhörer, schwarz Manuale per l'uso Cuffia senza fili Bluetooth, colore nero Manual del usuario Auriculares inalámbricos con Bluetooth, negro Gebruikershandleiding Draadloze Bluetooth-koptelefoon, on-ear, zwart Instrukcja obsługi Bezprzewodowe słuchawki iouszne Bluetooth, czarne Bruksanvisning Trådlösa on-ear-hörlurar med Bluetooth, svart ユーザーマニュアル Bluetooth ワイヤレス オンイヤーヘッドホン ブラック B0BVM1P5YN</p>	<p><a href="#">Amazon Basics Bluetooth Wireless On-Ear Headphones User Manual</a></p> <p>User manual for Amazon Basics Bluetooth Wireless On-Ear Headphones, Black. Provides instructions on setup, usage, troubleshooting, specifications, and legal notices.</p>
---	--

 <p>amazon basics</p> <p>WARNING</p> <p>CR2032 Lithium Button Cell Battery Safety and Handling Guide</p>	<p><a href="#">Amazon Basics CR2032 Lithium Button Cell Battery Safety and Handling Guide</a></p> <p>Safety guidelines and handling instructions for Amazon Basics CR2032 3V lithium button cell batteries. Learn about safe usage, storage, disposal, and potential hazards to prevent injury.</p>
---	---

 <p>amazon basics</p> <p>Portable Stand User Manual - Setup Guide</p>	<p><a href="#">Amazon Basics Portable Stand User Manual - Setup Guide</a></p> <p>Official user manual for the Amazon Basics portable stand, providing step-by-step instructions for adjusting and using the device with tablets and phones.</p>
--	---

 <p>amazon basics</p> <p>6.34-Quart Air Fryer with Digital Touchscreen Friteuse à Air Chaud de 6,34 Quart avec Écran Tactile Numérique Fritador de Aire de 6.34 Cuartos con Pantalla Digital B0844F8K1C</p> <p>Page 2 of 20</p>	<p><a href="#">Amazon Basics 6.34-Quart Air Fryer with Digital Touchscreen - User Manual</a></p> <p>This user manual provides instructions for the Amazon Basics 6.34-quart Air Fryer with Digital Touchscreen. It covers important safeguards, intended use, setup, operation, cleaning, maintenance, and troubleshooting.</p>
--	---