

## BRUNNER DEVIL KOOKMASTER GP (0708063N)

# Brunner DEVIL KOOKMASTER GP Portable Gas Stove

Model: 0708063N

### INTRODUCTION

This instruction manual provides important information for the safe and efficient use of your Brunner DEVIL KOOKMASTER GP Portable Gas Stove. Please read this manual thoroughly before operating the appliance and retain it for future reference. This gas stove is designed for outdoor cooking and features two powerful burners with piezoelectric ignition, a durable stainless steel cooking surface, and includes both smooth and ribbed grill plates.

### SAFETY INFORMATION

**WARNING: Failure to follow these instructions could result in fire, explosion, or carbon monoxide poisoning, which could cause property damage, personal injury, or death.**

- **Outdoor Use Only:** This appliance is designed for outdoor use in well-ventilated areas. Never operate it indoors, in tents, vehicles, or other enclosed spaces.
- **Gas Leak Check:** Always check for gas leaks before each use. Use a soapy water solution on all connections. Do not use an open flame to check for leaks.
- **Ventilation:** Ensure adequate ventilation to prevent carbon monoxide buildup.
- **Flammable Materials:** Keep the stove clear of flammable materials, such as tents, clothing, and dry vegetation. Maintain a safe distance from walls and other surfaces.
- **Stable Surface:** Always operate the stove on a firm, level, non-combustible surface.
- **Gas Cylinder:** Use only LPG (Liquefied Petroleum Gas) cylinders with the correct pressure regulator (30 mbar). Ensure the gas cylinder is upright and stable.
- **Regulator Compatibility:** Verify that the gas regulator supplied or used is compatible with your local gas cylinder type and pressure requirements. In some regions, such as Italy, standard regulators may not be suitable for all cylinder types and may require an adapter or different regulator.
- **Children and Pets:** Keep children and pets away from the stove during operation and while it is cooling down.
- **Hot Surfaces:** The stove and its components become very hot during use. Allow sufficient time for cooling before handling or storing.
- **Do Not Modify:** Never modify the appliance. Any modification can be dangerous and will void the warranty.

- **Storage:** Disconnect the gas cylinder and store the stove in a cool, dry place when not in use.

## PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Brunner DEVIL KOOKMASTER GP Portable Gas Stove (with integrated lid and carrying handle)
- Smooth Grill Plate
- Ribbed Grill Plate
- Instruction Manual

## PRODUCT FEATURES

- **Dual Burners:** Two independent burners, each with 2.4 kW output, for versatile cooking.
- **Piezoelectric Ignition:** Integrated ignition system for quick and easy startup.
- **Durable Construction:** Stainless steel cooking surface and burners for longevity and easy cleaning.
- **Integrated Lid:** Provides protection during transport and acts as a wind screen during cooking.
- **Portability:** Lightweight design (6.53 kg) with an ergonomic carrying handle and locking clips for secure transport.
- **Included Grill Plates:** Comes with both a smooth and a ribbed grill plate for various cooking styles.
- **Gas Pressure:** Operates at 30 mbar pressure.

**INOX**  
Stainless Steel  
TOP & BURNERS

pressure:  
**30 mbar**  
power:  
**2,4 kW x 2**



**WIND SCREEN**

Image: The Brunner DEVIL KOOKMASTER GP gas stove in its open position, revealing the two stainless steel burners and the integrated wind screen. The lid is shown upright, acting as a shield.

# STAINLESS STEEL BURNERS & TOP/DUAL



Image: A detailed view of one of the stainless steel burners, highlighting its construction and design for efficient heat distribution.

## SETUP

1. **Unpack:** Carefully remove the stove and all components from the packaging.
2. **Placement:** Place the stove on a stable, level, non-combustible surface in a well-ventilated outdoor area. Ensure there is sufficient clearance from any flammable materials.
3. **Open Lid:** Unlatch the two locking clips and open the lid. The lid will stand upright, serving as a wind screen.
4. **Connect Gas Cylinder:**
  - Ensure the gas control knobs on the stove are in the "OFF" position.
  - Connect the appropriate 30 mbar gas regulator (not always included, verify compatibility with your gas cylinder) to the gas cylinder.
  - Connect the gas hose from the regulator to the stove's gas inlet. Ensure all connections are tight and secure.
  - **Important:** Perform a gas leak test using soapy water on all connections. Bubbles indicate a leak. If a leak is detected, turn off the gas supply immediately and tighten connections. Do not use the stove if a leak persists.

5. **Place Grill Plates (Optional):** If using the grill plates, place them over the burners. The stove includes one smooth and one ribbed plate.



Image: The gas stove in its closed, portable state, illustrating its compact dimensions (53.5 cm length, 31 cm width, 9.5 cm height) and the two locking clips that secure the lid for transport.

# GRILL PLATE INCLUDED



Image: The gas stove with the smooth and ribbed grill plates positioned over the burners, demonstrating how they fit for cooking.

## OPERATING INSTRUCTIONS

1. **Prepare for Ignition:** Ensure the gas cylinder is connected and the gas supply valve on the cylinder is open.
2. **Ignite a Burner:**
  - Push in and turn the desired control knob counter-clockwise to the "HIGH" position. You should hear the gas flowing.
  - Simultaneously, press the piezoelectric ignition button (usually integrated into the control knob or located nearby). You should hear a click and the burner should ignite.
  - If the burner does not ignite within 5 seconds, turn the control knob to "OFF", wait 1 minute, and repeat the ignition process.
3. **Adjust Flame:** Once ignited, adjust the flame intensity by turning the control knob between "LOW" and "HIGH" settings.
4. **Cooking:** Place your cookware or the grill plates on the burner grates.
5. **Turn Off:** After cooking, turn the control knobs clockwise to the "OFF" position. Close the valve on the gas cylinder. Allow the stove to cool completely before handling or storing.



## CONTROL KNOB & PIEZOELECTRIC IGNITION

Image: A close-up view of the control knob, which also features the integrated piezoelectric ignition for easy lighting of the burners.

Note: The image showing a coffee machine adapter (PT06) demonstrates a potential use case for the stove with an optional accessory. This adapter is not included with the standard package.

### MAINTENANCE

Regular cleaning and proper storage will ensure the longevity and optimal performance of your gas stove.

- **Cleaning the Stove Body:** After the stove has cooled completely, wipe down the stainless steel cooking surface and exterior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could scratch the surface.
- **Cleaning Grill Plates:** The included grill plates should be cleaned thoroughly after each use. While described as non-stick, some food residue may still adhere. Use warm soapy water and a non-abrasive sponge. Ensure they are completely dry before storage.
- **Burner Maintenance:** Periodically check the burner ports for any blockages. Use a soft brush to remove debris if necessary.
- **Storage:** Ensure the stove is clean and completely dry before closing the lid and securing the locking clips. Store in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect the gas cylinder before storage.

### TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                      | Possible Cause   | Solution   |
|------------------------------|--|--|
| Burner does not light.       | No gas supply, gas cylinder empty, gas valve closed, igniter malfunction, clogged burner port. | Check gas cylinder level. Ensure gas valve is open. Check for gas leaks. Clean burner ports. If igniter fails, use a long match or lighter to manually ignite.   |
| Weak or inconsistent flame.  | Low gas pressure, partially closed gas valve, clogged burner port, incorrect regulator.        | Ensure gas cylinder has sufficient gas. Fully open gas valve. Clean burner ports. Verify regulator is correct for 30 mbar pressure and compatible with your gas cylinder.  |
| Gas smell detected.          | Gas leak.  | <b>IMMEDIATELY turn off gas supply at the cylinder.</b> Perform a soapy water leak test on all connections. Tighten any loose connections. Do not operate if a leak persists. Seek professional assistance if unable to resolve.       |
| Regulator connection issues. | Incompatible regulator for local gas cylinder type.  | Ensure the gas regulator is specifically designed for your local gas cylinder type and pressure (30 mbar). An incorrect regulator can damage seals or prevent a secure connection. Consult a local gas appliance specialist if unsure. |

## SPECIFICATIONS

- **Brand:** BRUNNER
- **Model:** DEVIL KOOKMASTER GP (0708063N)
- **Fuel Type:** LPG (Liquefied Petroleum Gas)
- **Material:** Stainless Steel
- **Power Output:** 2 x 2.4 Kilowatts (Total 4.8 kW)
- **Operating Pressure:** 30 mbar
- **Item Weight:** 6.53 Kilograms
- **Dimensions (Closed):** 53.5 cm (Length) x 31 cm (Width) x 9.5 cm (Height)
- **Included Components:** Smooth Grill Plate, Ribbed Grill Plate

## WARRANTY AND SUPPORT

**Warranty:** This product comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for any warranty claims.

**Support:** For technical assistance, spare parts, or warranty inquiries, please contact your retailer or the BRUNNER customer service department. Refer to the contact information provided with your purchase or on the official BRUNNER website.