

Manuals.plus /

› FIT KING /

› FIT KING Cordless Hand Massager User Manual

FIT KING 1c1e185e-e2f0-428b-9a84-f12ecb66d5d5

FIT KING Cordless Hand Massager User Manual

MODEL: 1C1E185E-E2F0-428B-9A84-F12ECB66D5D5

1. Setup

1.1 Unboxing and Components

Carefully open the product packaging and ensure all components are present. The package should contain the following items:

- Hand Massager Unit
- USB Charging Cable
- User Manual
- AC Adapter
- Carrying Bag



Rechargeable & High-capacity Battery

Built-in rechargeable 3000mAh battery can last 4-5 hours after full charging. It can be charged through the Adapter or laptop or power banks.

3000mAh
Battery



Charge with
Laptop



Charge with
AC Adapter



Charge with
Power Bank



Image: The image displays the contents of the FIT KING Hand Massager package, including the main massager unit, a USB charging cable, a user manual, an AC adapter, and a carrying bag, all neatly arranged.

1.2 Initial Charge

Before first use, fully charge the hand massager. Connect the provided USB charging cable to the massager's charging port and plug the AC adapter into a standard electrical outlet. The battery indicator on the display will show charging progress. A full charge typically takes 4-5 hours and provides 4-5 hours of use.

Rechargeable & High-capacity Battery

Power Adapter **Power Bank** **Laptop**

3000mAh

4~5H Use Time

Image: This image illustrates the various charging methods for the FIT KING Hand Massager, showing connections to a power adapter, a power bank, and a laptop, highlighting its 3000mAh battery and 4-5 hours of use time per charge.

1.3 First Use Preparation

Ensure your hands are clean and dry before inserting them into the massager. The device is designed for

comfortable use by both men and women, with a large internal space.

2. Operating Instructions



Image: A close-up view of the black FIT KING Cordless Hand Massager, showcasing its sleek design and the hand insertion opening.

2.1 Controls Overview

The FIT KING Hand Massager features a touch screen interface with four main control buttons:

- **Power Button:** Press and hold for 3 seconds to turn the device on or off.
- **Intensity Button:** Cycles through 3 intensity levels (Low, Mid, High).
- **Mode Button:** Selects from 3 massage modes.
- **Heat Button:** Toggles between 2 heating levels or turns heat off.

Smart Customized Operation



Power Button
Press it for 3 seconds



Mode Button
3 modes available



Intensity Button
Low/Mid/High



Heat Button
2 heating levels

Image: This image highlights the touch screen control panel of the FIT KING Hand Massager, detailing the Power, Intensity, Mode, and Heat buttons for customized operation.

2.2 Massage Modes

The device offers 3 distinct massage modes, designed to simulate different hand massage techniques. Select the mode that best suits your preference for a relaxing or deep massage experience.

2.3 Intensity Levels

Adjust the massage intensity to your comfort level. There are 3 intensity settings: Low for a gentle massage, Mid for

a relaxing massage, and High for a deep massage. The air compression system targets fingers, back of hand, palm, and wrist.



Image: A transparent view of the hand massager showing the internal airbags and their compression points on the fingers, back of the hand, palm, and wrist, illustrating the air compression massage mechanism.

2.4 Heating Function

The optional heating function provides warmth to your hands, which can help improve circulation and relieve stiffness. Choose between 2 heating levels (Low: 40°C, High: 45°C) or turn the heat off. A built-in shiatsu plate accurately massages palm acupoints.

12 + Million
Loyal Customers

19 Years of Innovation
As Pioneer in Health and Wellness

100 Countries
Available in 100 Countries

Image: A transparent view of the hand massager highlighting the heating element in the palm area, indicating how it warms the hand and improves blood circulation.

2.5 Automatic Shut-off

For safety and to prevent overuse, the massager is equipped with a built-in timer that automatically stops the massage after 20 minutes of continuous operation.

2.6 How to Use

1. Insert your hand into the massager, ensuring your palm rests comfortably on the internal shiatsu plate.
2. Press and hold the Power button for 3 seconds to turn on the device.
3. Select your desired massage mode using the Mode button.
4. Adjust the intensity level with the Intensity button.
5. Activate or adjust the heating function using the Heat button, if desired.
6. Relax and enjoy the massage. The device will automatically turn off after 20 minutes.



Cordless Hand Massager

More relaxation for your tired hands

Image: A woman is shown comfortably using the FIT KING Cordless Hand Massager while seated at a table, demonstrating its portable and convenient design for use in various settings.

3. Maintenance

3.1 Cleaning

To clean the massager, wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water. Ensure the device is unplugged and turned off before cleaning.

3.2 Storage

Store the hand massager in a cool, dry place away from direct sunlight and extreme temperatures. Use the provided carrying bag for protection when not in use or during travel.

3.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device when the remaining power visualization indicates low battery. If storing for an extended period, charge the battery every 3 months to maintain its capacity.

4. Troubleshooting

If you encounter any issues with your FIT KING Hand Massager, please refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or power button not pressed correctly.	Charge the device fully. Press and hold the power button for 3 seconds.
No compression or weak compression.	Incorrect intensity setting or hand not properly placed.	Increase intensity level. Ensure hand is fully inserted and positioned correctly.
Heating function not working.	Heating function not activated or set to off.	Press the Heat button to select a heating level.
Device stops unexpectedly.	Automatic 20-minute timer activated or low battery.	This is normal operation after 20 minutes. Recharge if battery is low.

4.1 Contact Support

If the issue persists after attempting the above solutions, please refer to the full user manual or contact FIT KING customer support for assistance. Contact details can typically be found on the product packaging or the official FIT KING website.

5. Specifications

Feature	Detail
Product Dimensions	10 x 8.8 x 4.6 inches
Item Weight	2.82 Pounds
Model Number	1c1e185e-e2f0-428b-9a84-f12ecb66d5d5
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	3000mAh
Use Time per Charge	4-5 hours
Power Source	Battery Powered (DC5V 2A chargers, PC, or power banks)
Material	Plastic
Color	Black
Special Feature	Cordless, Compression, Heating, Finger Wraps, Shiatsu Plate

Upgraded Large Size

Suitable for both men and women



Woman's hands



Men's hands



Image: This image provides a visual representation of the FIT KING Hand Massager's dimensions, indicating its suitability for both women's and men's hands with measurements of 5.5 inches width and 8.3 inches height.

6. Warranty and Support

6.1 Warranty Information

The FIT KING Cordless Hand Massager comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

6.2 Return Policy

A **30-day free return** policy is offered for this product. Refer to your retailer's return policy for specific details and procedures.

6.3 Safety Information and Legal Disclaimer

For detailed safety information and legal disclaimers, please refer to the "Important Information" section in the complete user manual provided with your product. Key points include avoiding use on broken skin, limiting use to 15 minutes, keeping away from water, and consulting a doctor if you have medical conditions or are pregnant.

For further assistance or inquiries, please visit the official FIT KING Store or contact their customer service.