

Gevi DCMA0-BK0A1

Gevi 12-Cup Programmable Drip Coffee Maker (Model DCMA0-BK0A1) User Manual

Your guide to operating and maintaining your Gevi coffee maker.

[Safety Instructions](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Gevi 12-Cup Programmable Drip Coffee Maker features a sleek design with a touch screen control panel, offering various brewing options for both hot and iced coffee.

Components:

- Water Tank with Level Indicator (up to 12 cups / 60 oz / 1.8 L)

- Touch Screen Control Panel
- Brew Head
- Filter Basket
- Reusable Coffee Filter
- Glass Carafe
- Warming Plate
- Measuring Scoop



Figure 2.1: The Gevi 12-Cup Programmable Drip Coffee Maker, showcasing its main components including the water tank, control panel, and glass carafe.

Large Control Panel



Touch
screen



Function
Programmable



Custom
coffee



Figure 2.2: Close-up of the large touch screen control panel, highlighting programmable functions and custom coffee options.



Figure 2.3: Product dimensions: 13.8 inches height, 12.1 inches depth, and 8.0 inches width.

3. SETUP AND FIRST USE

3.1 Initial Cleaning

1. Remove all packaging materials and labels from the coffee maker.
2. Wash the carafe, filter basket, and reusable filter in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a soft, damp cloth.

3.2 First Use (Cleaning Cycle)

Before brewing coffee for the first time, run a cleaning cycle to remove any manufacturing residues.

1. Fill the water tank to the 12-cup (MAX) mark with fresh, cold water.
2. Place the empty carafe with its lid on the warming plate.
3. Ensure the filter basket is empty and properly seated.
4. Press the "ON/OFF" button to power on the machine.
5. Initiate a full brewing cycle without coffee grounds.

6. Once the cycle is complete, discard the water from the carafe.
7. Repeat this process once more with fresh water.



Figure 3.1: Remember to remove the protective film from the control panel before first use.

4. OPERATING INSTRUCTIONS

4.1 Basic Hot Coffee Brewing

1. Fill the water tank with desired amount of cold water. Use the water level indicator on the side of the machine.
2. Place the reusable filter into the filter basket.
3. Add desired amount of coffee grounds to the filter. A general guideline is 1 tablespoon of coffee grounds per cup of water.
4. Close the top cover securely.
5. Place the empty carafe with its lid on the warming plate.
6. Press the "ON/OFF" button to power on the machine.
7. Select your desired brew settings (e.g., "CLASSIC" recipe, "MEDIUM" strength).
8. Press "ON/OFF" again to start brewing.
9. The machine will beep 3 times when brewing is complete.



Reusable Coffee Filter & Basket

Figure 4.1: Adding coffee grounds to the reusable filter and basket.

Brew Up To 12 Cups

12 Cups / 60 oz / 1.8 L

With easy-view water tank



Figure 4.2: The coffee maker can brew up to 12 cups (60 oz / 1.8 L) with an easy-view water tank.

4.2 Iced Coffee Brewing

For iced coffee, the machine brews a concentrated coffee over ice.

1. Fill the water tank to the "ICE" mark (indicated by a snowflake icon) with fresh, cold water.
2. Fill the carafe with ice cubes up to the "max ice cubes" mark.
3. Place the reusable filter into the filter basket.
4. Add slightly less coffee grounds than for hot coffee (e.g., 3-4 tablespoons for a full carafe of iced coffee).
5. Close the top cover securely.
6. Place the carafe with ice on the warming plate.
7. Press the "ON/OFF" button to power on the machine.
8. Select the "ICE COFFEE" option on the touch screen.
9. Press "ON/OFF" again to start brewing.
10. Once brewing is complete, stir the iced coffee and serve.

Note: The "ICE COFFEE" function cannot be set together with "ROAST", "INFUSION", "STRENGTH", or "CARAFE" temperature settings.

4 Brewing Strengths



Figure 4.3: The coffee maker offers four brewing strengths: Classic, Intense, Rich, and Ice.

4.3 Programming Features

- **Current Time Setting:** Press the "HOUR" button (1 press = 1 hour) and "MINUTE" button (1 press = 1 minute) to set the current time. Wait 2 seconds for the timer to stop flickering, or press "ON/OFF" to confirm.
- **Delay Brew Timer Setting:** Press the "DELAY BREW TIMER" button. Then use the "HOUR" and "MINUTE" buttons to set the desired brewing time. Wait 2 seconds for the timer to stop flickering, or press "DELAY BREW TIMER" to confirm.
- **Keep Warm Timer Setting:** Press the "KEEP WARM TIMER" button. Use the "HOUR" and "MINUTE" buttons to set the keep warm duration (range: 3 minutes to 3 hours 59 minutes). Wait 2 seconds for the timer to stop flickering, or press "ON/OFF" to confirm.



Figure 4.4: The Keep Warm Timer can be set for durations between 5 minutes and 3 hours 59 minutes.

4.4 Customizing Brew Settings

- **Brewing Flavors Setting ("RECIPES"):** Press the "RECIPES" button to choose from "CLASSIC", "INTENSE", and "RICH" flavors.
Note: This function cannot be set together with "ICE COFFEE", "ROAST", "INFUSION", "STRENGTH", and "CARAFE" temperature settings.
- **Strength Setting:** Press the "STRENGTH" button to choose from three options: "L" (Low), "M" (Medium), "H" (High). Long press to cancel.
- **Infusion Setting:** Press the "INFUSION" button to choose from three options: "L" (Low), "M" (Medium), "H" (High).
- **Roast Setting:** Press the "ROAST" button to choose from three options: "L" (Low), "M" (Medium), "H" (High). Long press to cancel.
- **Carafe Temperature Setting:** Press the "CARAFE" button to choose from three temperatures: "L" (Low), "M" (Medium), "H" (High).
- **Reheat Setting:** Press the "REHEAT" button, then press "ON/OFF". An icon will appear under the timer. Long press to cancel.
- **Tone Setting:** Press the "TONE" button to toggle between Silent mode and Sound mode.

4.5 Video Tutorials

Gevi Programmable Drip Coffee Maker Overview

Your browser does not support the video tag.

This video provides a general overview of the Gevi Programmable Drip Coffee Maker, demonstrating basic operation and features.

Touch Screen Operation Guide

Your browser does not support the video tag.

A detailed video guide on how to use the touch screen controls for various settings and functions on your Gevi 12-Cup Drip Coffee Maker.

Customizing 4-Cup Coffee Brew

Your browser does not support the video tag.

Learn how to customize the brewing process for a 4-cup serving, including adjusting strength and other settings.

5. MAINTENANCE

5.1 Daily Cleaning

- After each use, discard used coffee grounds and rinse the reusable filter and filter basket.
- Wash the carafe and its lid in warm, soapy water. The carafe is not dishwasher safe.
- Wipe the exterior of the coffee maker with a damp cloth.

5.2 Descaling (Monthly or as needed)

Mineral deposits from water can build up in your coffee maker, affecting performance and coffee taste. Descale regularly to ensure optimal function.

1. Fill the water tank to the 12-cup mark with a descaling solution (e.g., a mixture of white vinegar and water, or a commercial descaling powder like Citric Acid Descaling Powder).
2. Stir the descaler to dissolve it completely in the water.
3. Place the empty carafe on the warming plate.
4. Press and hold the "CLEAN" button on the touch screen to initiate the cleaning mode. The machine will run a descaling cycle.
5. Once the descaling cycle is complete, discard the solution from the carafe.
6. Rinse the water tank thoroughly with fresh water.
7. Fill the water tank to the 12-cup mark with clean water.
8. Run at least two more full brewing cycles with clean water to ensure all descaling solution residue is removed. Discard water after each cycle.

How to Clean the Machine with Descaler

Your browser does not support the video tag.

This video demonstrates the proper procedure for cleaning and descaling your Gevi coffee maker to remove mineral buildup.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; machine not powered on; carafe not properly placed.	Fill water tank; press "ON/OFF" button; ensure carafe is correctly seated on warming plate.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; incorrect strength setting.	Adjust coffee grounds amount; select desired strength setting (L, M, H).
Water leaks from the machine.	Water tank overfilled; filter basket not properly seated.	Do not exceed MAX fill line; ensure filter basket is securely in place.
Machine does not heat.	Power issue; warming plate malfunction.	Check power connection; contact customer support if issue persists.
Touch screen unresponsive or flickering.	Temporary software glitch; protective film not removed.	Unplug and replug the machine; ensure protective film is removed.

7. PRODUCT SPECIFICATIONS


- **Brand:** Gevi
 - **Model Number:** DCMA0-BK0A1
 - **Capacity:** 12 Cups (60 oz / 1.8 L)
 - **Coffee Maker Type:** Drip Coffee Machine
 - **Operation Mode:** Fully Automatic
 - **Coffee Input Type:** Ground Coffee (whole beans not applicable for this model)
 - **Product Dimensions:** 5 x 5 x 5 inches (Note: This seems like a placeholder, actual dimensions from image are 13.8" H x 12.1" D x 8.0" W)
 - **Item Weight:** 7.48 pounds
 - **Date First Available:** May 31, 2024
- Correction:** Product dimensions are approximately 13.8 inches (Height), 12.1 inches (Depth), and 8.0 inches (Width), as indicated in product imagery.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Gevi website. Keep your purchase receipt for warranty claims.






You can visit the Gevi Store for more information: [Gevi Official Store](#)

Related Documents - DCMA0-BK0A1



[Gevi 4-Cup Drip Coffee Machine Instruction Manual](#)

Comprehensive instruction manual for the Gevi 4-Cup Drip Coffee Machine (Model GECMD008-U), covering important safeguards, operation, cleaning, maintenance, and troubleshooting.

	<p>Gevi GECMA025A-U Coffee Maker Instruction Manual</p> <p>Comprehensive instruction manual for the Gevi GECMA025A-U coffee maker, covering important safeguards, operation instructions for making drip coffee with beans or powder, automatic start function, cleaning, maintenance, and disposal.</p>
	<p>Gevi DCMF0 Drip Coffee Maker with Grinder User Manual</p> <p>User manual for the Gevi DCMF0 Drip Coffee Maker with Grinder, covering important safeguards, how to use the machine, brewing coffee, cleaning instructions, troubleshooting, technical parameters, customer support, and warranty information.</p>
	<p>Gevi 4-Cup Drip Coffee Machine Instruction Booklet</p> <p>Comprehensive instruction booklet for the Gevi 4-Cup Drip Coffee Machine (Model GECMD008-U), covering safety precautions, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Gevi 2-in-1 Burr Coffee Grinder: 35 Precise Grind Settings - Instruction Manual</p> <p>Comprehensive instruction manual for the Gevi 2-in-1 Burr Coffee Grinder (Model: GECGI406B-U7) with 35 precise grind settings. Learn about setup, operation, cleaning, maintenance, and troubleshooting for optimal coffee brewing.</p>
	<p>Gevi 2-in-1 Burr Coffee Grinder Instruction Manual</p> <p>Comprehensive instruction manual for the Gevi 2-in-1 Burr Coffee Grinder (Model GECGI406B-U7). Learn about its 35 precise grind settings, operation modes (Cup and Time), cleaning procedures, troubleshooting, and warranty information.</p>