



Manuals.plus /

› **Cimizi** /

› Cimizi Kids Digital Camera User Manual

Cimizi 2b5da9cb-aff3-47cc-9307-4b0f6f6dc50d

Cimizi Kids Digital Camera User Manual

Model: 2b5da9cb-aff3-47cc-9307-4b0f6f6dc50d

INTRODUCTION

This manual provides essential information for the safe and effective operation of your new Cimizi Kids Digital Camera. Designed for young photographers, this camera features dual lenses, a durable protective cover, and various fun functions to capture precious moments.

WHAT'S IN THE BOX

- Kids Camera
- Cartoon Protective Case
- Gift Packing Box
- USB Charging Cable
- 32GB SD Card (pre-installed)
- Hanging Lanyard
- User Manual



Image: Contents of the camera package, including the camera with its unicorn protective case and a 32GB SD card.

SETUP

1. **Initial Charge:** Before first use, fully charge the camera using the provided USB charging cable. Connect the cable to the camera's USB port and a compatible USB power source. The charging port is located on the side of the camera, often covered by the protective case. You may need to slightly pull back the silicone case to access it.
2. **Insert SD Card:** The 32GB SD card is pre-installed. Ensure it is securely seated in the SD card slot. This card is essential for storing photos and videos.
3. **Attach Lanyard:** Securely attach the hanging lanyard to the camera for easy portability and to prevent accidental drops.
4. **Remove Screen Protector:** Please tear off the protective film from the screen before use for optimal display clarity.



Image: Diagram illustrating the camera's buttons, display, speaker, USB port, and SD card slot.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the Power button (located on the side, near the microphone) to turn the camera on or off.

Your browser does not support the video tag.

Video: Demonstrates powering on the camera and navigating its main menu interface.

Basic Functions

- **Photo Mode:** Select the camera icon from the main menu. Press the shutter button (top right) to take a picture. The camera features HD dual cameras for both front and rear photography.
- **Video Mode:** Select the video camera icon. Press the shutter button to start and stop recording.
- **Playback:** Select the playback icon to view captured photos and videos. Use the Up/Down buttons to navigate through files.

- **Settings:** Access camera settings via the gear icon to adjust various parameters.



Image: Highlights the camera's multi-functional entertainment features including puzzle games, MP3 player, HD dual lens, and video recording.

Special Features

- **Puzzle Games:** The camera includes 3 built-in puzzle games for entertainment.
- **MP3 Music Player:** Load MP3 files onto the SD card to use the camera as a music player.
- **Time Lapse Capture:** Utilize the time-lapse function to capture sequences of photos over time.
- **Filters and Photo Frames:** Enhance photos with 28 cute frames and 6 filters available in the camera's software.

Funny Filters and Photo Frames

6 Filters



Image: Illustrates the variety of funny filters and photo frames that can be applied to pictures taken with the camera.

Your browser does not support the video tag.

Video: Shows the camera's time-lapse feature in action, capturing moments with a countdown.

MAINTENANCE

- **Charging:** Recharge the camera when the battery indicator is low. Use only the provided USB cable.
- **Protective Case:** The cartoon silicone case provides anti-drop protection. Ensure it is properly fitted to protect the camera from impacts. The case can be removed for cleaning or to access the charging port more easily.
- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.



Image: Illustrates the protective silicone case and its role in safeguarding the camera from drops.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera fully.
Cannot take photos/videos.	SD card full or not inserted correctly.	Check SD card insertion; delete old files or replace SD card.
Poor image quality.	Dirty lens; insufficient lighting.	Clean the lens with a soft cloth; ensure adequate lighting.

SPECIFICATIONS

Feature	Detail
Brand	Cimizi
Model Name	Cimizi
Model Number	2b5da9cb-aff3-47cc-9307-4b0f6f6dc50d
Color	Purple
Photo Sensor Technology	CMOS
Total Still Resolution	1 MP
Video Resolution	1080p
Screen Size	2 Inches
Memory Storage Capacity	32 GB (SD Card)
Battery Type	Lithium Polymer
Battery Average Life	3 Hours
Connectivity Technology	USB
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

This product comes with **No Warranty** as per manufacturer specifications. For any questions or issues with your product, please contact the seller directly for assistance. The seller, "hailongteng store", is committed to providing perfect solutions as soon as possible.

Contact information for support is typically found on the product packaging or through your purchase platform.