

[Manuals.plus](#) /

› [PRETZI](#) /

› PRETZI 58-inch Fireplace TV Stand with 18-inch Electric Heater and LED Lights User Manual

PRETZI TVS-Brown-58

PRETZI 58-inch Fireplace TV Stand User Manual

Model: TVS-Brown-58

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your PRETZI 58-inch Fireplace TV Stand. This entertainment center features an integrated 18-inch electric fireplace heater with remote control and 16-color LED lighting. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.



Image: The PRETZI 58-inch Fireplace TV Stand, showcasing its design with an electric fireplace and illuminated glass shelves.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Keep children and pets away from the fireplace heater during operation, as the outlet temperature can be high.
- Do not overload the TV stand. The maximum weight capacity is 300 pounds.
- Place the TV stand on a flat, stable surface to prevent tipping.
- Ensure proper ventilation around the electric fireplace. Do not block air vents.
- Use only the provided remote control for the fireplace and LED lights.
- Unplug the unit from the power outlet before cleaning or performing any maintenance.

PACKAGE CONTENTS

Your PRETZI Fireplace TV Stand will be delivered in two separate packages, which may arrive at different times. Please verify all parts are received before beginning assembly.

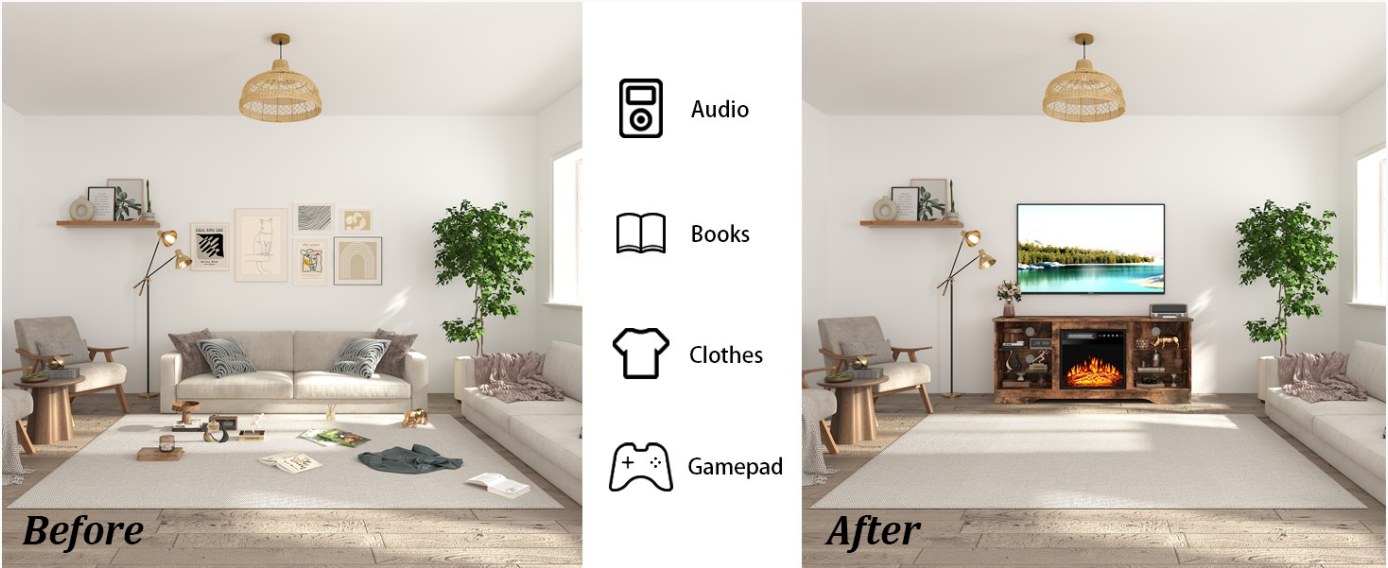


Image: Illustration of the two-package delivery system for the fireplace and TV stand components.

Included Components:

- TV Stand components (engineered wood panels, hardware)
- 18-inch Electric Fireplace Heater
- Remote Control for Fireplace and LED Lights (AAA batteries not included)
- Tempered Glass Shelves (2)
- Assembly Instructions

SETUP AND ASSEMBLY

Assembly typically takes about one hour for one or two people. Follow the detailed installation instructions provided in the package. Digital recognition features are included to enhance accuracy and efficiency during assembly.

Key Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Assemble the main frame of the TV stand according to the diagrams.
3. Install the two tempered glass shelves into the side cabinets. These shelves are adjustable and removable to customize storage space.
4. Carefully insert the 18-inch electric fireplace heater into the central opening.
5. Connect the LED lighting system as per instructions.

Adjustable or Removable Tempered Glass Shelves



Three Tier



Two Tier

Image: Detail of the adjustable and removable tempered glass shelves, illustrating two possible configurations.

TV Placement:

This TV stand is designed to accommodate TVs up to 65 inches. Ensure the TV's base fits securely on the top surface of the stand.



Image: Visual guide for TV size compatibility, indicating the stand can support TVs up to 65 inches.

OPERATING INSTRUCTIONS

Electric Fireplace Operation:

The 18-inch electric fireplace can be operated using the included remote control or the control panel on the fireplace unit.

Remote & Touch Control



Image: Remote and touch control interface for the electric fireplace, detailing functions like heater, timer, flame brightness, and power.

- **Power On/Off:** Press the power button on the remote or control panel to turn the fireplace on or off.
- **Flame Brightness:** Adjust the realistic 3D flame effect with 5 levels of brightness. The flame effect can be used independently without heat.
- **Heater Function:** Activate the heater to warm a room up to approximately 108 square feet. Note that this is not intended as a primary heat source.
- **Timer:** Set the operational timer for 1 to 8 hours.



Image: Key features of the 18-inch electric fireplace, including flame effects, heating capacity, and timer.

LED Lighting Operation:

The integrated LED lights in the side cabinets offer 16 different colors and dynamic modes. Use the remote control to adjust the color and brightness.

Multi-color LED Change

The figure only shows 12 LED colors, we have 16 colors waiting for you to discover.



Image: The TV stand displaying multiple LED color options within its glass-shelved compartments.



Image: Visual representation of the 16-color LED lighting system, highlighting dynamic modes and brightness control.

MAINTENANCE

- **Cleaning:** The engineered wood surface is waterproof and easy to clean. Use a soft, damp cloth to wipe down the surfaces. Avoid abrasive cleaners.
- **Glass Shelves:** Clean glass shelves with a glass cleaner and a soft cloth.
- **Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not spray liquids directly into the unit.
- **Cable Management:** Utilize the integrated cable management holes to keep wires tidy and prevent damage.

PRODUCT DIMENSION



Image: Features demonstrating the product's waterproof surface, glass shelves, and cable management solutions for easy maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fireplace does not turn on.	Not plugged in; power outlet issue; remote batteries dead.	Ensure power cord is securely plugged in. Check power outlet with another device. Replace remote control batteries (AAA required).
No heat from fireplace.	Heater function not activated; thermostat setting too low.	Activate the heater function via remote or control panel. Adjust thermostat to a higher setting.
LED lights not working.	LED power not connected; remote batteries dead.	Check LED power connections. Replace remote control batteries.
Stand feels unstable.	Uneven surface; loose assembly hardware.	Move to a flat, level surface. Retighten all assembly screws.

SPECIFICATIONS

- **Brand:** PRETZI
- **Model:** TVS-Brown-58
- **Product Dimensions:** 58" L x 15.75" W x 24" H
- **Material:** Engineered Wood
- **Weight Capacity:** 300 lbs
- **Fireplace Size:** 18 inches
- **Fireplace Heating Coverage:** Approximately 108 sq ft
- **Fireplace Power:** 1500W / 4800BTU
- **Flame Brightness Levels:** 5
- **Fireplace Timer:** 1-8 hours
- **LED Lights:** 16 colors, dynamic modes, adjustable brightness
- **Power Source:** Corded Electric
- **Assembly Time:** Approximately 1 hour (1-2 people)



Image: Dimensional drawing of the TV stand and its 18-inch electric fireplace insert.

WARRANTY AND SUPPORT

PRETZI is committed to providing high-quality products and exceptional customer service. If you have any questions, concerns, or require assistance with your Fireplace TV Stand, please contact our customer service team.

- **Customer Service:** Please refer to your purchase documentation or the PRETZI brand store on Amazon for contact information.
- **Response Time:** Our customer service team aims to respond to inquiries within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question