

[manuals.plus](#) /

› [SnapFresh](#) /

› [SnapFresh Cordless Electric Scissors EC0601 User Manual](#)

## SnapFresh EC0601

# SnapFresh Cordless Electric Scissors

Model: EC0601

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety warnings and instructions before operating this tool. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Keep Work Area Clean:** Cluttered areas invite accidents.
- **Avoid Dangerous Environments:** Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lit.
- **Keep Children Away:** All visitors should be kept at a safe distance from the work area.
- **Secure the Tool:** Always engage the safety lock switch before handling or storing the tool to prevent accidental activation.
- **Use Proper Blades:** Only use blades designed for this tool. Ensure blades are sharp and correctly installed.
- **Wear Appropriate Apparel:** Do not wear loose clothing or jewelry. Contain long hair.
- **Eye Protection:** Always wear eye protection when operating power tools.
- **Maintain Tool With Care:** Keep cutting tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories.
- **Unplug Before Servicing:** Disconnect the tool from the power source before making any adjustments, changing accessories, or storing.

## 2. PRODUCT OVERVIEW

The SnapFresh Cordless Electric Scissors (Model EC0601) is a versatile cutting tool designed for various materials. Its compact and ergonomic design ensures comfortable and efficient operation.

## Package Contents:

- 1 × 4V Rechargeable Scissor Unit
- 1 × Extra Blade
- 1 × Type-C Cable
- 1 × User Manual
- 1 × Blade Removal Pin

## Key Features:

- **High-Torque Motor:** Delivers efficient cutting performance.
- **Self-Sharpening SKS7 Alloy Blade System:** Ensures long-lasting sharpness.
- **Lightweight Design:** Weighs only 0.87 lbs for easy handling.
- **Ergonomic Handle:** Non-slip grip reduces hand fatigue.
- **Safety Lock Switch:** Prevents accidental activation.



Figure 2.1: SnapFresh Cordless Electric Scissors and included accessories.

### 3. SETUP

#### 3.1 Charging the Battery

The SnapFresh Cordless Electric Scissors is equipped with a rechargeable 4V battery. Before first use, fully charge the battery.

1. Locate the charging port at the bottom of the scissor unit.
2. Connect the provided Type-C cable to the charging port.
3. Connect the other end of the Type-C cable to a 5V/1A USB charger (not included) or a compatible USB power source (e.g., power bank, car charger, laptop/PC).
4. Allow the unit to charge until the indicator light shows a full charge.



Figure 3.1: Charging the electric scissors using a Type-C cable.

#### 3.2 Blade Installation and Replacement

The unit comes with one blade pre-installed and one extra blade. Follow these steps to replace the blade:

1. Ensure the tool is turned off and the safety lock is engaged.

2. Use the provided blade removal pin to loosen the screw securing the blade.
3. Carefully remove the old blade. It is recommended to wear gloves.
4. Place the new blade onto the spindle, ensuring it is properly aligned.
5. Tighten the screw with the blade removal pin until secure.
6. Reinsert the pin into its storage slot.



Figure 3.2: Steps for blade replacement.

## 4. OPERATING INSTRUCTIONS

### 4.1 Activating the Tool

1. Hold the electric scissors firmly by the ergonomic handle.
2. Locate the safety lock switch (often a small button or slider).
3. Press and hold the safety lock switch.
4. While holding the safety lock, pull the main trigger to activate the cutting blade. The blade will begin to rotate.
5. Release the safety lock switch once the blade is rotating, but continue to hold the main trigger during operation.

### 4.2 Cutting Various Materials

The SnapFresh Cordless Electric Scissors is designed to cut a variety of materials up to 1/4 inch thick, including:

- Cardboard
- Fabric
- Carpet
- Leather
- Paper
- Plastic Packaging
- Rope

To cut, gently guide the rotating blade along the desired cutting line. Apply steady, even pressure.

Avoid forcing the tool through thick or resistant materials.



Figure 4.1: Versatility of the electric scissors across different materials.

### 4.3 Demonstration Video

Video 4.1: Official SnapFresh demonstration of the mini cutter in action.

## 5. MAINTENANCE

### 5.1 Cleaning

After each use, ensure the tool is powered off and the safety lock is engaged. Use a dry cloth to wipe away any dust or debris from the blade and housing. Do not use harsh chemicals or abrasive cleaners.

### 5.2 Blade Care

The SKS7 alloy blade is self-sharpening. However, if cutting performance diminishes, replace the blade following the instructions in Section 3.2. Store spare blades in a safe, dry place.

## 6. TROUBLESHOOTING

- **Tool Not Turning On:**

- Ensure the battery is fully charged.
- Verify that the safety lock switch is pressed simultaneously with the main trigger.

- **Poor Cutting Performance:**

- Check if the blade is dull and needs replacement (refer to Section 3.2).
- Ensure the material being cut is within the 1/4 inch thickness limit.
- Clean any debris from around the blade.

- **Unusual Noise or Vibration:**

- Turn off the tool immediately.
- Inspect the blade for damage or improper installation.
- If the issue persists, contact customer support.

## 7. SPECIFICATIONS

<b>Brand</b>	SnapFresh
<b>Model</b>	EC0601
<b>Material</b>	Plastic (Housing), High Carbon Steel (Blade)
<b>Power Source</b>	4V Rechargeable Battery
<b>Max Cutting Thickness</b>	1/4 inch
<b>Item Weight</b>	1.34 pounds
<b>Charging Input</b>	Type-C Cable (5V/1A charger recommended)

## 8. WARRANTY AND SUPPORT

The SnapFresh Cordless Electric Scissors comes with a **1-year tool warranty** from the date of purchase.

For technical support, warranty claims, or any questions regarding your product, please contact SnapFresh Official customer service.

Email: [afterservice@snapfreshtools.com](mailto:afterservice@snapfreshtools.com)



*Figure 8.1: Warranty information and support contact.*

© 2024 SnapFresh. All rights reserved.