



Manuals.plus /

› NAVIFORCE /

› NAVIFORCE NF7104 Digital Sports Watch User Manual

NAVIFORCE NF7104

NAVIFORCE NF7104 Digital Sports Watch User Manual

INTRODUCTION

This manual provides detailed instructions for the NAVIFORCE NF7104 Digital Sports Watch. Please read this manual thoroughly to understand the watch's functions and ensure proper use and maintenance. The NF7104 features a digital display, a comfortable silicone strap, luminous mode for low-light conditions, and 5ATM water resistance.

PRODUCT OVERVIEW

The NAVIFORCE NF7104 is a digital sports watch designed for durability and functionality. It features a clear digital display, multiple modes, and a robust build suitable for various activities.



Image: Front view of the NAVIFORCE NF7104 Digital Sports Watch, displaying the digital time, date, and various indicators. The watch features an orange silicone strap and a black case with prominent buttons.



Image: Illustration showing the dimensions of the NAVIFORCE NF7104 Digital Sports Watch, indicating a case height of approximately 50mm, compared to a standard credit card.



Image: Rear view of the NAVIFORCE NF7104 Digital Sports Watch, showing the stainless steel case back with engraved brand logo, model number (NF7104), and water resistance rating (WR 5ATM).

SETUP

Strap Adjustment

The silicone strap is designed for comfort and durability. To adjust the strap, locate the buckle and the series of holes on the strap. Select the hole that provides a snug yet comfortable fit on your wrist. Ensure the watch is not too tight to avoid discomfort or too loose to prevent movement during activity.

Button Functions

The NF7104 watch features four primary buttons:

- **LIGHT:** Activates the backlight for illumination in dark conditions.
- **MODE:** Cycles through different watch modes (Time, Alarm, Stopwatch).
- **ST/STP (Start/Stop):** Used to start/stop functions in Stopwatch mode or adjust settings in setting modes.
- **RESET:** Used to reset values in Stopwatch mode or confirm settings in setting modes.

OPERATING INSTRUCTIONS

Time and Date Setting

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the setting items: seconds → hour → minute → month → date → day of week.
3. While an item is flashing, use the **ST/STP** button to adjust the value. Hold **ST/STP** to increase values rapidly.
4. Once all settings are complete, press the **MODE** button to exit setting mode and return to normal time display.

Alarm Setting

1. From the normal time display, press the **MODE** button once to enter Alarm mode.
2. Press the **RESET** button to select the hour digits. Use the **ST/STP** button to adjust the hour.
3. Press the **RESET** button again to select the minute digits. Use the **ST/STP** button to adjust the minute.
4. Press the **MODE** button to exit Alarm setting mode.
5. To activate/deactivate the alarm, press the **ST/STP** button while in Alarm mode. An alarm icon will appear/disappear on the display.

Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode. The display will show '00:00:00'.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to exit Stopwatch mode.

Luminous Mode (Backlight)

The NF7104 features a luminous mode for enhanced visibility in low-light conditions. To activate the backlight, press the **LIGHT** button. The LED light will illuminate the dial for a few seconds. This function is designed to be energy-efficient.



Image: The NAVIFORCE NF7104 Digital Sports Watch worn on a wrist, demonstrating its appearance during use. The digital display is clearly visible.

MAINTENANCE

Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

Water Resistance (5ATM)

The NF7104 watch has a 5ATM water resistance rating. This means it is suitable for daily use, splashes, rain, and short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Do not operate buttons while the watch is wet or submerged, as this can compromise the water resistance.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the display becomes dim or functions become erratic, it may indicate a low battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** Check if the battery needs replacement. If recently replaced, ensure it was installed correctly.
- **Time is inaccurate:** Re-set the time following the instructions in the 'Operating Instructions' section. If the issue persists, the battery may be low or the movement may require servicing.
- **Buttons are unresponsive:** Ensure the watch is not wet. If dry, try pressing firmly. If still unresponsive, there might be an internal issue requiring professional inspection.
- **Water inside the watch:** Immediately take the watch to a professional for inspection and drying to prevent further damage. Avoid exposing the watch to extreme temperature changes.

SPECIFICATIONS

Model Number	NF7104
Movement Type	Quartz
Case Diameter	45 mm
Band Material Type	Silicone
Water Resistance	5 ATM (50 meters)
Item Weight	59 Grams
Product Dimensions	13 x 12 x 12 cm (packaging)

WARRANTY INFORMATION

This NAVIFORCE NF7104 watch comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. The warranty typically covers manufacturing defects but does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear.

SUPPORT

For further assistance, technical support, or warranty claims, please contact the retailer where you purchased the watch or visit the official NAVIFORCE website for contact information. When contacting support, please have your watch model number (NF7104) and proof of purchase readily available.

