

[manuals.plus](#) /› [Mellerware](#) /› [Mellerware Manual Air Fryer Oven 23L 1700W "MaxiCrisp" User Manual](#)

Mellerware MaxiCrisp 23L 1700W

Mellerware Manual Air Fryer Oven 23L 1700W "MaxiCrisp" User Manual

Model: MaxiCrisp 23L 1700W

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Mellerware Manual Air Fryer Oven 23L 1700W "MaxiCrisp". Please read these instructions thoroughly before first use and retain them for future reference. The Mellerware MaxiCrisp is a versatile kitchen appliance designed to combine air frying and oven functionalities. It features a 23-liter capacity and 1700W power, enabling rapid heating and efficient cooking.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT FEATURES

- **Power:** 1700W for efficient cooking.
- **Capacity:** 23 Liters, suitable for various meal sizes.
- **Functions:** Combination of air fry and oven with 5 distinct functions.
- **Temperature Range:** Adjustable from 80°C to 230°C.
- **Timer:** 1-60 minutes with a "Stay on" option.
- **Material:** Durable Stainless Steel construction.
- **Safety:** Features Auto Shutoff.
- **Convenience:** Removable Pan for easy cleaning.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking:

- Mellerware Manual Air Fryer Oven Unit
- Bake Tray
- Tray Handle
- Wire Rack
- Air Frying Basket
- Rotisserie Fork
- Rotisserie Handle



Image: Front view of the Mellerware MaxiCrisp Air Fryer Oven with the air frying basket, wire rack, and bake tray visible inside.

SETUP

- Unpacking:** Carefully remove all packaging materials and accessories from the oven.
- Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance (at least 10 cm clearance on all sides). Do not place it near flammable materials or heat sources.
- Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all accessories (bake tray, wire rack, air frying basket, rotisserie fork, rotisserie handle) with warm soapy water, rinse thoroughly, and dry completely. All accessories are dishwasher safe.
- First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 200°C to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure the area is well-ventilated.
- Power Connection:** Ensure the power cord is fully extended and plug the appliance into a grounded electrical outlet.



Image: Front view of the Mellerware MaxiCrisp Air Fryer Oven with its door open, showing the interior cavity.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: Close-up of the function control knob, showing various cooking modes including Air Fry.

Function Knob: Selects the desired cooking mode (e.g., Air Fry, Bake, Toast, Broil, Rotisserie).



Image: Close-up of the temperature control knob, ranging from 80°C to 230°C.

Temperature Knob: Adjusts the cooking temperature from 80°C to 230°C.



Image: Close-up of the timer control knob, with settings from 1 to 60 minutes and a "Stay on" option.

Timer Knob: Sets the cooking time from 1 to 60 minutes. Includes a "Stay on" setting for continuous operation.

General Operation

1. **Prepare Food:** Place food on the appropriate accessory (bake tray, wire rack, or air frying basket).
2. **Insert Accessory:** Slide the accessory into the desired rack position inside the oven.
3. **Close Door:** Ensure the oven door is fully closed.
4. **Select Function:** Turn the Function Knob to the desired cooking mode (e.g., Air Fry for crispy results).
5. **Set Temperature:** Turn the Temperature Knob to the required cooking temperature.
6. **Set Timer:** Turn the Timer Knob to the desired cooking time. The power indicator light will illuminate. For continuous cooking, turn the timer past 60 minutes to the "Stay on" position.
7. **Cooking Process:** The oven will begin heating. For best results, some recipes may require shaking or turning food halfway through the cooking process.
8. **Completion:** When the timer reaches zero, a bell will sound, and the oven will automatically shut off (unless "Stay on" was selected).

9. **Remove Food:** Carefully open the oven door. Use the tray handle or oven mitts to remove the hot accessory and food.

Using the Rotisserie Function



Image: Interior view of the Mellerware MaxiCrisp Air Fryer Oven showing the rotisserie fork assembly in place.

1. **Assemble Rotisserie:** Slide the rotisserie fork onto the rotisserie spit, securing the food in place with the prongs.
2. **Insert into Oven:** Place the pointed end of the rotisserie spit into the drive socket on the right side of the oven. Rest the notched end on the left support.
3. **Select Function:** Turn the Function Knob to the rotisserie setting.
4. **Set Temperature and Time:** Adjust the Temperature and Timer Knobs as required for your recipe.
5. **Remove:** Use the rotisserie handle to safely remove the hot rotisserie assembly from the oven.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Mellerware Air Fryer Oven.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before

cleaning.

- Accessories:** All accessories (bake tray, tray handle, wire rack, air frying basket, rotisserie fork, and handle) are dishwasher safe. For manual cleaning, wash them in warm, soapy water, rinse, and dry thoroughly.
- Interior:** Wipe the interior walls of the oven with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used. Do not use abrasive cleaners or metal scouring pads, as they can damage the non-stick coating.
- Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- Crumb Tray:** Regularly remove and clean the crumb tray located at the bottom of the oven to prevent grease buildup and potential fire hazards.
- Storage:** Ensure the appliance is clean and dry before storing it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the timer knob to the desired cooking time or "Stay on" position.
Food is not cooking evenly.	Overcrowding the basket/tray; incorrect temperature/time setting.	Do not overcrowd the cooking area; cook in smaller batches if necessary. Adjust temperature and time according to recipe guidelines. Flip or shake food halfway through cooking.
White smoke coming from the appliance.	Grease buildup from previous use; high-fat food cooking.	Clean the interior and accessories thoroughly after each use. For high-fat foods, place a small amount of water in the drip tray to reduce smoke.
Food is not crispy.	Too much moisture; not enough oil (for air frying); overcrowding.	Pat food dry before cooking. Lightly coat food with oil for air frying. Ensure adequate space for air circulation.

SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model	MaxiCrisp 23L 1700W
Power / Wattage	1700 Watts
Capacity	23 Liters
Temperature Range	80°C – 230°C

Feature	Detail
Timer	1-60 minutes, with "Stay on" function
Functions	5 (Air Fry, Bake, Toast, Broil, Rotisserie)
Material	Stainless Steel
Colour	Black
Auto Shutoff	Yes
Item Weight	8.4 kg
Product Dimensions	41.3D x 37.8W x 38H centimetres



Image: Graphic indicating 1700W power output.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact Mellerware customer service. Retain your proof of purchase for warranty claims.

Mellerware is committed to providing reliable appliances. For more information, visit the official Mellerware website or contact their support channels.

Since 1986, Mellerware has delivered affordable, reliable appliances designed to make home life easier. From cooking to cleaning, our smart solutions combine technology, style, and real value, trusted by homes across South Africa.