

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE 6-Drawer Dresser Instruction Manual

WLIVE ASNG107ZX

WLIVE 6-Drawer Dresser Instruction Manual

Model: ASNG107ZX

IMPORTANT SAFETY INFORMATION

Read all instructions carefully before assembly and use. Keep this manual for future reference.

Anti-Tip Safety

This dresser is equipped with an anti-tip kit to prevent accidental tipping. It is crucial to install this device as instructed to ensure the safety of children and pets.

ANTI-TIP KIT



Figure 1: Anti-tip kit installation. Always secure the dresser to the wall using the provided anti-tip device to prevent tipping hazards.

Weight Capacity

Do not exceed the maximum weight capacity for drawers and the top surface. Each drawer is designed to hold up to 44 pounds, and the top surface can support up to 110 pounds. Overloading can compromise stability and cause damage.

PRODUCT SIZE

16"D x 59"W x 30"H



Figure 2: Product dimensions and weight limits. The dresser measures 15.75"D x 59.06"W x 30.04"H. Each drawer supports up to 44 lbs, and the top surface supports up to 110 lbs.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts and hardware are present. Refer to the included parts list in your packaging. If any items are missing or damaged, contact customer support.

SETUP: ASSEMBLY INSTRUCTIONS

Assembly of the WLIVE 6-Drawer Dresser typically requires two people and takes approximately 1 to 1.5 hours. Follow the detailed instructions and diagrams provided in your product packaging.

Tools Required

- Screwdriver (usually included)
- Hammer (optional, for dowels)

Assembly Steps Overview

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all parts using the provided labels and diagrams.
3. Assemble the main frame of the dresser according to the step-by-step instructions.
4. Install the drawer slides onto the dresser frame. Ensure they are correctly oriented for smooth operation.
5. Assemble each of the six drawers. Pay close attention to the orientation of the drawer bottom and sides.
6. Insert the assembled drawers into the dresser frame.
7. Attach the drawer handles.
8. Install the anti-tip kit to secure the dresser to a wall.

Note: Precise holes and coded parts are designed for accurate and faster installation.

SUPPORT PLATES

STRONGER LOAD CAPACITY



Figure 3: Drawer support plates. The drawers are reinforced with additional support plates at the bottom to enhance load-bearing capacity and ensure sturdiness.

OPERATING: USAGE

The WLIVE 6-Drawer Dresser is designed for versatile storage in various rooms, including bedrooms, living rooms, hallways, and closets.

Drawer Functionality


The six spacious drawers provide ample storage for clothing, accessories, linens, and other household items. The metal tracks are polished for smooth gliding, preventing drawers from easily pulling out or falling off.

AMPLE STORAGE SPACE

FOR HOME CLEAN & TIDY



Toys
30+

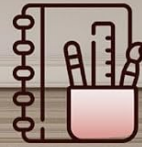

Stationery
90+



Snacks
50+



Diaper
80+



Clothes
80+



Socks
90+



Figure 4: Ample storage capacity. The dresser is designed to help keep your home clean and tidy by accommodating a large volume of items.

Top Surface Use

The wide top surface can be used to display decorative items, lamps, or as a stand for televisions up to 65 inches.



Figure 5: TV compatibility. The dresser's top surface is suitable for televisions up to 65 inches.

MAINTENANCE

Cleaning

To clean the dresser, simply wipe it with a dry cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.

Material Durability

The dresser is constructed from thickened engineering wood with a durable finishing layer, making it scratch-resistant, easy to clean, and water-resistant.

STURDY AND DURABLE MATERIALS



Figure 6: Sturdy and durable materials. The dresser's construction ensures longevity and ease of care.

General Care

- Periodically check all screws and fasteners to ensure they remain tight.
- Avoid placing hot items directly on the surface without protection.
- Keep the dresser away from direct sunlight and excessive humidity to prevent warping or fading.

TROUBLESHOOTING

Drawers do not slide smoothly:

Check if the metal tracks are properly aligned and free of obstructions. Ensure all screws securing the tracks are tightened.

Dresser feels unstable:

Verify that all assembly screws are fully tightened. Ensure the dresser is placed on a level surface. Re-check the installation of the anti-tip device.

Missing or damaged parts:

If you received a damaged box or found missing/damaged parts during assembly, contact WLIVE customer support immediately. Foam and wood protective boards are used in packaging to minimize transit damage.

SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model Name	ASNG107ZX
Product Dimensions	15.75"D x 59.06"W x 30.04"H
Color	Brown
Mounting Type	Floor Mount
Room Type	Bedroom, Closet, Hallway, Home Office, Living Room
Special Features	Easy assembly, Multifunction, Removable, Space Saving, Sturdy
Furniture Finish	Brown
Product Care Instructions	Wipe with Dry Cloth
Assembly Required	Yes
Item Weight	96.6 Pounds

WARRANTY AND SUPPORT

WLIVE is committed to customer satisfaction. If you have any questions or concerns regarding your dresser, please do not hesitate to contact our customer support.

Return Policy

This product is eligible for 30-day easy returns. Refer to your purchase documentation for full details.

Protection Plans

Extended protection plans are available for purchase to cover your product beyond the standard warranty. Options include:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)

For more information on protection plans, please refer to the details provided at the time of purchase or contact your retailer.

WLIVE for where we live.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question